

Table of Contents

6	Input Description.....	6.1-1
6.1	General information	6.1-1
6.2	Formats.....	6.2-1
6.2.1	Comments	6.2-1
6.3	User input description	6.3-1
6.3.1	General	6.3-6
6.3.2	Load control	6.3-8
6.3.3	Dynamic Modelling Parameters	6.3-18
6.3.4	Analysis Control Parameters	6.3-26
6.3.5	Numerical Procedure Parameters	6.3-30
6.3.6	Material/Plasticity Modelling.....	6.3-32
6.3.7	Member Modelling.....	6.3-37
6.3.8	Joint Modelling	6.3-47
6.3.9	Foundation Modelling	6.3-58
6.3.10	Fracture/Ductility Control	6.3-69
6.3.11	Fire(Temperature Response) Analysis	6.3-71
6.3.12	Ship Impact analysis.....	6.3-79
6.3.13	External pressure Effects.....	6.3-84
6.3.14	Super-element / Sub-structure Modelling	6.3-86
6.3.15	Miscellaneous.....	6.3-92
6.3.16	Hydrodynamics	6.3-100
6.3.17	Aerodynamics.....	6.3-124
6.3.18	Earthquake.....	6.3-131
6.4	Sesam structural File Format.....	6.4-1
6.4.1	Geometry Data	6.4-3
6.4.2	Connectivity Data.....	6.4-4
6.4.3	Cross Sectional Data	6.4-6
6.4.4	Element Data	6.4-11
6.4.5	Material Data.....	6.4-12
6.4.6	Boundary Conditions.....	6.4-14
6.4.7	Load and Temperature Increments	6.4-17
6.4.8	Hydrodynamic Added Mass.....	6.4-23
6.4.9	Nodes with point masses	6.4-24
6.4.10	Nodes with initial conditions.....	6.4-25
6.4.11	Super-element definition	6.4-26
6.5	UFO Structural File Format	6.5-1
6.5.1	Analysis identification.....	6.5-4
6.5.2	Nodal Data.....	6.5-4
6.5.3	Element Data	6.5-9
6.5.4	Cross Section Data	6.5-22
6.5.5	Material Data.....	6.5-26
6.5.6	Misc Data	6.5-32
6.5.7	UFO Examples	6.5-34

6 INPUT DESCRIPTION

USFOS reads input from symbolic files.

The user may give all input on one file, or distribute the data on two or three files. All control parameters are specified in the Analysis Control File. Structure data can also be read from this file, but is usually given on one or two separate files. The specific content of these files is not important, as long as all data are present. For convenience, these files are labelled "Structure file" and "Load file", cfr Figure 2.1.

These files may be written with a text editor, or generated by interactive preprocessor and load generation programs.

USFOS is currently adapted to the SESAM analysis system, and reads structure data and load data generated by the programs PREFRAME, WAJAC and WALOCO /3-5/.

The input records specific for USFOS nonlinear analysis are presented in Section 6.3. Structure input and load input are presented in Section 6.4.

6.1 GENERAL INFORMATION

The input data are organized in records, each record starting with a record identifier of four to eight characters. Each record may consist of one or more lines of data, terminating on the next record identifier. Each line may be **up to 132 characters long**. The data items may be integer or real data.

The data records may be given in an arbitrary order.

In this manual, each record is presented in a standard frame. Each frame represents either one single record or a sequence of similar records.

RECORD_IDENTIFIER Param_1 Param_2 Param_3 ... Param_n		
Parameter	Description	Default
Param_1	Description of 1st parameter	Default values if applicable
Param_2	Description of 2nd parameter	
Param_3	Description of 3rd parameter	
...		
Param_n	Description of n'th parameter	
Optional box for comments, notes, exceptions etc		

6.2 FORMATS

Nearly all input data are read by SAM/FII, a FORTRAN free-format reader and decoder. This means that the data items may be written anywhere on the line, **as long as the specified order is satisfied**. The data items must be separated with at least one blank (exceeding blanks are ignored). Note that blank is exclusively interpreted as a delimiter, and can not be used to specify a zero value as accepted by standard FORTRAN READ.

Important:

All digits, letters and/or special symbols in a data item must be given consecutively without blanks.

6.2.1 Comments

Lines with following characters in the first column are interpreted as comments, and are simply ignored. Comments may occur anywhere in the input data stream.

'
*

%
!

Example:

```
'THIS IS A COMMENT
# NOTE! COMMENTS ARE IGNORED BY THE PROGRAM
```

In-Line Comments:

The character ! may be used to terminate a data line, and data items on the rest of the line are just ignored.

Example:

```
#
#      Mat_ID  E-mod  poiss  F_yield  Density  therm.exp.
MISOIEP  1    2.10E+5  0.3    355      8235.7    0.0
MISOIEP  2    2.10E+5  0.3    340      8235.7    0.0  ! NEW 96-02-13
#MISOIEP  2    2.10E+5  0.3    300      8235.7    0.0  ! OLD 96-02-13
```

This is a useful option in connection with modification/correction of input files.

Alphanumeric Data Items

An alphanumeric data item may consist of one or more characters. The first character is always a letter (A-Z), while the remaining ones may be letters, digits or special symbols (except /, \$, & and blank).

There is no upper limit to the number of characters in an alphanumeric data item. However, only the first 8 characters will be decoded, and all characters in excess of this are simply ignored.

Integer Data Items

- All characters must be digits
- The first digit may be preceded by + or -

Example:

```
0      1      -27      +66
```

Real Number Data Items

Real numbers data entry may consist of up to 3 components, i.e. an integer part i, a decimal part d, and exponent part e. The following 4 basic forms are accepted:

(±)i (±)i. (±)i.d (±).d

These may all be combined with exponent parts yielding the forms:

(±)iE(±)e (±)i.E(±)e (±)i.dE(±)e (±).dE(±)e

Example:

```
0      +1.      -0.2E14+17.E-31.8E+3
```

Text Strings

Text strings may consist of one or more characters, which may be letters (A-z), digits or special symbols.

72 characters are stored in a text string, beginning at the 9th character of the line.

Example:

This text string uses special characters & \ #

and will be stored as

t string uses special characters & \ #

Numerical Operations on the Input

Some simple numerical operations is interpreted by the FII input reader. This means that the user may define mathematical expressions in the input, for example in order to scale parameters. The expressions are:

- Adding (+)
- Subtraction (-)
- Multiplication (*)
- Division (/)
- Trig (SIN(ang) and COS(ang), ang in radians)

Example 1, Scaling the yield stress:

```
MISOIEP 10 210000E6 0.3 355E6/1.15 7850 1.4E-5 ! Material coeff 1.15 (ULS)
```

Example 2, Adding value to coordinate :

```
`      ID      X      Y      Z
NODE  10      0.0    10.0+1.23  10.0 ! Add 1.23 to the Y-coordinate
```

Example 3, Create a loadvector (1MN) depending on angle (here 30 degrees)

```
`      lCase  NodID      Fx      Fy      Fz
NODELOAD    3      10    1.0E6*COS(30*PI/180)  1.0E6*SIN(30*PI/180)  0.0
```


Dynamic Modelling Parameters

Page 6.3-18

Structural damping - Rayley	RAYLDAMP	alpha1	alpha 2						
Structural damping - time dependent	DAMP RATIO	Ratio 1	Ratio 2	Freq1	Freq2	History			
Damping Parameters. General	DAMP DATA	Damp_ID	Type	(data)					
Element Damping	ELEMDAMP	Damp_ID	ListType	(ID-list)					
Mass formulation - lumped	LUMPMASS	rotmas							
Mass formulation - consistent	CONSIMAS								
System Damping Formulation Switch	SYSDAMP	Switch							
Initial velocity	INI_VELO	Type	Time	Vx	Vy	Vz	rVx	rVy	rVz
Dynamic result. Nodal data	DYNRES_N	Type	Node_ID			Dof	(Node_2		Dof_2)
Dynamic result. Element data	DYNRES_E	Type	Elem_ID			End	Dof	(opt)	
Dynamic result. Global data	DYNRES_G	Type							

Analysis Control Parameters

Page 6.3-26

Program parameters	CPPROPAR	epssol	gamstp	ifunc	pereul	ktmax	dentsw	cmax	ifysw	detersw
Switch off 2 Surface model	SURF2OFF									
Switch off Arc Length Control	ARC_OFF									
Switch off Determinant check	DETEROFF									
Local Dent Formulation	DENT_TYPE	type								
Switch off Local Dent formulation	DENT_OFF									
Override default max number of steps	CMASTEP	max_step								
Eigenvalue analysis	EIGENVAL	KeyWord		Value						
Bifurcation analysis	CBIFURC	idcomb	idstep	ibifsw						

Numerical Procedure Parameters

Page 6.3-30

Iteration control	CITER	cmin	cneg	itmax	isol	epsit	cmineg
Iteration control "Light Version"	LITER	itmax					
Control of repeated plastification/unloading	CUNFAL	max_on/off					
Time integration parameters	CDYNPAR	alpha	beta	gamma			
Predictor-corrector method	PCOR_ON						
Direct implicit time integration	PCOR_OFF						

Material/Plasticity Modelling

Page 6.3-32

Elasto-plastic material (beam-column)	MISOIEP	matno	E-mod	poiss	yield	density	term.exp
Control of cross section yield surface size	GBOUND	geono	z_y^m	z_b^m	z_y^c	z_b^c	
Nonlinear spring definition (spring property references)	MREF	matno	refx	refy	refz	refrx	refry refz
Elastic-to-plastic transition parameters and hardening parameters	MPLASMON	matno	c1	a1	c2	a2	c3 a3
Elastic-to-plastic transition parameters and and hardening parameters	MPLASCYC	matno	c1	a1	c2	a2	c3 a3
			c4	a4	c5	a5	c6 a6

Member Modelling

Page 6.3-37

Control of plastic hinges in members	CELHINX	elnox	ihin1	ihin2	ihinmid				
Control of plastic hinge (alt. input)	PLASTHIN	ihin1	ihin2	ihinm	elnox1	elnox2			
Internal Hinge of Beam Elements	BEAMHING	ix1	iy1	iz1	irx1	iry1	irz1		
		ix2	iy2	iz2	irx2	iry2	irz2	elnox1 elnox2	
Define member initial imperfection groups	GIMPER	impgrp	impshpe	angle	offset	dent1	dent2	dentmid	
Assign initial imperfection to member	GELIMP	elnox	impgrp						
Linear dependencies/ Shim elements	BLINDP2	insl	iem	ix	iy	iz	irx	iry	irz
Non-structural members	NONSTRU	ListType			[List]				
Structural members (override NONSTRU)	STRUCTEL	ListType			[List]				
Linear Elements	LIN_ELEM	Form	ListType		[List]				
Beam type definition	BEAMTYPE	Type	ListType		[List]				
Analysis Calibration - Initial deformations	CINIDEF	Size/ColumnCurve			Pattern		LoadCase		
Initial deformation from Eigenvalue analysis	BuckMode	EigenMode no			Scale Factor				
Grouted Members	Grouted	GroutMatID	ListType		{ IDList }				
Local Element Transformation Update	ElmTrans	Type	nod/end	ListType	{ IDList }				

Joint Modelling

Page 6.3-47

Joint flexibility	SHELL	nodex	elnox1	elnox2	d	t	
Overlapping braces at joint with local flexibility specified	OVERLAP	nodex	elnob1	elnob2			
Joint capacity check - minimum input	CHJOINT	nodex	elnox1	elnox2	geono		
Joint capacity check - extended input	CHJOINT	nodex	elnox1	elnox2	geono	CapRule	
		alpha1	alpha2	alpha3	alpha4	alpha5	nbraces
		brace1	axial	torsion	Mipb	Mopb	
		brace2	axial	torsion	Mipb	Mopb	
		:	:	:	:	:	
		bracen	axial	torsion	Mipb	Mopb	
Joint capacity check – MSL char.	CHJOINT	nodex	elnox1	elnox2	geono	CapRule	CapLevel
Surface Size for Joints	JSURFSIZ	Size_Y	Size_B	elnox1	nodex2	...	Q _f
User Defined Joint Gap	JOINTGAP	Gap	NodeID	(brace1	brace2	..)	
Joint Capacity Formulation	JNT_FORM	form_no		{ NodeID_List }			
Joint Classification Interval	JNTCLASS	interval					
Control of plastic hinges at nodes	CNOHINX	nodex	hinmx				

Foundation Modelling

Page 6.3-58

Spudcan element	SPUDMAT	matno	Type						
	MSPUD	matno	R	β	γ	ϕ	c		
		v	V _{pre}	G _V	G _H	G _R	YFSW		
		C ₈							
Pile elements	PILE	ID	Node1	Node2	Soil_ID	Pile Mat			
		Pile Geo		Local_coord		Imper			
Pile geometries (Single Pile)	PILEGEO	ID	Type	Do	T				
Pile geometries (Pile Group)	PILEGEO	ID	Type	Do	T	nPile	y_loc ₁	z_loc ₁	
							y_loc ₂	z_loc ₂	
									
							y_loc _n	z_loc _n	
Depth varying Pile Diam. and Thickn.	PILE_D-T	ID	Z_Mud	Z_top ₁	Z_bot ₁	(Do T) ₁			
				Z_top ₂	Z_bot ₂	(Do T) ₂			
									
				Z_top _n	Z_bot _n	(Do T) _n			
Depth varying Soil Diam.(override default)	SOILDIAM	ID	Z_Mud	Z_top ₁	Z_bot ₁	(Do Dummy) ₁			
				Z_top ₂	Z_bot ₂	(Do Dummty) ₂			
									
				Z_top _n	Z_bot _n	(Do Dummy) _n			
Soil characteristics	SOILCHAR	ID	Type	Z_Mud	D_ref	F_fac	L_fac	Z_top ₁	Z_bot ₁ <Data> ₁
								Z_top ₂	Z_bot ₂ <Data> ₂
								Z_top ₃	Z_bot ₃ <Data> ₃
									
								Z_top _n	Z_bot _n <Data> _n
Nonlinear Soil Spring Model	SPRI_MOD	model							
Spring Damping (Dashpot)	SPRIDAMP	DoF	C	Elem_1	Elem_2.....				
Automatic calculation of P-Y, T-Z and Q-Z	API_SOIL	ID	Soiltype	LoadType	{Data}				

Fracture/Ductility Control

Page 6.3-69

Fracture check switch	CFRACT						
Fracture criterion definition	MFRACT	matno	crit-ctod	σ_u	ϵ_u	ϵ_{sa}	
User defined member fracture	USERFRAC	elnox	Type	<Crit.>			

Fire(Temperature Response) Analysis

Page 6.3-71

Member temperature fields	BELTEMP	llc	elnox	t ₀	t _{ygrad}	t _{zgrad}	(PFPCrackAng)
Member temperature fields	ELEMTTEMP	llc	type	[data_set]	iel1	iel2	iel3
Temperature fracture check switch	CTFRACT						
Temperature fracture criterion definition	TFRACT	matno	T-fract	Sy-fract	E-fract		
Temperature dependent material properties,							
- steel	STEELTDEP	curve_no		mat no 1	mat no 2		
- aluminum	ALUMTDEP	curve_no		mat no 1	mat no 2		
- user-defined reduction curve	TDEPFUNC	curve_no		type	[Data]		
- user-defined material	USERTDEP	mat_no dep_E		dep_yield	dep_plasticdep_exp.		
Load-case vs. time definition	LCASETIM	l_case	time				
Fire Collapse check	FIRECHK	LCase_Chk		YieldRed		ERed	TempLim

Ship Impact analysis

Page 6.3-79

Ship impact	BIMPACT	ldcs	elnox	elpos	energy	extent	xdir	ydir	zdir	ship
Ship indentation characteristics	MSHIP		ship	p1	p2	p3	d1			
Dynamic ship impact	DYNIMPCT	ldcs	elnox	elpos	V _{ship}	Mass	xdir	ydir	zdir	
					NL _{ship}			Time		
Multiple impact Switch	MULT_IMP									

External pressure Effects

Page 6.3-84

External hydrostatic pressure	EXTPRES	elnox1	elnox2	elnox3	
Sea surface elevation	SURFLEV	hisurf	losurf	density	gravity

Super-element / Sub-structure Modelling

Page 6.3-86

Super elements	SUPERELM	Elem	ID	nNodes	Nodex_1	Nodex_2
			Nodex_n		Material	
Sub-structure analysis	SUBSTRU	Matno				
Shell sub-structure generation	SUBSHELL	Elem_ID				
Shell sub structure load	SSH_LOAD	Lcase	Elem_ID	Fx Fy Fz Typ	Xc Phi_c ExtentX	ExtentArc
Define mesh density for pipe	MESHPIPE	nLength	nCirc			ElemID(s)
Define mesh density for box	MESHBOX	nLength	nSide	nTop nBott		ElemID(s)
Define mesh density for I/H profile	MESHIPRO	nLength	nWeb	nTop nBott		ElemID(s)

Miscellaneous

Page 6.3-92

'Mating' analysis/activation of members	ACTIVELM	ListType	l_case	elnox1	elnox2	
Total load -> Incr. load preprocessing	TOTL2INC	lc-start	lc-end			
Distributed load in local element system	COROLOAD	I_Case	Elem_1	Elem_2		
Sliding Interface (contact search)	SI	Type nMst nSlv	{ Mst ID's }	{ Slv ID's }		
Make non-linear springs invisible	* INVISIBLE	ListType	Id_1	Id_2		
Element Group definition	GROUPDEF	GroupID	ListType		[List]	
Add node(s) to a given group	GROUPNOD	GroupID	Nod_1	Nod_2		Nod_n
Redefine element material	CHG_MAT	MatID	Typ	{ID list}		
Redefine boundary conditions	CHG_BOUN	ix iy iz irx iry irz	Typ	{ID list}		
Special Switches	SWITCHES	KeyWord	SubKey	{ Value }		

Hydrodynamics

Page 6.3-100

Wave Definition	WAVEDATA	l_case	type	height	period	dir	phase	surflev X1 ... Xn	depth n f1 ... fn.
Current depth-profile	CURRENT	l_case	speed	dir	surflev	depth		Z1 ... Zn	f1 ... fn.
Current <i>time</i> dependency	CURRHIST	Time_1	f1	...	...	Time_n	fn.		
Account for relative velocity	REL_VELO	nAvg							
Print of waveloads	WAVCASE1	l_case1	iTotal						
Marine Growth profile	M_GROWTH	Z1	Add	T1	Z2	Add	T2		
Definition of Cd and Cm element by elem	HYD_CdCm	Cd	Cm	Elm_1	Elm_2				
Defining Cd by depth profile	HYDRO_Cd	Z1	Cd1	Z2	Cd2				
Defining Cm by depth profile	HYDRO_Cm	Z1	Cm1	Z2	Cm2				
Wave Kinematics Reduction Factor	Wave_KRF	Factor							
	Wave_KRF	Factor	ListType	ID's					
	Wave_KRF	Factor	Profile....						
Buoyancy Switch	BUOYANCY	l_case	Write						
Flooded Members	FLOODED	Elm_1	Elm_2	Elm_3					
	FLOODED	ListType	ID's ...						
Wave load preprocessing	MAXWAVE	Criterion	dT	EndT	Write				
	MAXWAVE	Keyword	LoadCase(s)						
Wavel load scaling (due to units)	WAVMXSCL	Scale							
Switch ON hydro checking for all elem	WET_ELEM	All							
Wave load integration points	WAVE_INT	NIS	Elem_1	Elem_2	Elem_3				
	WAVE_INT	NIS	ListType	ID's					
	WAVE_INT	NIS	Profile....						
Current Blockage Factor	CURRBLOC	Type	[Data]						
	CURRBLOC	Profile....							
Buoyancy History	BUOYHIST	HistID	ListType	{IDlist}					
Buoyancy Formulation	BUOYFORM	Form	ListType	{IDlist}					
Internal Fluid / Free Surface Calculation	INTEFLUID	Density	FillTyp	HistID	ListType	{IDlist}			
Spooll Irregular Wave to Peak	SPOOLWAV	TimeBeforePeak	Order	dT	StormLength	Crit			
Non Hydrodynamic Elements	NONHYDRO	ListType	{IDlist}						
Hydrodynamic Parameters (Powerful)	HYDROPAR	KeyWord	Value	ListType	{IDlist}				

Aerodynamics

Page 6.3-124

Wind Definition New Syntax	WINDFIELD	l_case	Type	Ux	Uy	Uz	Zo	Zbott	Rho	power
Wind History	WINDHIST	DOF	Hist_ID							
Wind Cross Sect Basic Coefficients	W_COEFFS	ID	Type	{ Data }						
Wind Cross Sect Coefficients. Combine	W_COEFFS	ID	Combine	ID_drag	ID_lift	ID_mom				
Assign Coefficients.to Element	ELMCOEFF	ID	ListType	IDs						
Wind Definition Old syntax	WINDFIELD	l_case	T_ini	Z_bott	U10	power	rho	WO_x	WO_y	WO_z
						alpha	beta	gamma	n_ini	
Aerodynamical parameters for cross sections	WINDPAR	GeoID	Type	height	width	np_t	np_d	np_l	np_m	
						Ct				
						Cd				
						Cl				
						Cm ...				
Compute Max Wind	MAXWIND	Criterion	dT	EndT	Write					
Max Wind options	MAXWIND	Keyword	lCase .							

Earthquake

Page 6.3-131

Prescribed nodal displacement	NODEDISP	l_case	dof_code	[Prescribed values for the dofs]						
Prescribed nodal velocity (dynamic only)	NODEVELO	l_case	dof_code	[Prescribed values for the dofs]						
Prescribed nodal acceleration (dynamic only)	NODEACC	l_case	dof_code	[Prescribed values for the dofs]						
Prescribed Soil displacement	SOILDISP	l_case	Type(=2)	Pile_ID	dof_code	[values for the dofs]				
Prescribed Soil acceleration (dynamic only)	SOILACC	l_case	Type(=1)	z_Top	z_Bott	dof_code	[values for the dofs]			

6.3.1 General

HEAD	1st line of text identifying the analysis 2nd line of text identifying the analysis 3rd line of text identifying the analysis
Character 9 to 80 from each line are stored as text strings	
This record (of three lines) is given only once	

CPRINT inprint outprint termprint		
<i>Parameter</i>	<i>Description</i>	<i>Default</i>
inprint	Code to specify amount input verification print 0: Analysis identification, Key parameters and Load control data 1: + Structural data 2: + Input load data 3: + Calculated load data (i.e. gravity) 4: + Ecco of unprocessed input data 5: + Internal FEM parameters	1
outprint	Code to specify amount of analysis print-out 0: Global history output 1: Results of each load step. Control node displacements Status of heavily stressed elements ($\Gamma > -0.20$) 2: + Status of heavily stressed elements ($\Gamma > -0.50$) 3: + Status of all elements ($\Gamma > -1.00$) 4: + All nodal displacements	2
termprint	Code to specify output to terminal / batch log file 0: Screen output adapted to interactive running 1: Output adapted to batch running. The global history output is written to the batch log file	1
This record controls the amount and format of print to terminal and to the Analysis Print File (Sect 8.1)		
The data available for post-processing are unaffected by this record		
This record is given only once		

CSAVE n m k		
Parameter	Description	Default
n	Restart data is stored every "n'th" load step of each load case/combination	0
m	Result data is stored every "m'th" load step of each load case/combination	-10
k	Result data is printed at the 'out-file' every "k'th" step of each load case/combination	1
This record is used to specify storage of restart and result data If this record is skipped, restart + result data are stored for every step If $n = 0$ then no restart data will be stored If $n = -i$ then restart data will be stored every i'th step plus at the end of each load specification, (CUSFOS/CICYFOS-line) If $m = 0$ then no result data will be stored If $m = -j$ then result data will be stored every j'th step plus at the end of each load specification, (CUSFOS/CICYFOS-line) If $k = 0$ then no result data will be printed at the out-file If $k = -k$ then result data will be printed every k'th step plus at the end of each load specification, (CUSFOS/CICYFOS-line) NOTE ! In connection with dynamic analysis the parameters n, m and k are 0/1 switches. The time increment between result saving is controlled on the DYNAMIC record. By default the switches are set to [0 1 1]. This record is given only once.		

XFOSFULL		
Parameter	Description	Default
	If this record is specified, (no parameters), <u>all</u> available data are stored on the raf-file for inspection by XACT. By default, (to save disc space), some result types are not stored.	
With this record the user may specify that all available result data should be stored on the raf-file. This record is given once.		

6.3.2 Load control

CUSFOS				
nloads	npostp	mxpstp	mxpdis	
lcomb	lfact	mxld	nstep	minstp
lcomb	lfact	mxld	nstep	minstp
:	:	:	:	:
:	:	:	:	:
lcomb	lfact	mxld	nstep	minstp

Parameter	Description	Default
nloads	Number of load specifications (lcomb+lfact+mxld+nstep+minstp). Used in connection with restart of analyses (Sect 4.7)	
npostp	Number of load steps in the post collapse range	
mxpstp	Max load step size in the post collapse range	
mxpdis	Max incremental displacements in the post collapse range. Suggested value is 1.0	
lcomb	Load combination or load case number	
lfact	Load factor. Size of the initial (unscaled) load increment specified as a factor of the reference load	
mxld	The current load vector is repeated until the accumulated load reaches the relative load level <i>mxld</i> , specified as a factor of the reference load	
nstep	... OR until the current load vector has been incremented <i>nstep</i> times. Both <i>mxld</i> and <i>nstep</i> may be specified at the same time; the load is incremented until either of the conditions are satisfied. For a zero value of <i>mxld</i> or <i>nstep</i> no test of upper limit is performed	
minstp	Minimum load increment for automatic load step scaling. Specified as a fraction of the total load combination or load case. (Not multiplied by <i>lfact</i>). Suggested value is 0.001* <i>mxld</i> , where <i>mxld</i> is the maximum of the <i>mxld</i> 's within the actual load combination	

This record is used to specify the loading history, with load and displacement control parameters (Sect 4.1 and Sect 4.2.2)

Note! In a restart analysis the load history up to the step from which calculations resumes must NOT be included in the CUSFOS record

This record is given only once and no default values exist

CICYFOS						
	nloads	npostp	mxpstp	mxpdis		
	lcomb	lfact	mxld	mxdisp	nstep	minstp
	lcomb	lfact	mxld	mxdisp	nstep	minstp
	:	:	:	:	:	:
	:	:	:	:	:	:
	lcomb	lfact	mxld	mxdisp	nstep	minstp
Parameter	Description					Default
nloads	Number of load specifications (lcomb+lfact+mxld+nstep+minstp). Used in connection with restart of analyses (Sect 4.7)					
npostp	Number of load steps in the post collapse range					
mxpstp	Max load step size in the post collapse range					
mxpdis	Max incremental displacements in the post collapse range. Suggested value is 1.0					
lcomb	Load combination or load case number					
lfact	Load factor. Size of the initial (unscaled) load increment specified as a factor of the reference load					
mxld	Max load level for current load vector (Sect 4.1)					
mxdisp	Max total displacement for current load vector					
nstep	Max number of load steps for current load vector					
minstp	Minimum load increment for automatic load step scaling. Specified as a fraction of the reference load combination or load case. Suggested value is 0.0001 <i>mxld</i> , where <i>mxld</i> is the max in the actual load combination					
This record is used to specify the loading history, with load and displacement control parameters (Sect 4.1 and Sect 4.2.2). The current load vector (Sect 4.1) is incremented until the accumulated load reaches the load level defined by <i>mxld</i>, OR until the total displacement reaches the displacement level defined by <i>mxpdis</i>, OR when the load vector has been incremented <i>nstep</i> times If a zero value is given for one (but not all) of the <i>mxld</i>, <i>mxdisp</i> or <i>nstep</i> parameters, that parameter is disregarded To run an input check simply specify zero values for both <i>mxld</i>, <i>mxdisp</i> and <i>nstep</i>. That is, the specified load vector will be incremented zero times <i>Note!</i> In a restart analysis the load history up to the step from which analysis resumes must be excluded. This record is given only once and no default values exist						

COMBLOAD Comb_Case L_Case₁ Factor₁ L_Case₂ Factor₂ L_Case₃ Factor₃ L_Case_n Factor_n		
Parameter	Description	Default
comb-case	The result of the combination is collected in a load case with number (ID) = Comb_Case. This case is referred to in USFOS (CUSFOS or LoadHist). Original definition of this case (if any) is override.	
L_case ₁	First Load_Case contributing to the combination.	
Factor ₁	The loads in this load_case are multiplied with Factor ₁ etc.	
With this record, the user defines a load combination to be generated and referred to in a USFOS analysis. This option replaces the old ccomb option, (which had limitation on number of cases and no individual scaling available). <u>Example:</u> <pre> ' COMBLOAD New Case OldCase Factor 3 4 1.3 3 3 2.0 10 0.7 13 -0.55 </pre> Generates a new load case 3 as follows: $I\_case3 = (I\_case4 * 1.3 + I\_case3*2.0 + I\_case10*0.7 - I\_case13 *0.55)$ The original loads, (case 4, 3, 10 and 13), are cleared after all combinations are processed. NOTE! This option should be used for basic loads only (NodeLoad, BeamLoad, Pressure, Gravity). This record may be repeated.		

CCOMB lcomb ldc1 ldc2 ldc3		
<i>Parameter</i>	<i>Description</i>	<i>Default</i>
lcomb	Load combination number	
ldc1	First loadcase to enter the load combination	
ldc2	Second loadcase to enter the load combination	
ldc3	Third loadcase to enter the load combination	
This record is used to combine input load cases into load combinations. In nonlinear analyses, the load responses may NOT be superposed. Any superposition must apply to the loads themselves (Sect 4.1) If no CCOMB records are given, the program will use the input load case numbers. However, if this record is used once, then all load specification will refer to load combination numbers and not to input load case numbers This record may be repeated <i>Note!</i> Maximum 3 loadcases per load combination NOTE 2!! This command should be replaced by the new CombLoad option.		

CNODES		
ncnodes		
nodex	idof	dfact
:	:	:
nodex	idof	dfact

Parameter	Description	Default
ncnodes	Number of load control nodes. Used in connection with restart analyses (Sect 4.7)	
nodex	External (user-specified) number of control node	
idof	Global degree of freedom to be used in the control displacement 1: X - displacement 2: Y - displacement 3: Z - displacement	
dfact	Weight factor of the specified DOF	

This record is used to specify the Control Displacement of the structure. The Control Displacement is calculated as a balanced average of the specified DOF's multiplied with their respective weight factors (Sect 4.2.2)

Also, the global displacements of these nodes are printed to the Analysis Control File (outprint > 0) (Sect 8.1.4)

If only print is required at selected nodes, the nodes may be specified with *dfact* = 0.0
This record is given only once

STATIC											End_Time	Delta_T	dT_res	dT_term	mxdisp	nstep	minstp									
Parameter		Description													Default											
End_Time		Continue the static analysis with the specified time increment to the specified 'End_Time' is reached.																								
Delta_T		Time (load) increment to be used until 'End_Time' is reached.																								
dT_res		Time between saving of results on the 'raf'-file													10*D_T											
dT_term		Time between print to terminal													D_T											
mxdisp		Max total displacement													0.0											
nstep		Max number of steps													0											
minstp		Minimum load increment													0.001											
This record is used to specify static initialization of a dynamic analysis with all loading controlled through time. NOTE ! This option should be used only when the structure responds almost <i>linearly</i> (without yielding / step scaling) and <i>should not</i> be used for pushover analysis. <u>Example:</u> <table><tr><td>STATIC</td><td>1.0</td><td>0.100</td><td>0.50</td><td>0.1</td></tr><tr><td>DYNAMIC</td><td>10.0</td><td>0.020</td><td>0.50</td><td>0.1</td></tr></table> means that the first second is used to apply f.inst deadweight loadcases with no inertia effects accounted for. From time = 1.0 the analysis is transferred to an ordinary dynamic analysis. Mxdisp is not defined which means that this criteria is not active. Nstep is not defined which means that an 'infinite' number of steps could be used to reach time=1.0. Minimum step size is 0.001. This record may be repeated.																	STATIC	1.0	0.100	0.50	0.1	DYNAMIC	10.0	0.020	0.50	0.1
STATIC	1.0	0.100	0.50	0.1																						
DYNAMIC	10.0	0.020	0.50	0.1																						

DYNAMIC					End_Time	Delta_T	dT_res	dT_term
Parameter	Description							Default
End_Time	Continue the dynamic analysis with the specified time increment to the specified 'End_Time' is reached.							
Delta_T	Time increment to be used until 'End_Time' is reached.							
dT_res	Time between saving of results on the 'raf'-file							10*D_T
dT_term	Time between print to terminal							D_T

This record is used to specify dynamic analysis with all loading controlled through time. This record may be repeated.

Example:

DYNAMIC	0.1	0.001	0.10	0.1
DYNAMIC	1.0	0.010	0.50	0.1
DYNAMIC	10.0	0.020	0.50	0.1

means that the dynamic analysis is started with a time increment of 0.001s which is kept until time = 0.1s is reached. Then the time increment is increased to 0.010s which again is changed to 0.020 at time 1.0. The analysis will terminate at time = 10.0s.

Terminal print is updated each 0.1'th second, and results are saved each 0.5'th second.

In connection with the DYNAMIC option, the global step counter is updated each time the results are saved, and the limitation of maximum steps (ref CMAXSTEP record) is affected by the total number of steps **saved** only. In the example, the total number of saved steps is 1+2+18=**21** (default maximum steps to be saved is 512).

However, total number of (internal) analysis steps is: 100+90+450 = 640.


Reduced saving of results reduces both the disc space requirements and the cpu time.

TIMEHIST histno Points time1 factor1 time2 factor2 ...	
Parameter	Description
histno	Time history number (user defined ID)
type	Time Hist Type = 1 (discrete points)
time1	time (seconds)
factor1	Scale factor 1
time2	time (seconds)
factor2	Scale factor 2

With this record, the user specifies a time history by discrete points.

Values between the tabulated points are interpolated, values outside the specified range are extrapolated as indicated in the figure below.

This record may be repeated.

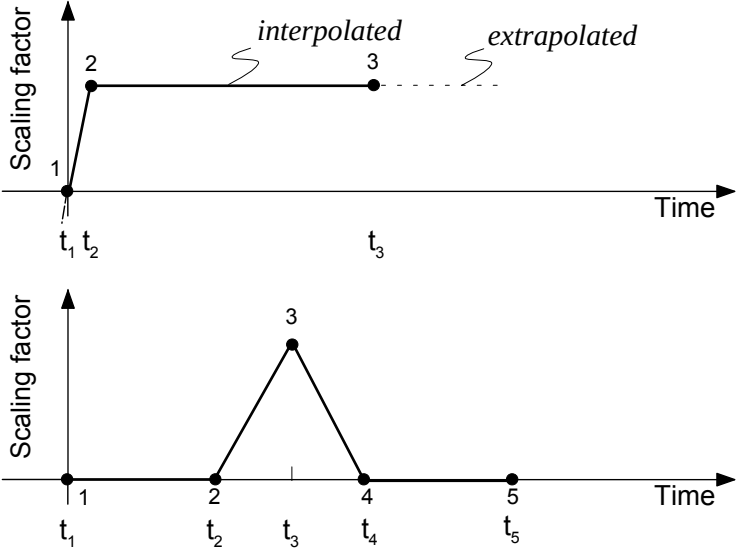


TIMEHIST histno Switch dTime factor Tstart	
Parameter	Description
histno	Time history number (user defined ID)
type	Time Hist Type = 3 (switch)
dTime	Time between calculation of forces, (see WAVEDATA). dTime=0 means that loads are calculated every analysis time step.
factor	Forces calculated from wave/current/wind are multiplied with this factor (default=1.0)
Tstart	Time for switching ON the actual environmental load (default Tstart=0)

With this record, the user specifies a time history used to control the time for applying the wave/current/wing loads. The time between recalculation of the forces is controlled in this command as well as force scaling factors.

This record may be repeated.


TIMEHIST histno S_Curve T1 T2 (factor power)		
Parameter	Description	Def
histno	Time history number (user defined ID) Time Hist Type = 4 (s_Curve)	
type		
T1	Time for activation this history. (Curve value = Zero for time < T1)	
T2	Time for full value . (Curve value = Factor for time > T2)	
factor	Actual curve value for time > T2	1
power	power= 1 : Linear curve (straight line) from T1 to T2 power = 2 : Second order (s-shaped) curve from T1 to T2 power = 3 : 3 rd order (s-shaped) curve from T1 to T2	2

With this record, the user specifies a time history used to control the time for applying for example deadweight and buoyancy gradually.

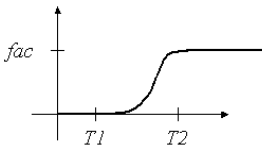

This record may be repeated.


TIMEHIST histno ConstInc dTime Fac1 Fac2 Facn ...	
Parameter	Description
histno	Time history number (user defined ID)
type	Time Hist Type = ConstInc (type 6)
dTime	The <u>constant</u> time increment between the tabulated values
Fac 1	Scale factor 1
Fac 2	Scale factor 21
Fac n	Scale factor n
With this record, the user specifies a time history by discrete points, where the time between each point is <i>constant</i>. (This is a special version of the "Points" time history type) and is recommended for extreme long time series, (reduced memory requirement and faster simulation). Values between the tabulated points are interpolated, values outside the specified range are extrapolated.. This record may be repeated.	

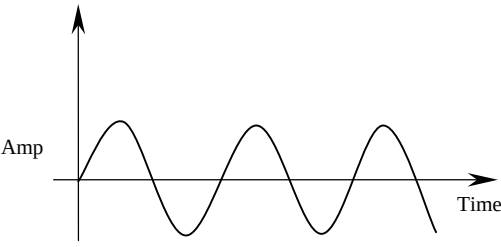TIMEHIST histno Sine Amp Period Phase (tStart nPer)		
Parameter	Description	Def
histno	Time history number (user defined ID) Time Hist	
type	Type = 2 (Sine Function)	
Amp	Aplitude	
Period	Perod	
fPhase	Phase (degrees)	
tStart	Start time for sine function. (Function value = 0 for T < tStart)	0
nPer	Number of Periods to apply	∞
With this record, the user specifies a time history following a sine function.  This record may be repeated.		

LOADHIST L_Case Time_Hist		
Parameter	Description	Default
L_Case	Loadcase number of the load vector(s) to be activated according to the specified 'Time History'.	
Time_Hist	Time History ID which is used to scale the specified loadvector(s).	
This record is used to specify the loads to be activated during a dynamic analysis with all loading controlled through time. The different time histories defines when the loads connected to these time histories should be activated/scaled/deactivated. The loadvectors are multiplied, (scaled) with the actual time history scaling factor at the time. If the scaling factor is 0, the actual load is not activated, (see 'TIMEHIST' definition). This record may be repeated. Example: <pre>LOADHIST 1 10 LOADHIST 5 10 LOADHIST 7 1000</pre> means that both loadvectors 1 and 5 are activated according to time history with ID = 10 while loadvector 7 is controlled through time history 1000.		

INI_TIME Time		
Parameter	Description	Default
Time	Initialization time.	0.0
This record is used to specify an initialisation phase used f ex in connection with analyses of slender structures. The "USFOS clock" is reset to zero when the time is reached, together with the structural displacements, which also are set to zero. The initialisation phase is removed from the result file (raf file), and the initialised position becomes the un-deformed reference position. This record is given once.		

6.3.3 Dynamic Modelling Parameters

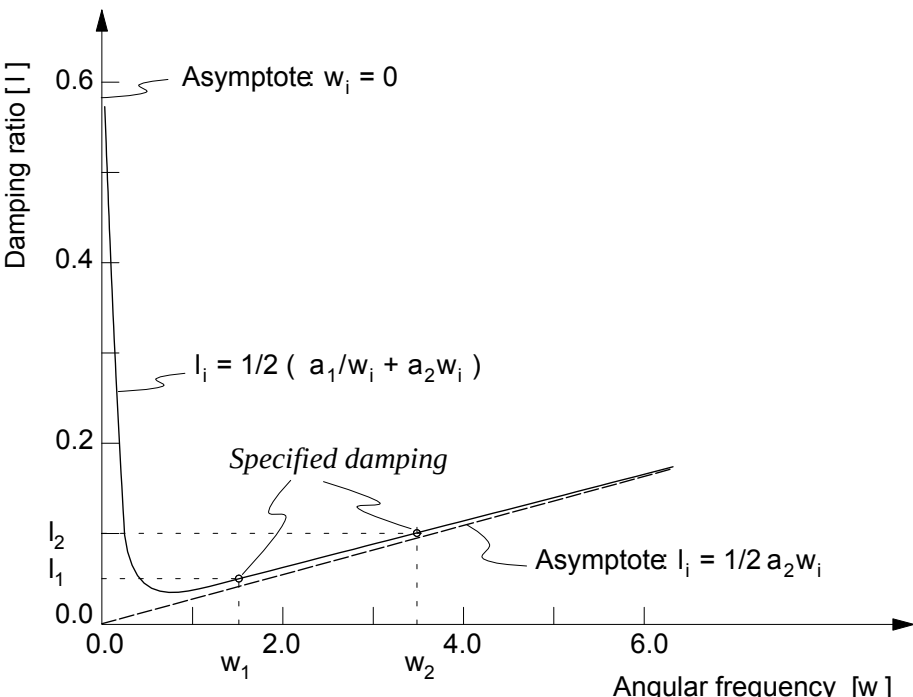RAYLDAMP alpha1 alpha 2		
Parameter	Description	Default
alpha1	Mass proportional damping coefficient	
alpha2	Stiffness proportional damping coefficient	
This record is used to control structural damping according to the Rayleigh damping model If the damping ratio is known for two individual structural frequencies, the damping parameters may be chosen as follows: $\alpha_1 = \frac{2 \omega_1 \omega_2}{\omega_2^2 - \omega_1^2} (\lambda_1 \omega_2 - \lambda_2 \omega_1)$ $\alpha_2 = \frac{2 (\omega_2 \lambda_2 - \omega_1 \lambda_1)}{\omega_2^2 - \omega_1^2}$  The graph plots Damping ratio [I] on the y-axis (0.0 to 0.6) against Angular frequency [w] on the x-axis (0.0 to 6.0). A solid curve represents the damping ratio, which starts at a high value for low frequencies and decreases towards a minimum. Two dashed lines represent asymptotes: one horizontal line at I_i = 1/2 (a₁/w_i + a₂w_i) and one diagonal line at I_i = 1/2 a₂w_i. Two points on the curve are marked with circles and labeled w₁ and w₂ on the x-axis, with corresponding I₁ and I₂ on the y-axis. A label 'Specified damping' points to the curve between these two points. A label 'Asymptote: w_i = 0' points to the y-axis intercept of the horizontal asymptote.		

DampRatio Ratio_1 Ratio_2 Freq_1 Freq_2 History						
Parameter	Description					Default
Ratio_1	Damping ratio at frequency 1 (1% damping is given as 0.01)					0
Ratio_2	Damping ratio at frequency 2					
Freq_1	Frequency 1 (given in Hz)					
Freq_2	Frequency 2 (given in Hz)					
History	Time history (optional) scaling the actual damping ratios as a function of time. If omitted (or set equal to 0) the damping is kept constant during the analysis.					

With this record the the user may specify the damping to be used in a Dynamic Analysis. Rayleigh damping coefficients (alpha_1 and alpha_2) are calculated on basis on the given damping ratios and associated frequencies.

Example 1

```
'      d1      d2      fq1  fq2
DampRatio 0.02    0.01    0.1    10
```

means 2% damping at 0.1 Hz (T=10s) and 1% damping at 10 Hz. Constant damping ratios during the analysis.

Example 2

```
'      d1      d2      fq1  fq2      Hist
DampRatio 0.01    0.01    0.1    10      101
'
```

```
'      ID  Typ      t1  f1      t2  f2 .....
TimeHist 101 points  0.0  1.0    10  1.0  11.0  5.0  12.0  1.0  100.0  1.0
```

means 1% damping at 0.1 Hz (T=10s) and 1% damping at 10 Hz. Damping ratios are scaled according to time history with id = 101, which means increased damping between time = 10 and time = 12. Peak damping is 5% at time=11s.

NOTE ! This record is an extended alternative to the RAYLDAMP input, and override data specified under the RAYLDAMP input.

This record is given only once.

DampData Damp_ID Type [Data]		
Parameter	Description	Default
Damp_ID	ID to be referred to from ELEMDAMP	
Type	Kind of Damping data. Actual Types: Rayl_All : Common data for all 6 dofs. Data: alpha1 & alpha2 Rayl_Ind: Individual data for the dofs. Data: alpha1 & alpha2 (Dof1) alpha1 & alpha2 (Dof6) Alfa1 and 2: Rayleigh Coefficients (see under RaylDamp for more info)	
With this record the the user may specify general damping to be be referred to from individual elements used in a Dynamic Analysis.. <u>Example 1</u> <pre> DampData 10010 Rayl_All . 0.0 3.0E-4 DampData 10011 Rayl_All . 1.0E-2 3.0E-4 </pre> Two damping data packets are defined. One with stiffness proportional damping only and one with both mass- and stiff proportional damping. This record could be repeated.		

ElemDamp Damp_ID ListType [Id-List]		
Parameter	Description	Default
Damp_ID	Actual Damping Property ID	
ListType	Actual <i>Element</i> : Element ID list <i>Material</i> : Material ID list <i>All</i> : All elements are given the actual damping properties	
ID-List	Actual List of ID's	
With this record the the user may specify general damping to be be referred to from individual elements used in a Dynamic Analysis.. <u>Example 1</u> <pre> ElemDamp 10010 All ! Assign Damp Prop 10010 to all elements ElemDamp 10011 Mat 200 300 ! Assign to special thereafter </pre> With this record, damping for each element is defined. NOTE ! This record is an extended alternative to the RAYLDAMP input, and override data specified under the RAYLDAMP input. This record could be repeated.		

LUMPMASS rotmas		
Parameter	Description	Default
rotmas	Rotational mass scaling factor	0.01
This record is used to prescribe use of a lumped mass formulation for the structural finite element in connection to dynamic analysis If <i>rotmas</i> is set to zero the mass terms associated with rotation at the element nodes are zero, ref USFOS Theory Manual Sect 14 This record is given only once.		

CONSIMAS
This record is used to describe use of the consistent mass formulation ref USFOS Theory Manual Sect 14 This record is given only once.

SYSDAMP [Switch]		
Parameter	Description	Default
switch	Switch ON/OFF: Switch = 0 : Switch OFF system damping Switch = 1 : Switch ON system damping	0
This record is used to switch ON system damping formulation, (forming a separate C_0 matrix). By default (if Sysdamp is not specified in the input), C_0 is not established, and only Rayleigh system damping is available. It is recommended to switch Sysdamp ON, if discrete dashpot dampers are defined, (the dashpot damping terms will be added to C_0 matrix on top of the usual Rayleigh coefficients). This record is given only once.		

Ini_Velo	Type	Time	Vx	Vy	Vz	rVx	rVy	rVz	Id_1	Id_2	
Parameter	Description										Default
Type	Data type used to specify initial velocity at nodes: Node : The specified Id's are node numbers which all should be assigned to the initial velocity at the specified time. Mat : The specified Id's are material numbers. All nodes "in contact" with elements with the specified material numbers will all be assigned to the initial velocity at the specified time.										
Time	Time for the velocity to be initialized										
Vx	Velocoty X-component										
Vy	Velocoty Y-componet										
Vz	etc....										
rVx	Velocoty component: rotation about X-axis										
rVy	etc...										
rVz											
Id_1	Node number 1 (if Type is Node) or Material no. 1 (if Type is Mat)										
Id_2	Node number 2 (if Type is Node) or Material no. 2 (if Type is Mat)										
With this record the the user may specify initial velocity for a Dynamic Analysis.. <i>Example 1 :</i> <pre>' Typ Time Velo Mat_ID Ini_Velo Mat 0.0 1.5 0 0 0 0 0 1001</pre> will assign a X-velocity of 1.5 m/s to all nodes on the "body" with material ID 1001 from time= 0.0. <i>Example 2:</i> <pre>' Typ Time Velo Mat_ID Ini_Velo Mat 10.00 2 0 0 0 0 2002</pre> will assign a Y-velocity of 2.0 m/s to all nodes on the "body" with material ID 2002 at time 10 seconds. This record may be repeated.											

Dynres_N	Type	Node_ID	Dof	(Node_2	Dof_2)
Parameter	Description				Default
Type	Actual Node result type: Disp : Nodal Displacement Vel : Nodal Velocoty Acc : Nodal Acceleration RelDis : Relative displacement between 2 nodes/dofs, (extra node and dof required)				
Node_ID	Actual Node ID of which dynamic results should be saved				
Dof	Actual Nodal degree of freedom: 1 : X – displacement 2 : Y – displacement etc...				
Node_2	Second node (relevant if RelDis only)				
Dof_2	Secon node degrees of freedom (relevant if RelDis only)				
With this record the the user may specify <i>nodal</i> quantities to be saved every step during a Dynamic Analysis independent on the 'raf'-file saving interval. Results are stored on a separate file named <prefix>.dyn, and these time histories are accessed from XACT. This record may be repeated.					

Dynres_E Type Elem_ID End Dof (opt)					
Parameter	Description				Default
Type	Actual Element result type: Disp : Element Displacement Force : Element Force				0
Elem_ID	Actual Element ID of which dynamic results should be saved				
End	Element end				
Dof	Actual <i>local element</i> degree of freedom: 1 : X - displacement / Axial force 2 : Y - displacement / Shear force, y-direction If the element is a shell element, see description below.				
Opt	If the element is a Shell Element, the forces could be projected into the local coordinate system of a beam element. "Opt" is then the beam element ID.				

With this record the the user may specify *element* quantities to be saved **every** step during a Dynamic Analysis independent on the 'raf'-file saving interval. Results are stored on a separate file named <prefix>.dyn, and these time histories are accessed from XACT.

Dynres forces for Beam Elements always refer to local beam coordinate system.

Dynres forces for Shell Elements could be referred as follows:

```
'  
    • Forces are referring to Global Coord system ( default )  
    • Forces are referring to the Local Beam axix of a reference Beam Element  
'
```

When forces are referring to a Beam, the specified DOF referres to The Beam's Local coordinate system:

```
'  
Example :  
'      Type      elem      end  Dof  (BeamID)  
DynRes_Elem  Force    100    3   1      1  ! Shell Force Projected on Beam
```

The force component in the beam X-axis is used. '
Element 'end' means local shell element node.

This record may be repeated.

Dynres_G Type		
Parameter	Description	Default
Type	Actual Global result type: Wint : Internal Energy Wext : External Energy Wplast : Internal Plastic Energy Wkin : Kinetic Energy Wtot : Total Energy WaveLoad : Total Wave Load Forces WaveOVTM : Wave Overturning moment. ReacBSH : Base Shear Reaction. ReacOVTM : Reaction Overturning Moment WaveElev : Surface Elevation ReacXDir : Reaction force. Global X- Direction ReacYDir : Reaction force. Global Y- Direction ReacZDir : Reaction force. Global Z- Direction ReacXMom : Reaction Moment about Global X axis ReacYMom : Reaction Moment about Global Y axis	
With this record the user may specify <i>global</i> quantities to be saved every step during a Dynamic Analysis independent on the 'raf'-file saving interval. Results are stored on a separate file named <prefix>.dyn, and these time histories are accessed from XACT for time history and frequency distribution presentation. This record may be repeated.		

6.3.4 Analysis Control Parameters

CPPROPAR epssol gamstp ifunc pereul ktrmax dentsw cmax ifysw deterws		
Parameter	Description	Default
epssol	Numerical accuracy of the equation solver (Sect 4.6)	1.0E-20
gamstp	Accepted value for overshooting the yield surface (Sect 4.2.2)	0.10
ifunc	FEM beam shape function (Sect 3.1) 1: Sine/cosine shape functions 3: 3rd degree polynomials 2: 3rd degree polynomials used when $P_x \leq P_{Euler} * pereul$ Sine/cosine functions used when $P_x > P_{Euler} * pereul$	2
pereul	Level of transition from 3rd degree polynomial shape function to sine/cosine shape function. Specified as a factor of the Euler buckling load (Sect 3.1)	0.05
ktrmax	Max number recalculations of one load step due to element unloading (Sect 4.1)	5
dentsw	Formulation of dented tubes and local buckling (Sect 3.4) 0: Only initially perfect cross section included 1: Local damages and dent growth included for tubes. Local buckling of initially perfect rectangular and tube cross section included	1
cmax	Elastic spring-back is introduced when the current Stiffness Parameter exceeds <i>cmax</i> (Sect 4.2.1)	999
ifysw	Parameter for elasto-plastic transition 0: Elasto-plastic transition performed 1: Elasto-plastic transition not performed	0
detersw	Determinant criterion for identification of load limit points or bifurcation points 0: No determinant check 1: Determinant criterion active. Load increment is reversed when the determinant changes sign	1
This record may be used to change default program parameters		
This record is given only once		

SURF2OFF		
Parameter	Description	Default
	Switch off two-surface model, (Elasto-plastic transition not performed) This record overrides default data and data specified on CPROPAR record	

ARC_OFF		
Parameter	Description	Default
	Switch off arc length control. This record overrides default data and data specified on CPROPAR record	

DETEROFF		
Parameter	Description	Default
	Switch off determinant check. This record overrides default data and data specified on CPROPAR record	

DENT_OFF		
Parameter	Description	Default
	Switch off formulation of dented tubes and local buckling. This record overrides default data and data specified on CPROPAR record	

DENT_TYPE		
Type		
Parameter	Description	Default
Type	Dent formulation type. 0 : Default dent formulation Cyclic dent formulation	0
This record may be used to switch on the cyclic dent formulation. This record is given once		

CMAXSTEP Max_step		
<i>Parameter</i>	<i>Description</i>	<i>Default</i>
Max_step	Max number of steps	512
This record may be used to increase the max number of analysis steps available. This record is given once.		

EIGENVAL Keyword Value		
Parameter	Description	Default
Keyword	Keyword describing the actual "Value":	
	<i>Time</i> : Definition of the time when the eigenval is performed.	-
	<i>NumberOf</i> : Specification of nuber of eigenvector to compute.	20
	<i>ModeScale</i> : Scaling of eigenvectors in connection with visualization.	1.0
	<i>Algorithm</i> : Actual algorithm to use. (SubSpace or Lanczos)	SSIT
	<i>Shift</i> : Shift parameter used if singular systems.	0.0
Value	Actual value	
This record is used to perform an eigenvalue analysis for calculation of vibration frequencies and corresponding modes, (Ref: <i>EigenSolvers for structural problems</i> by K.Bell). The eigenvalues/modes are calculated, and the mode-shapes may be inspected in XACT. If the modes are difficult to see (small displacements), specify the modescale, f ex wit ha value=10. NOTE ! Specification of time is important. In order to get correct stresses (and thus correct nonlinear stiffness), the eigenvalue calculations should be performed when the selfweighth etc is introduced in the structure. Available for DYNAMIC analysis only This record could be repeated.		

CBIFURC idcomb idstep ibifsw		
Parameter	Description	Default
idcomb	Load combination to be reached before the bifurcation analysis becomes active	0
idstep	Load step to be reached before the bifurcation analysis becomes active	
ibifsw	= 0 or <blank>: Eigenvectors and eigenvalues are calculated and written to the print file at the loadstep where bifurcation is detected. The .bif file is generated with nodal loads corresponding to the eigenvectors = 1: In addition the eigenvectors are written to the result file for XACT presentation and the analysis is then terminated. Each eigenvector is stored as global displacements for dummy load steps which follow the last real loadstep in consecutive order	
This record may be used switch on the bifurcation analysis		

6.3.5 Numerical Procedure Parameters

CITER cmin cneg itmax isol epsit cmineg		
Parameter	Description	Default
cmin	Iterations omitted for current stiffness value between <i>cmin</i> and <i>cmineg</i>	0.000
cneg	Definition of "large" negative current stiffness	-2.0
itmax	Max number of iterations	10
isol	Number of iterations between updating of stiffness matrix	1
epsit	Convergence criterion for iterations	0.0001
cmineg	Iterations are omitted for current stiffness value between <i>cmin</i> and <i>cmineg</i>	-cmin
This record may be used to switch on iteration, and to change default program parameters <i>Note!</i> Iterations should not be performed if the SHELL option is activated. This record is given once		

LITER [itmax]		
Parameter	Description	Default
itmax	Max number of iterations	1
This record may be used to switch on "Light" iteration, with possibility to change the itmax only. The other parameters are fixed, ("CITER" default parameters, see above). <i>Note!</i> Iterations should not be performed if the SHELL option is activated. This record is given once, and if CITER is specified (before LITER), these parameters are kept, (except itmax).		

CUNFAL max on/off		
Parameter	Description	Default
max on/off	Max number of subsequent load steps with plastification/elastic unloading of a single element	
This record impose restrictions on repeated plastification/elastic unloading of single elements If an element unloads/re-plastifies in more than <i>max on/off</i> subsequent load steps, elastic unloading will be suppressed in the remaining steps The restriction is removed the first time the element goes through a load step without trying to unload. The restriction is also removed on the first load step of each new load vector (Sect 4.2), e.g. if the external load is reversed This record is given only once		

CDYNPAR alpha beta gamma		
Parameter	Description	Default
alpha	Integration parameter controlling high frequency numerical damping	0
beta	Newmark integration parameter	0.25
gamma	Newmark integration parameter	0.50
	To obtain high frequency numerical damping, select alpha in the range - 0.3 to 0.0. The accuracy in the integration of the equation of motion is maintained for this case by setting both beta and gamma negative. USFOS will then automatically select the Newmark integration parameters to: $\gamma = 1/2(1-2\alpha)$ $\beta = 1/4(1-\alpha)^2$ $-0.3 \leq \alpha \leq 0.0$	
This record may be used to specify numerical integration parameters for the time integration of the equation of motion according to the Hilber Hughes and Taylor alpha-dissipation method, ref USFOS Theory Manual, Sect 14		

PCOR_ON		
Parameter	Description	Default
	Predictor-Corrector approach used in the numerical integration of the equation of motion. The solution of the equation of motion at a typical time-step is then performed as a two-step procedure: 1. Predict increments in velocity and acceleration 2. Perform corrector steps. One or several corrector steps may be specified on the CITER record	
This record may be used to activate the Predictor-Corrector approach in the numerical time integration of the equation of motion		
<i>Note!</i> This record may only be used in combination with the CITER record		

PCOR_OFF		
Parameter	Description	Default
	Predictor-Corrector approach NOT used when solving the equation of motion by means of numerical integration.	

6.3.6 Material/Plasticity Modelling

MISOIEP						
	matno	E-mod	poiss	yield	density	term.exp
	c1	a1	c2	a2	c3	a3
	c4	a4	c5	a5	c6	a6
Parameter	Description					Default
matno	Material reference number					
E-mod	Elastic modulus					
poiss	Poisson's ratio					
yield	Yield strength					
density	Mass density					
term.exp	Thermal expansion ratio					
c1	Hardening parameter for x-force					$2.0 \cdot 10^{-3}$
a1	Elasto-plastic growth parameter for x-force					0.25
c2	Hardening parameter for y-force					$2.0 \cdot 10^{-3}$
a2	Elasto-plastic growth parameter for y-force					0.25
.						
.						
.	Ditto for z-force					
c6	x-moment					
a6	y-moment					
	z-moment					
This record is used to specify material properties when USFOS is used as a stand alone program or if the "host" analysis system does not supply all parameters (i.e. yield strength), or if hardening properties will be changed The default hardening properties refer to the condition where elasto-plastic transition is performed, see record CPROPAR. If elasto-plastic transition is not performed, the default values are zero c2-c6 are not given if they are equal to c1 a2-a6 are not given if they are equal to a1 This record may be repeated						

GBOUND						geono	z_y^m	z_b^m	z_y^c	z_b^c
Parameter	Description					Default				
geono	Geometry number									
z_y^m	Extension ("size") of the yield surface, relative to the bounding surface (Sect 4.3.2). Material behaviour under monotonous loading									
z_b^m	Extension ("size") of the bounding surface ("full plastic capacity") (Sect 4.3.3). Material behaviour under monotonous loading									
z_y^c	Extension of the "cyclic" yield surface, relative to the "cyclic" bounding surface. (Material behaviour under cyclic loading)									
z_b^c	Extension of the "cyclic" bounding surface. (Material behaviour under cyclic loading)									
This record is mandatory for general beams. For other cross sections it may be used to change default values										
Default z-yield values are determined by the ratio of elastic and plastic section modulus of typical cross sections										
		z_y^m	z_b^m	z_y^c	z_b^c					
I or H:	def =	0.87	1.0	0.65	1.00					
Box:	def =	0.83	1.0	0.65	1.00					
Pipe:	def =	0.79	1.0	0.60	1.00					
The record is only relevant if elasto-plastic transitation is performed, see record CPPROPAR										

MREF							
	matno	refx	refy	refz	refrx	refry	refrz
Parameter	Description						Default
matno	Material number						
refx	Properties in local x-direction is defined by material with ID number <i>refx</i>						
refy-refrz	Similar to <i>refx</i> for the other degrees of freedom						
This record is used to specify material properties for the nonlinear spring element (both 1 node and 2 node) This record may be repeated Properties in the 6 DOF's are specified by referring to other material input (SESAM record MISOPL or UFO records HYPELAST and ELPLCURV). Material numbers equal to zero means that the spring has no stiffness in the actual degrees of freedom If element type no 18 (spring to ground) refers to a "MREF" material, the element will be handled by USFOS as a 1 node nonlinear spring to ground If element type no 15 (2 node beam), refers to a "MREF" material, the element will be handled by USFOS as a 2 node nonlinear spring							

MPLASMON matno c1 a1 c2 a2 c3 a3 c4 a4 c5 a5 c6 a6							
Parameter	Description						Default
matno	Material reference number						
c1	Hardening parameter for x-force						$2.0 \cdot 10^{-3}$
a1	Elasto-plastic transition parameter for x-force						0.25
c2	Hardening parameter for y-force						$2.0 \cdot 10^{-3}$
a2	Elasto-plastic transition parameter for y-force						0.25
.							
.c6	Ditto for z-force						
a6	x-moment y-moment z-moment						

This record is used to specify material hardening parameters and elasto-plastic transition parameters for the material under monotonous loading conditions

The default hardening properties refer to the condition where elasto-plastic transition is performed, see record **CPROPAR**. If elasto-plastic transition is not performed, the default values are zero

c2-c6 need not be given if they are equal to c1
a2-a6 need not be given if they are equal to a1

Below, an example describes the “a”-parameter’s impact on the stress-strain curve. ((Typical Steel material with E=210.000Mpa and Yield=355Mpa). The hardening is fixed to 0.2% in the example.

USFOS Material Model

Stress [MPa]

Strain [%]

USFOS Material Model

Stress [MPa]

Strain [%]

Medium (Red curve)
Rigid (Green curve)
Soft (Blue Curve)
UltraSoft (Pink curve)

a = 2.0
a = 1.0
a = 0.25 (Default)
a = 0.15

This record may be repeated


MPLASCYC matno c1 a1 c2 a2 c3 a3 c4 a4 c5 a5 c6 a6						
Parameter	Description	Default				
matno	Material reference number					
c1	Hardening parameter for x-force	0.014				
a1	Elasto-plastic growth parameter for x-force	0.84				
c2	Hardening parameter for y-force	0.024				
a2	Elasto-plastic growth parameter for y-force	0.34				
.						
.						
.	Ditto for z-force					
c6	x-moment					
a6	y-moment					
	z-moment					
This record is used to specify material hardening parameters and elasto-plastic transition parameters for the material under cyclic loading conditions The default hardening properties refer to the condition where elasto-plastic transition is performed, see record CPROPAR. If elasto-plastic transition is not performed, the default values are zero c2-c6 need not be given if they are equal to c1 a2-a6 need not be given if they are equal to a1 This record may be repeated						

6.3.7 Member Modelling

CELHINX elnox ihin1 ihin2 ihinmid		
Parameter	Description	Default
elnox	External (user-specified) element number	
ihin1	Restriction code for plastic hinge development at first node 0: Plastic hinge free to develop 1: Plastic hinge is suppressed	
ihin2	Restriction code for plastic hinge development at second node	
ihinmid	Restriction code for plastic hinge development at midspan	
This record may be used to suppress development of plastic hinges on specified elements (Sect 4.5)		
This record may be repeated		

PLASTHIN							ihin1	ihin2	ihinmid	elnox1	elnox2	...
Parameter	Description										Default	
ihin1	Restriction code for plastic hinge development at first node 0: Plastic hinge free to develop 1: Plastic hinge is suppressed											
ihin2	Restriction code for plastic hinge development at second node											
ihinmid	Restriction code for plastic hinge development at midspan											
elnox1	External (user-specified) element number 1											
elnox2	External (user-specified) element number 2											
.	.											
.	.											
NOTE ! If no elements are specified, all beam elements get the actual restriction code.												
This record may be used to suppress development of plastic hinges on specified elements.												
This record may be repeated												
Example:	PLASTHIN 0 0 1 PLASTHIN 0 0 0 1010 1020 1030											
Will suppress plastic hinge at midspan for all elements except for elements 1010, 1020 and 1030. This record is an alternative to the *CELHINX* record.												

BEAMHING ix1 iy1 iz1 irx1 iry1 irz1 ix2 iy2 iz2 irx2 iry2 irz2 elnox1 elnox2 elnoxn		
Parameter	Description	Default
ix1	Fixation Code for Local X-Direction of node 1 of element : 0 : Fully Released 1 : Fully Connected	
iy1	Fixation Code for Local Y-Direction of node 1 of element	
iz1	Fixation Code for Local Z-Direction of node 1 of element	
irx1	Fixation Code for Torsion Moment of node 1 of element	
iry1	Fixation Code for Moment about Local Y-axis of node 1 of element	
irz1	Fixation Code for Moment about Local Z-axis of node 1 of element	
ix2	Fixation Code for Local X-Direction of node 2 of element etc...	
elnox1	External element number 1 to be defined with the actual internal hinge	
elnox2	External element number 2 to be defined with the actual internal hinge .	
.	.	
.	External element number n to be defined with the actual internal hinge	
elnoxn		
NOTE ! If no elements are specified, all beam elements will be defined with the actual internal hinge definition.		
This record is used to assign internal hinges to beam elements. This record may be repeated. Example: BEAMHING 1 1 1 1 0 0 1 1 1 1 0 0 BEAMHING 1 1 1 1 1 1 1 1 1 1 1 1 1010 1020 1030 2010 2020 2030 Default internal hinge is changed from fully connected(default) to released bending degrees of freedom at both ends of the elements, (applied to all beam elements). However, elements 1010 1020 1030 2010 2020 and 2030 are defined with fully connected joints at both ends, (the latest BEAMHING definition overrides previous definitions). NOTE ! This option should be used with care! Due to nonlinear geometrical effects, the release of some degrees of freedom could be valid at the first step only. This is obvious in connection with release of the two shear degrees of freedom (no 2 and 3) where the vertical component of the axial stiffness will become more and more significant as the beam axis rotates.		

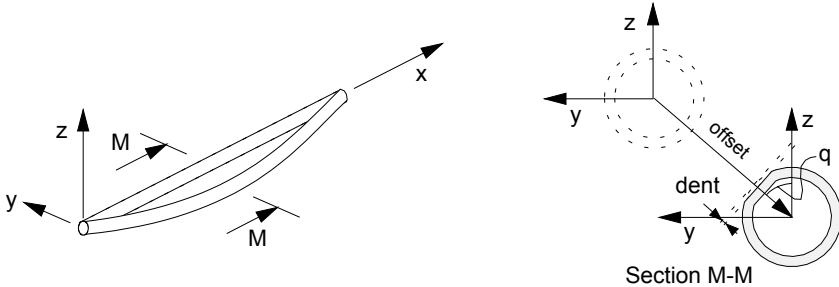GIMPER								impgroup	impshape	angle	offset	dent1	dent2	dentmid	
Parameter		Description											Default		
impgroup		Reference number of imperfection group													
impshape		Shape of initial deformation (Sine-functions)													
angle		0:	Both ends rotated												
		1:	End 1 undeformed												
		2:	End 2 undeformed												
offset		Orientation of offset and dent. Specified in degrees counter-clockwise from the local element z-axis													
															
dent1		Maximum offset divided by element length													
dent2		Depth of dent divided by pipe diameter. First node													
dentmid		Depth of dent divided by pipe diameter. Second node													
		Depth of dent divided by pipe diameter. Element midspan													
This record is used to define initial deformations and damage conditions for tubes (Sect 3.4)															
<i>Note!</i> The effect of local dents is only included if the dent switch parameter <i>dentsw</i> = 1 (default) (Sect 6.3.C)															
This record may be repeated															

GELIMP elnox impgroup		
Parameter	Description	Default
elnox	External (user-defined) element number	
impgroup	Reference number of imperfection group	
This record is used to assign initial deformations or damage conditions to specified elements		
This record may be repeated		



BLINDP2 insl iem ix iy iz irx iry irz		
Parameter	Description	Default
insl	Slave (dependent) node	
iem	Element with master (independent) node(s). The coupled degrees of freedom (DOFs) are referred to this local element coordinate system	
ix	Specification of linear dependent DOFs in local master element coordinate system: i.. = 0 No coupling i.. = 1 The slave DOF is linearly dependent on the corresponding master DOF(s) (including torsional effects for iy and iz, Ref. /1/) i.. = -1 Only valid for iy and iz. Same as i.. = 1, but not including torsional effects	
iy		
iz		
irx		
iry		
irz		
This record is used to define dependent degrees of freedom (Sect 3.8)		
The record is given once for every node with dependent degrees of freedom		

NONSTRU ListType { List }		
Parameter	Description	Default
ListType	Definition Type: <i>Element</i> : Element ID list <i>Material</i> : Material ID list <i>Geometry</i> : Geometry ID list <i>Group</i> : Group ID list <i>Visible</i> : The nonstructural elements are visualized in Xact, (default invisible)	
{ List }	List of actual ID's	
This record is used to specify non structural beam elements (passive elements), and such elements are excluded from the global stiffness formulation <i>while the elements' attracted loads are kept</i>. <u>Example 1:</u> NonStru Element 1001 1002 2001 2002 NonStru Geom 27304 27305 27306 All beam elements referring to one of the cross section geometry ID's: 27304, 27305 or 27306 will become non structural. In addition, the elements 1001, 1002, 2001 and 2002 get "nonstru". <u>Example 2:</u> NonStru Mat 210355 210345 All beam elements referring to one of the material ID's: 210355 or 210345 will become non structural. <u>Example 3:</u> NonStru Group 1111 2222 3333 All beam elements "member of" one of the Group ID's: 1111, 2222 or 3333 will become non structural. <u>Example 4:</u> NonStru Visible This command switches <i>ON</i> the visualization of the non structural members. By default, only structural members are visualized in Xact. All parameters may be abbreviated, but enough characters to ensure non ambiguous definition is required, (Geometry could be specified as Ge, Geo, Geom, etc, material as M, Ma, Mat, etc). NOTE: The command: "STRUCTEL" (structural elements) will override the NonStru definitions. This record may be repeated		

STRUCTEL ListType { List }		
Parameter	Description	Default
ListType	Definition Type:	
	<i>Element</i> : Element ID list <i>Material</i> : Material ID list <i>Geometry</i> : Geometry ID list <i>Group</i> : Group ID list	
{ List }	List of actual ID's	
This record is used to override non structural beam element(s) specified under NONSTRU. This option is useful in connection with models where for example most elements with given geometry ID's should become non structural except some few, which should become structural. Example 1: <pre> NonStru Geom 27304 27305 27306 StructEl Element 1001 1002 </pre> All beam elements referring to one of the cross section geometry ID's: 27304, 27305 or 27306 will become non structural. However, the elements 1001 and 1002 (which refer to one of the specified geometry ID's) should <i>remain structural</i>. This record may be repeated		

LIN_ELEM Type ListType { List }		
Parameter	Description	Default
Type	For conventional beam, type = 0. (for riser beam, type=1).	
ListType	Definition Type:	
	<i>Element</i> : Element ID list <i>Material</i> : Material ID list <i>Geometry</i> : Geometry ID list <i>All</i> : All elements become elastic, no further input	
{ List }	List of actual ID's	
This record is used to specify elements, which should be linear and the command is an alternative to the more detailed PLASTHIN command. Development of plastic hinges is suppressed in all 3 nodes. Example 1: <pre> Lin_Elem 0 Geom 27304 27305 27306 Lin_Elem 0 Element 1001 1002 </pre> All beam elements referring to one of the cross section geometry ID's: 27304, 27305 or 27306 will become elastic (yielding in all 3 hinges are suppressed) in addition the elements 1001 and 1002. Example 2: <pre> Lin_Elem 1 Mat 210355 210345 </pre> All beam elements referring to one of the material ID's: 210355 or 210345 will become elastic. The beam formulation is the "integration point based" riser element, which also suppresses elastic buckling if one element per member is used. This record may be repeated		

CINIDEF	Size/ColumnCurve	Pattern	LoadCase
Parameter	Description		Default
Size	Magnitude of initial imperfection or column curve number		
	Size < 0.1 : e/L given directly		
	Size > 1 : Column curve number		
Pat	0 : Use program default (=1)		
	1 : Direction following member line load		
	2 : Direction following global base shear		
LoadCase	Load case to determine direction of initial imperfection		
This record is used to switch on automatic calculation of initial member imperfection for calibration of analysis model to buckling curves.			
Implemented column curves are:			
Number	Curve		
10	API WSD / SSRC WSD		
15	draft ISO / NORSOK		
20	AISC		
30	API LRFD		
41	ECCS / NS / NPD Curve A		
42	ECCS / NS / NPD Curve B		
43	ECCS / NS / NPD Curve C		
44	ECCS / NS / NPD Curve A0		
45	ECCS / NS / NPD Curve E		
51	DNV Curve A		
52	DNV Curve B		
53	DNV Curve C		
54	DNV Curve A0		
55	DNV Curve E		
61	SSRC / CSA Curve 1	(Lehigh characteristic curve 1)	
62	SSRC / CSA Curve 2	(Lehigh characteristic curve 2)	
63	SSRC / CSA Curve 3	(Lehigh characteristic curve 3)	
66	SSRC mean column curve 1	(Lehigh mean curve 1)	
67	SSRC mean column curve 2	(Lehigh mean curve 2)	
68	SSRC mean column curve 3	(Lehigh mean curve 3)	
70	Chen column curve		
Example			
CINIDEF	10	1	3
Means that initial imperfections are assigned on all tubular members according to API WSD column curve, in direction of the distributed loading for each member under load case 3.			
This record is given only once.			

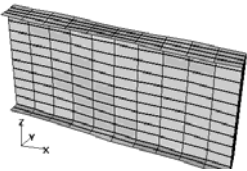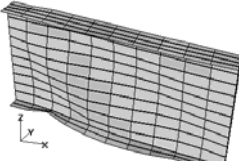BuckMode Mode No ScaleFact		
Parameter	Description	Default
Mode No	Apply the specified eigen mode as initial imperfection	
ScaleFact	Scale the selected eigen values and add to the user defined structural nodal coordinates.	
This record is used to apply initial imperfections based on an eigen value analysis performed automatically as a pre processing task. Example : BuckMode 5 0.1 An eigen value analysis <i>automatically</i> will be initiated prior to the ordinary collapse analysis, and the 5'th eigenmode is scaled by 0.1 and added to the initial nodal coordinates. The stress free structural shape is shown in the figure below (to the left), while the final collapse mode is shown to the right.  Initial Mode  Collapse Mode This record is given only once.		

GROUTED GroutMat ListType { List }		
Parameter	Description	Default
GroutMat	Material ID defining the Grout material parameters. (see MATERIAL)	
ListType	Definition Type:	
List	<i>Element</i> : Element ID list <i>Material</i> : Material ID list <i>Geometry</i> : Geometry ID list	
{ List }	List of actual ID's	
This record is used to specify elements with grout. Example 1: GROUTED 1020 Geom 27304 27305 27306 All elements referring to cross section (must be pipes) 27304, 27305 or 27306 will be "filled" with grout wit material properties defined by material ID 1020 This record may be repeated		

ElmTrans	Type	Node	ListType	ID's	Unit
Type	Node Reference Type: ☐ GlobNode : "Node" refers to Node ID ☐ LocNode : "Node" refers to the element's local node (end)				[Deg]
Node	Id of node or local element node (see above).				
ListType	Keyword for interpreting of the succeeding ID- list ☐ "elem" Element ID's are specified ☐ "Mat" Material ID's are listed. Elements referring to mat are selected				
ID's	Actual ID list				

With this record, the user defines how to define and update an element's local-global transformation matrix. This command is needed when zero length non linear springs are defined, since the orientation of the local coordinate system cannot be defined in the normal way. (having local x-axis going from end 1 to 2 etc).

Example1:


\	Type	NodeID	ListType	ID's
ElmTrans	GlobNode	101	Elem	12

Element no 12 will then update it's transformation according to rotations of node 101.

If Element 12 is a 2-node non linear spring, with ~zero length, (less than 1mm), the following will be done in addition:

☐ The initial local-global transformation matrix will be set equal to the transformation matrix of the first *beam* element connected to node 101.


This option is typically used in connection with modelling of bearings, where the properties should follow the structure's large displacements and rotations.

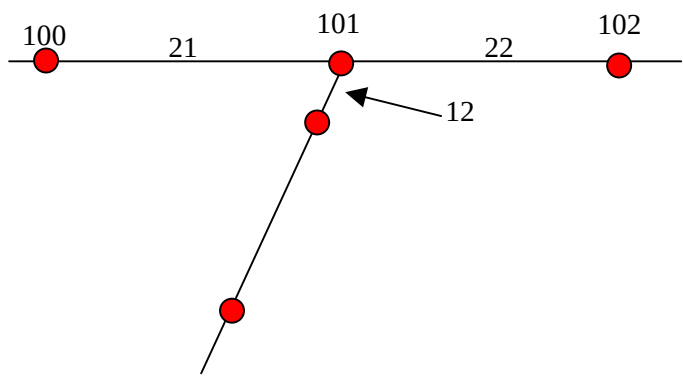

Example2:

	Type	End	ListType	ID's
ElmTrans	LocNode	1	Mat	3 5 8

Means that all spring elements referring to materials 3, 5 or 8 will have the local coordinate system defined by the beam element attached to end 1 of the spring in question. If the user is planning the modelling of Zero length spring, the amount of input to define the local coordinate system could be limited to just one line as described in this example.

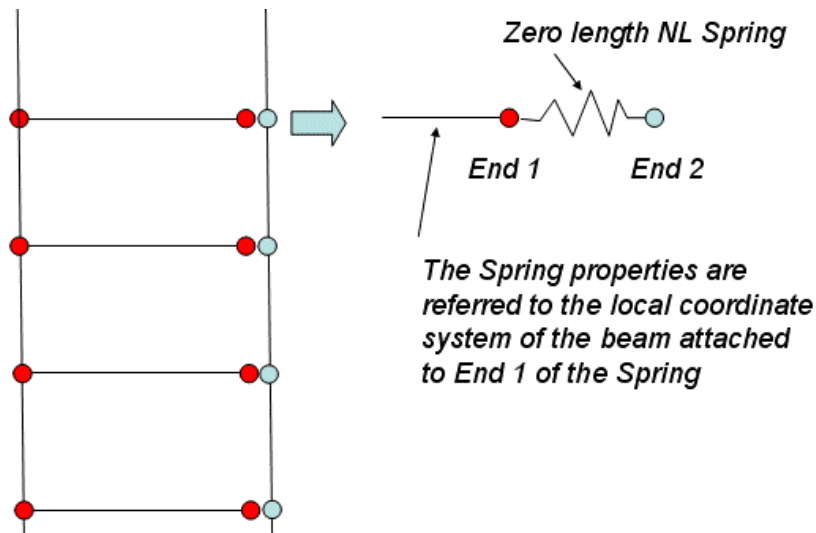


This record could be repeated..

6.3.8 Joint Modelling

SHELL						
	nodex	elnox1	elnox2	d	t	
Parameter	Description					Default
nodex	External node number referring to the joint where shell effects should be considered					
elnox1	External element number defining one of the two elements connected to the node					
elnox2	External element number defining the second chord element					
d , t	Diameter and thickness of the chord at the joint, respectively (canned joint). If omitted, the data for <i>elnox1</i> is used					


With this record, a complete shell analysis of the specified tubular joint will be included in the analysis.

Note! Internally in USFOS one extra element and extra nodes are introduced into the finite element model, and the CPU consumption of the analysis increases somewhat.

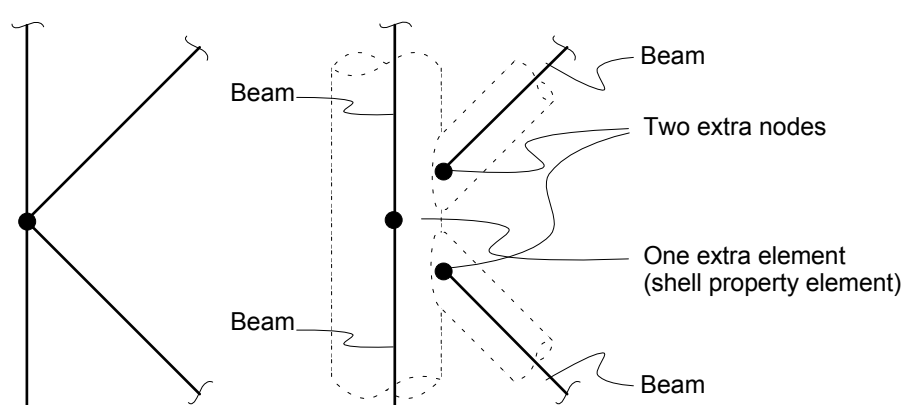


OVERLAP nodex elnob1 elnob2 		
Parameter	Description	Default
nodex	External node number for the actual tubular joint	
elnob1	External element number for overlapping brace no 1	
elnob2	External element number for overlapping brace no 2	
.	.	
.	.	
.	.	


This record defines overlapping braces at the tubular joints where shell effects are specified

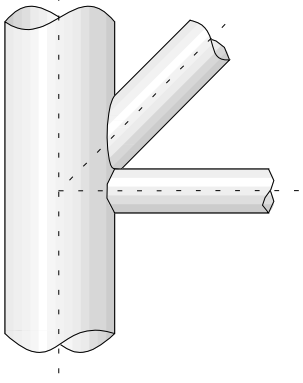

Real structure

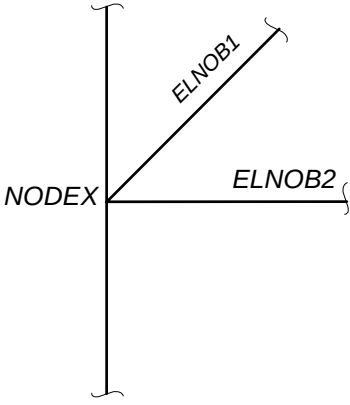

Users beam model

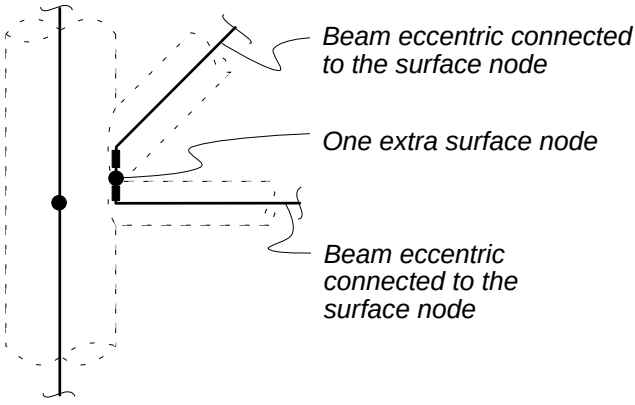

Model with local flexibility and overlapping included

Beam eccentric connected to the surface node

One extra surface node

Beam eccentric connected to the surface node

CHJOINT						
	nodex	elnox1	elnox2	geono	irule	
Parameter	Description					Default
nodex	External node number referring to the joint where shell effects should be considered					
elnox1	External element number defining one of the two elements connected to the node					
elnox2	External element number defining the second CHORD element					
geono	Geometry reference number defining the diameter and thickness of the chord at the joint (canned joint). If omitted or equal to 0, the data for <i>elnox1</i> is used.					
irule	Capacity rule switch: irule = -1 : API (no more data required) irule = -2 : DoE (no more data required) irule = -3 : User defined capacity and surface definition, more data required, (see next pages). irule = MSL : MSL non-linear joint characteristics, (see next pages). Irule = -101 : User defined Joint Springs, more data required, (see next pages).					

With this record, the capacity of each brace/chord connection at the tubular joint will be checked according to a selected joint capacity equation.

This check will impose restrictions on the load transfer through each brace/chord connection at the specified joint


By default the extra elements representing the connection capacities are **general beam** elements. From version 7.4 it is possible to switch to **Joint Springs** using the record:


JNT_FORM 1

P_d curves are then derived from the actual capacities as follows:

- Displacement = 0.1% of Chord diameter defines 'yielding' (confer JSURFSIZ)
- Displacement = 1.0% of Chord diameter defines maximum force/moment
- Displacement = 5.0% of Chord diameter defines end of maximum capacity
- Displacement = 10 % of Chord diameter defines fracture of joint

The generated curves are printed in the '.out' - file, and the **peak capacities** will be printed using the **Verify/Element/Information** option in **Xact**.

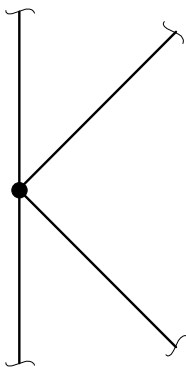


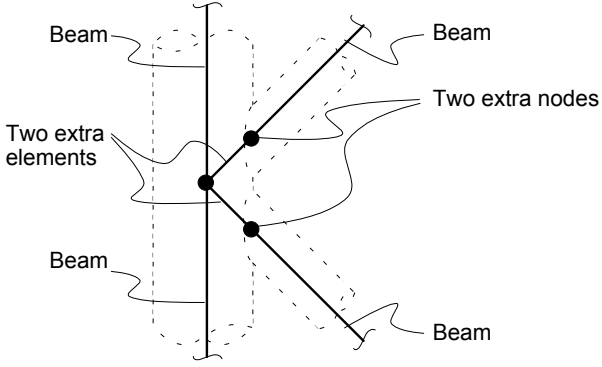

Conventional joint model

Joint with capacity check included

CHJOINT nodex elnox1 elnox2 geono rule nbraces brace₁ Mref_ID₁ brace₂ Mref_ID₂ brace_n Mref_ID_n		
Parameter	Description	Default
nodex	External node number referring to the joint where shell effects should be considered	
elnox1	External element number defining one of the two elements connected to the node	
elnox2	External element number defining the second CHORD element	
geono	When user defined capacity is used, this parameter is dummy, but a dummy parameter must be given	
rule	Capacity rule switch = -101, User defined Joint Springs.	
nbraces	Number of Braces connected to the actual joint	
brace ₁	Brace element ID of first brace	
Mref_ID ₁	ID of MREF-record defining the nonlinear spring properties of brace 1 connection. Data for all braces connected to the joint are required !	
With this record, the capacity of each brace/chord connection of the tubular joint will be limited by the user defined P_d curves defining the behaviour of the joint. This check will impose restrictions on the load transfer through each brace/chord connection at the specified joint		

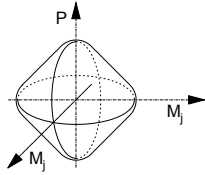CHJOINT nodex elnox1 elnox2 geono rule alpha1 alpha2 alpha3 alpha4 alpha5 nbraces brace1 axial torsion Mipb Mopb		
Parameter	Description	Default
nodex	External node number referring to the joint where shell effects should be considered	
elnox1	External element number defining one of the two elements connected to the node	
elnox2	External element number defining the second CHORD element	
geono	Dummy when rule = -3	
rule	Capacity rule switch=-3 : User defined capacity and surface definition.	
alpha1-5	Parameters used to define the actual surface	
nbraces	Number of braces connected to the actual joint	
brace1	User defined element number of first brace element	
axial	Axial capacity:	<i>brace1</i> - chord connection
torsion	Torsion capacity:	<i>brace1</i> - chord connection
Mipb	In plane bending capacity:	<i>brace1</i> - chord connection
Mopb	Out of plane bending capacity:	<i>brace1</i> - chord connection
	Data for all braces connected to the joint are required	
With this record, the capacity of each brace/chord connection at the tubular joint will be checked according to the specified rule This check will impose restrictions on the load transfer through each brace/chord connection at the specified joint When the USER-defined capacity is used (rule = -3), the following surface definition is applied:  $\left(\frac{P}{P_M} \right)^{\alpha 1} + \left(\left(\frac{M_z}{M_{xu}} \right)^{\alpha 2} + \left(\frac{M_i}{M_{iu}} \right)^{\alpha 3} + \left(\frac{M_o}{M_{ou}} \right)^{\alpha 4} \right)^{\alpha 5} = 1$		

CHJOINT nodex elnox1 elnox2 geono CapRule CapLevel Q _f _SafetyCoeff			
Parameter	Description	Default	
nodex	External node number referring to the joint where joint capacity and non-linear joint behaviour should be considered		
elnox1	External element number defining one of the two CHORD elements connected to the node		
elnox2	External element number defining the second CHORD element		
geono	Geometry reference number defining the diameter and thickness of the chord at the joint (canned joint). If omitted or equal to 0, the data for <i>elnox1</i> is used.		
CapRule	Capacity rule: MSL : MSL non-linear joint characteristics		
CapLevel	Capacity level or capacity multiplier. <i>mean</i> : use mean value joint capacities <i>char</i> : use characteristic joint capacities <i>fcrack</i> : use the “first crack” curve <i>scalfact</i> : joint capacities are set to mean value capacities multiplied by <i>scalfact</i> , (where “ <i>scalfact</i> ” is a positive real number). This option is only available with the MSL joint formulation.	mean	
Q _f _Safety Coeff	The Q _f factor for joint capacities includes a safety factor (or partial safety coefficient) in the chord stress utilisation factor.	1.0	
With this record, the capacity of each brace/chord connection at the tubular joint will be checked according to a selected joint capacity equation This check will impose restrictions on the load transfer through each brace/chord connection at the specified joint, and the non-linear joint characteristics will be included in the USFOS analysis. Extra elements will be introduced in the FE model, and the behaviour of these elements assigned according to the selected joint capacity rule or specified joint capacity, and the FE formulation selected for the “joint elements”. The joint capacity rule or joint capacity is specified by the CHJOINT record(s). The FE formulation for the “joint elements” is selected by the JNT_FORM record. Note that use of the MSL formulation is confidential under the contract of the MSL JIP project “Non-linear joint modelling for”. Access to this formulation is limited to - participants of the MSL JIP project - their affiliated companies - other parties acting under authorisation from the above			

JSURFSIZ z_y^m z_b^m nodex1 nodex2 				
Parameter	Description			Default
z_y^m	Extension ("size") of the yield surface, relative to the reference bounding surface (Sect 4.3.2).			0.50
z_b^m	Extension ("size") of the bounding surface ("full plastic capacity") relative to the reference bounding surface (Sect 4.3.3).			1.00
nodex1	External node number of joint 1			
nodex2	External node number of joint 2			
.	.			
.	.NOTE ! If no nodes are specified, all joints defined get the actual surface ratios.			

With this record the user may change the default values of the ratio of elastic and plastic "section" modulus of the joint model. It is then possible to scale the actual joint capacities, (f.inst. calculated according to API, see CHJOINT).

This is an useful option in connection with:

- Sensitivity studies where joint capacities are important
- Cases where some joints are damaged (reducing the bounding surface)
- Cases with reinforces joints (expanding the bounding surface)
- etc...

This record may be repeated.

Example: JSURFSIZ 0.95 1.5
 JSURFSIZ 0.50 1.0 101 102 103

will change the yield surface size to 0.95 and the bounding surface size to 1.5 of the initial, reference bounding surface for all joints except for nodes 101, 102 and 103.

JOINTGAP							Gap	NodeID	Brace1	Brace2	
Parameter	Description									Default	
Gap	Actual Gap specified in current length unit										
NodeID	Actual Joint, (CHJOINT must be specified for this joint)										
Brace_i	The actual gap should be applied to the Braces (Elem ID's) specified.										
.	NOTE 1: If no node is specified, all joints defined get the actual gap.										
.	NOTE 2: If no braces are specified, all braces get the actual gap.										

With this record the user may override the gaps between braces, which are computed based on the structural model, (member coordinates and offsets).

This is a useful option if the structural model does not describe correct gaps (f ex a model without member eccentricities/offsets).

This record may be repeated.

Example 1:	'	Gap	(NodID)
	JOINTGAP	0.050	

This will force a gap = 0.050 to be used in all relevant capacity calculations for all joints with CHJOINT applied (does not influence T/Y capacities).

Example 2:	'	Gap	NodID
	JOINTGAP	0.050	
	JOINTGAP	0.070	1010
	JOINTGAP	0.070	2010
	JOINTGAP	0.070	3010

This will force a gap = 0.050 to be used in all relevant capacity calculations for all joints except for joints 1010, 2010 and 3010, which will use a gap of 0.070.

Example 3:	'	Gap	NodID	Brace1	Brace2	Brace3
	JOINTGAP	0.050				
	JOINTGAP	0.070	1010	20100	20101	20102

This will force a gap = 0.050 to be used in all relevant capacity calculations for all joints except for joint 1010, where the braces 20100, 20101 and 20102, which will use a gap of 0.070. The other braces connected to joint 1010 will use a gap of 0.050.

Example 4:	'	Gap	NodID	Brace1	Brace2	Brace3
	JOINTGAP	0.070	1010	20100	20101	20102

This will force a gap=0.070 to be used for joint 1010, braces 20100, 20101 and 20102. The other braces connected to joint 1010 as well as all other joints with ChJoint specified will use the gap computed on basis on the structural model (coordinates and eventual offsets).

JNT_FORM form NodeIDs		
Parameter	Description	Default
Form	FE formulation for the "joint elements" introduced by the CHJOINT option. Capacity level or capacity multiplier. 0 : Beam-column representation. Default on old versions of USFOS, but no longer recommended. The three-hinge mechanism in the beam-column element may introduce numeric instabilities for the small "joint elements". Spring : P-δ spring representation. Un-coupled P-d curves with ductility limits will be generated automatically for each joint degree of freedom, based on the capacities specified under the CHJOINT record(s). Plast : Plasticity formulation including brace load interaction and joint (re)classification as specified by the JntClass record.	0
Node_IDs	Node(s) for which the formulation should be applied. NOTE If no nodes are specified, all joints get the actual formulation	
Use of the CHJOINT option will introduce extra elements in the FE model. The behaviour of these elements will be assigned according to the selected joint capacity rule or specified joint capacity. The FE formulation for the "joint elements" is selected by the JNT_FORM record. P-δ curves (option 1) are derived from the actual capacities as follows: Displacement = 0.1% of Chord diameter defines 'yielding' (confer JSURFSIZ) Displacement = 1.0% of Chord diameter defines maximum force/moment Displacement = 5.0% of Chord diameter defines end of maximum capacity Displacement = 10 % of Chord diameter defines fracture of joint The generated curves are printed in the '.out' - file, and the peak capacities will be printed using the Verify/Element/Information option in Xact. NOTE! If JNT_FORM <i>is not</i> specified, following defaults are used for the various joint capacity rules: ☐ API : formulation no. 0 ☐ UserSurface : formulation no. 0 ☐ UserSpring : formulation no. 1 ☐ MSL : formulation no. 3 It is possible to mix different Capacity rules and FE formulations in same analysis. This record may be repeated		


JNTCLASS interval		
Parameter	Description	Default
interval	Joints will be (re)classified according to geometry and force state at specified intervals during the analysis. The joint capacities will be updated according to the revised classification, P-δ curves for each joint degree of freedom and the Q_f factor will be updated. 0 : No joint classification. 1 : Continuous joint (re)classification. Joint capacities, non-linear joint characteristics and the Q_f factor will be updated at every step in the USFOS analysis. n > 1: Joints will be (re)classified at every n'th step. Joint capacities, non-linear joint characteristics and the Q_f factor will be updated at every n'th step in the USFOS analysis.	0
This record is only valid in combination with "JNT_FORM 3", i.e. when the "joint elements" are represented by the plasticity formulation. Ref. the JNT_FORM record. This record is given once		


JNTOPTION Keyword Joint ID's		
Parameter	Description	Default
Keyword	Subcommand defining the actual option: <i>Grouted</i> : The actual joint(s) uses grouted capacity formulation <i>NoGrouted</i> : Grout option is switched Off for the actual joints	
This record is only valid in combination with CHJOINT option. Example 1: JntOption Grouted 1001 2001 3001 Means that the joints 1001, 2001 and 3001 are using grouted joint formulation. The formulation described under CHJOINT is disregarded. NOTE: ChJoint must be defined for the actual joints. Example 2: JntOption NoGrouted 133 144 Means that the joints 133 and 144 are using the formulation described under CHJOINT. NOTE: If the chord members are defined as Grouted and default CHJOINT parameters are used, (minimum input), the joint formulation is changed to Grouted automatically. This record may be repeated		

CNOHINX nodex hinmx		
Parameter	Description	Default
nodex	External (user-specified) node number	
hinmx	Max number of plastic hinges to develop at this node	
This record may be used to control the number of plastic hinges to be developed at specified nodes (Sect 4.5) Number of plastic hinges can only be modified by the user when an elastic perfectly plastic model is selected, i.e. $ifysw = 1$ and $C_i = 0$ This record may be repeated		

6.3.9 Foundation Modelling

SPUDMAT										
matno	Type	Vpre	R_tot	β	G_v	G_H	G_R	ν	ϕ	
c	γ	[C8	C1	C7]						
Parameter	Description									Default
matno	Material number									
Type	Soil Type (= Sand)									
V_{pre}	Vertical preload									
R_{Tot}	Total Spudcan Radius									
β	Apex angle [deg]									
G_v	Shear module (vertical)									
G_H	Shear module (horizontal)									
G_R	Shear module (rotational)									
ν	Poisson number(soil)									
ϕ	Friction angle (soil) [deg]									
c	Cohesion (soil)									
γ	Effective unit weight (soil)									
C_8	Degree of "associated flow": 1.0 = Associated flow 2.0 = Non-uplift sliding									1.0
C_1	"Inner yield surface" parameter									0.3
C_7	Yield surface Transition parameter									1.4
This record is used to specify material properties for the nonlinear jackup foundation element (1 noded element). This material model is based on SNAME "Recommended Practice" If the apex angle is 90 degrees, the preload is a dummy variable , if the apex angle is less than 90 an effective radius is calculated based on the input. Local coordinate system is defined with the BNTRCOS card. Element coordinat system is shown in the figure below. This record may be repeated.										

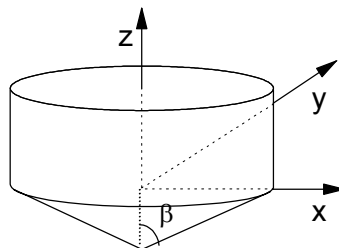

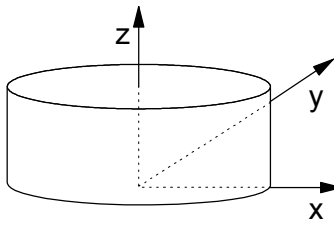SPUDMAT										
matno	Type	V_{pre}	R_{eff}	D_{emb}	A_s	G_v	G_H	G_R	ν	
		C_{uo}	α	Suct	[Bfill	C_8	C_1	$C_7]$		
Parameter	Description									Default
matno	Material number									
Type	Soil Type (= Clay)									
V_{pre}	Vertical preload									
R_{eff}	Effective spudcan radius									
D_{emb}	Embedment depth									
A_S	Spudcan laterally projected embedded area									
G_v	Shear module (vertical)									
G_H	Shear module (horizontal)									
G_R	Shear module (rotational)									
ν	Poisson number(soil)									
C_{UO}	Undrained cohesive shear strength at max bearing area (soil)									
α	Adhesion factor, 1.0 = soft clay -> 0.5 = stiff clay									
Suct	Suction flag: 1 = Suction, 0 = No suction									
Bfill	Backfill flag : 1 = Backfill, 0 = No backfill									0
C_8	Degree of associated flow: 1.0 = Associated flow 2.0 = Non-uplift sliding									1.0
C_1	“Inner yield surface” parameter									0.5
C_7	Yield surface transition parameter									1.0
This record is used to specify material properties for the nonlinear jackup foundation element (1 node element)										
Local coordinate system is defined with the BNTRCOS card.										
Element coordinat system is shown in the figure below.										
This record may be repeated.										
										

MSPUD										
matno	R	β	γ	ϕ	c	ν	V_{pre}	G_V	G_H	
	G_R	YFSW	C_8							
Parameter	Description									Default
matno	Material number									
R	Total radius of spudcan									
β	Apex angle [deg]									
γ	Effective unit weight (soil)									
ϕ	Friction angle (soil) [deg]									
c	Cohesion (soil)									
ν	Poisson number(soil)									
V_{pre}	Vertical preload									
G_V	Shear module (vertical)									
G_H	Shear module (horizontal)									
G_R	Shear module (rotational)									
YFSW	Yield Function switch: 0 = Yield function according to SNAME RP 1 = Old Yield function (SINTEF Geoteknikk)									0
C_8	Degree of associated flow(apply to SNAME model only): 1.0 = Associated flow 2.0 = Non-uplift sliding									1.0

This record describes the old format used to specify material properties for the **nonlinear jackup foundation** element (1 node element).


Only valid for Sand. Kept for backward compatibility only, the SPUDMAT record is recommended for new Models!

If the apex angle is 90 deg., the preload is a dummy variable.
Local coordinate system is defined with the **BNTRCOS** card.
Element coordinat system is shown in the figure below.
This record may be repeated.

PILE	ID	Nodex1	Nodex2	Soil ID	Pile Mat	Pile Geo	Local_coord	Imper
Parameter	Description							Default
ID	User defined number used to identify the Pile							
Nodex1	External (user-defined) node number defining end 1 of the pile (top)							
Nodex2	External (user-defined) node number defining end 2 of the pile (tip)							
Soil ID	Soil characteristics are defined by *SOILCHAR* record with this ID							
Pile Mat	Pile Material Properties are defined by the referred *MISOIEP* record							
Pile Geo	Pile Geometry is defined by the *PILEGEO* record with this ID							
Loc Coord	Local Coordinate System for the pile is defined by the referred unit vector. If omitted or equal to zero, default local coord system is used.							0
Imper	Pile Imperfection, reference to GIMPER record							0

This record is used to define a pile element.

This record may be repeated.

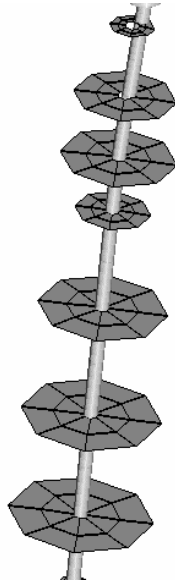

In XACT the pile is visualized with discs representing the soil defined in the referred SOILCHAR record.

The relative size of the discs reflect the relative strength of the soil weighting the T-Z capacity with a factor 100, and the P-Y capacity with 1.

Max disc diameter is 10 times max pile diameter.

Minimum disc diameter is 2 times pile diameter

By pointing on any soil disc using the option
verify - element - information
The peak soil capacities are printed.

Relative movement of the pile and the surrounding soil is visualized as well as the utilization of the soil.

The soil displacements are easier to observe with the mesh applied.

PILEGEO			ID	Type	Do	T
Parameter	Description					Default
ID	User defined number used to identify the Pile Geometry referred to on the PILE record					
Type	Pile Type. Pile type = 1 means a single Pipe with specified outer diameter and thickness.					
Do	Outer Diameter of the pile					
T	Wall Thickness of the pile					
This record is used to define a single pile geometry (type=1).						
This record may be repeated.						

PILEGEO								
ID	Type	Do	T	nPile	y_loc ₁	z_loc ₁	y_loc ₂	z_loc ₂
					y_loc ₃	z_loc ₃		
Parameter	Description							Default
ID	User defined number used to identify the Pile Geometry referred to on the PILE record							
Type	Pile Type. Pile type = 2 means a pile group with specified data							
Do	Outer Diameter of piles							
T	Wall thickness of piles							
nPile	Number of identical piles in this group							
y_loc ₁	Y-coord from PILE element axis to pile 1 centre, (local pile coord).							
z_loc ₁	Z-coord from PILE element axis to pile 1 centre, (local pile coord).							
y_loc ₂	Y-coord from PILE element axis to pile 2 centre, (local pile coord).							
z_loc ₂	Z-coord from PILE element axis to pile 2 centre, (local pile coord).							
etc ...								
This record is used to define a Pile Group geometry (type=2).								
This record may be repeated.								

PILE_D-T									
ID	Z_mud	{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			
		{ Z ₁	Z ₂	Do	T }	{ T }			

SOILDIAM ID Z_mud { Z ₁ Z ₂ D_soil Dummy } ₁ { Z ₁ Z ₂ D_soil Dummy } ₂ { Z ₁ Z ₂ D_soil Dummy } _n																																														
<i>Parameter</i>		<i>Description</i>				<i>Default</i>																																								
ID		User defined number used to identify the Pile Geometry referred to on the PILE record																																												
Z_mud		Z_coordinate of Mudline. Pipe data are given relative to mudline																																												
Z ₁ , Z ₂		Z-coordinates of the part of the piles to apply the specified Do and T, (relative to mudline defined above).																																												
D_soil		Diameter to be used in the soil capacity calculations within the actual Z-coordinate range.																																												
Dummy		Dummy parameter, which must be typed in																																												
This record is used to define Diameter to be used for the soil capacity calculations if the diameter is different from the actual steel pile's outer diameter NOTE 1 : This record will not influence the diameter and thickness used for the piles itself. NOTE 2 : The Z-axis is pointing upwards. This record may be repeated.																																														
Example <table><tr><td>'</td><td>ID</td><td>Nod1</td><td>Nod2</td><td>Soil_ID</td><td>Pile_Mat</td><td>Pile_Geo</td></tr><tr><td>PILE</td><td>1001</td><td>1</td><td>101</td><td>99</td><td>100</td><td>10</td></tr></table> ' <table><tr><td>ID</td><td>Type</td><td>Diam</td><td>Thick</td></tr><tr><td>PILEGEO</td><td>10</td><td>Single</td><td>1.22 0.030</td></tr></table> ' <table><tr><td>ID</td><td>Z_Mud</td><td>Z_Top</td><td>Z_Bott</td><td>SoilDiam</td><td>Dummy</td></tr><tr><td>SOILDIAM</td><td>10</td><td>Single</td><td>0.0 -50.0</td><td>1.22</td><td>0.0</td></tr><tr><td></td><td></td><td></td><td>-50.0 -55.0</td><td>5.00</td><td>0.0</td></tr></table> In this example, the steel pile has a diameter of 1.22, but from depth 50m below mudline, the soil capacity should be calaculated based on a diameter = 5.0m, (the pile capacity is still based on D/T=1.22/0.030).							'	ID	Nod1	Nod2	Soil_ID	Pile_Mat	Pile_Geo	PILE	1001	1	101	99	100	10	ID	Type	Diam	Thick	PILEGEO	10	Single	1.22 0.030	ID	Z_Mud	Z_Top	Z_Bott	SoilDiam	Dummy	SOILDIAM	10	Single	0.0 -50.0	1.22	0.0				-50.0 -55.0	5.00	0.0
'	ID	Nod1	Nod2	Soil_ID	Pile_Mat	Pile_Geo																																								
PILE	1001	1	101	99	100	10																																								
ID	Type	Diam	Thick																																											
PILEGEO	10	Single	1.22 0.030																																											
ID	Z_Mud	Z_Top	Z_Bott	SoilDiam	Dummy																																									
SOILDIAM	10	Single	0.0 -50.0	1.22	0.0																																									
			-50.0 -55.0	5.00	0.0																																									

SOILCHAR										
ID	Type	Z_Mud	D_ref	F_fac	L_fac	Z_top ₁	Z_bott ₁	P-Y	T-Z	Q-Z
						Z_top ₂	Z_bott ₂	P-Y	T-Z	Q-Z
										
						Z_top _n	Z_bott _n	P-Y	T-Z	Q-Z
Parameter	Description									Default
ID	User defined number used to identify the Soil Characteristics referred to on the PILE record									
Type	Soil Data Type= 1. Soil is defined through predefined curves.									
Z_Mud	Z_coordinate of Mudline. The soil data are given relative to mudline. The Z-axis is pointing upwards !									
D_ref	Reference Diameter, Soil data has been generated for this diameter									
F_fac	Scaling factor for the force unit used in the soil curves									
L_fac	Scaling factor for the length unit used in the soil curves									
Z_top ₁ Z_bott ₁	Z_coordinate to the top of soil layer 1, (relative to mudline, typical=0.0) Z_coordinate to the bottom of soil layer 1, (relative to mudline)									
P-Y	P-Y data is defined by the referred curve, (f.inst MISOPL, ELPLCURV) P is force per unit length of pile, Y is deformation of soil.									
T-Z	T-Z data is defined by the referred curve, (f.inst MISOPL, ELPLCURV) T is force per unit length of pile, Z is deformation of soil									
Q-Z	Q-Z data is defined by the referred curve, (f.inst MISOPL, ELPLCURV) Q is Tip force, Z is tip deformation.									
This record is used to define the Soil Characteristics referred to on the PILE record, and at the middle of each soil layer a discrete spring representing the soil is inserted automatically. Confer record SPRI_MOD below for selecting spring model to be used. Calculation of discrete spring Force / Displacement Characteristics representing the pile resistance for a given thickness of a soil layer is performed according to the following formulas: $P - Y : Force = \left(\frac{F_{fac}}{L_{fac}} \right) * \left(\frac{D_{pile}}{D_{ref}} \right) * Thickness * p$ $T - Z : Force = \left(\frac{F_{fac}}{L_{fac}} \right) * \left(\frac{D_{pile}}{D_{ref}} \right) * Thickness * T$ $Q - Z : Force = F_{fac} * Q * \frac{D_{pile}}{D_{ref}}$ All : Displacement = L_{fac} * (Soil deformation) This record may be repeated.										

SOILCHAR										ID	Type	Z_Mud	D_ref	F_fac	L_fac	Z_top ₁	Z_bott ₁	Soil_ID
																Z_top ₂	Z_bott ₂	Soil_ID
																		
																Z_top _n	Z_bott _n	Soil_ID
Parameter		Description															Default	
ID		User defined number used to identify the Soil Characteristics referred to on the PILE record																
Type		Soil Data Type= 2. Soil is defined through soil parameters, (f.inst API_SOIL).																
Z_Mud		Z_coordinate of Mudline. The soil data are given relative to mudline.																
D_ref		Reference Diameter, Soil data is generated for this diameter. D_ref does not have any influence on the results, but the generated curves will be printed for this diameter.																
F_fac		Scaling factor for the force unit. Soil curves are always generated using SI units (N and m). If f.inst the force unit is MN, F_fac=10 ⁻⁶																
L_fac		Scaling factor for the length unit. Soil curves are always generated using SI units (N and m). If f.inst the length unit is mm, L_fac=1000																
Z_top ₁		Z_coordinate to the top of soil layer 1, (relative to mudline, typical=0.0)																
Z_bott ₁		Z_coordinate to the bottom of soil layer 1, (relative to mudline)																
Soil_ID		The actual layer is defined by a API_SOIL record with this ID																
This record is used to define the Soil Characteristics referred to on the PILE record, and at the middle of each soil layer a discrete spring representing the soil is inserted automatically.																		
This record may be repeated.																		

SPRI_MOD model		
Parameter	Description	Default
model	Spring model to be used to model the soil nonlinear behaviour	0
This record is used to select the type of spring element to be used in connection with modelling of the soil nonlinear characteristics. Two alternatives are available: model = 0 : "old" nonlinear spring model, step scaling model = 1 : "new" plasticity formulation, no step scaling, iterations are recommended (at least 1 iteration) This record is given once		

SPRIDAMP <DoF> < Cdamp> < Elem1> <Elem2>		
Parameter	Description	Default
DoF	Actual Spring degree of freedom <i>Axial (or 1) : Axial degree of freedom of spring is damped</i> <i>ShearY (or 2) : Y translation degree of freedom is damped</i> <i>ShearZ (or 3) : Z translation degree of freedom is damped</i> <i>Torsion (or 4) : Torsion degree of freedom is damped</i> <i>Ymoment (or 5) : Y rotation degree of freedom is damped</i> <i>Zmoment (or 6) : Z rotation degree of freedom is damped</i>	:
Cdamp	Damping Characteristics given in consistent units. (Damper force = Cdamp * translation speed Damper moment = Cdamp * angular velocity)	
Elem1,...	List of 2 node Spring Element ID's NOTE : If no elements are specified, all springs are defined with the actual damping	
This record is used to define 'dashpot' damping of spring elements to be used in connection with dynamic analysis. Example 1: SPRIDAMP Axial 50000 10210 10220 10230 means that spring elements 10210, 10220 and 10230 get axial damping of 50000. If the units are N and m, the damping force : Force [N] = 50000 * Axial Speed [m/s] Example 2: SPRIDAMP Axial 50000 means that all spring elements get axial damping of 50000 Example 3: SPRIDAMP Axial 50000 SPRIDAMP Axial 30000 10210 10220 means that all spring elements get axial damping of 50000, except for elements 10210 and 10220, which get a damping of 30000. This record may be repeated		

API_SOIL	ID	Soil_type	Load_type	{ Data }
Parameter	Description			Default
ID	User defined number used to identify the API Soil Characteristics referred to on the SOILCHAR record			
Soil_type	Soil Type SoftClay : Soft Clay StifClay : Stiff Clay Sand : Sand			
Load_type	Load type Static : Static Loading, (monotonic). Cyclic : Cyclic Loading, (stabilized cyclic behaviour of pile during complete loading history).			
{ Data }	Clay (Soil type 1 and 2) : { γ pl s_u ϵ_{50} J TResF Q_pLim }, where unit γ : Effective unit weight of soil. [N/m ³] pl : pl=0 : unplugged pl=1 : plugged s_u : Soil undrained shear strength. [N/m ²] ϵ_{50} : Strain which occurs at 50% of maximum stress on laboratory undrained compression test. J : Experimental coefficient, can be taken to 0.5 for Mexican Gulf sediments, 0.25 otherwise. TResF : Tres/TPeak ratio (ref Sec. G API RP2A 1993) Typical values : 0.7 - 0.9 Q_pLim : Limit of pile tip resistance [N/m ²] Sand (Soil type 3) : { γ pl ϕ δ N_q Q_pLim }, where unit γ : Effective unit weight of soil. [N/m ³] pl : pl=0 : unplugged pl=1 : plugged ϕ : Angle of internal friction (typical 10-45)[Deg] δ : Pile-soil interface friction (typical 15-45)[Deg] N_q : End bearing factor (typical 8-50) Q_pLim : Limit of pile tip resistance [N/m ²]			
This record is used to define the properties of the API Soil referred to on the SOILCHAR record. This record may be repeated.				

6.3.10 Fracture/Ductility Control

CFRACT
If CFRACT is specified, all beam elements are checked for fracture (plastic tension exceed a specified limit) If CFRACT is not specified, no fracture checking will be performed (MFRACT-records are not fracture check switch) The fracture criteria of the materials should be user defined (using MFRACT-records), because the local conditions (flaw size etc), can not be predicted generally This record is given once

MFRACT							matno	crit-CTOD	σ_u	ε_u	ε_s	a
Parameter	Description											Default
matno	Material number											
Crit-CTOD	Critical crack tip opening displacement											
σ_u	Ultimate stress (typical value: 1.3 σ_y)											
ε_u	Ultimate strain corresponding to σ_u (typical value: 0.15)											
ε_s	Strain level at the beginning of hardening (typical value: 20.0 ε_y)											
a	Flaw size											
Critical CTOD and the flaw size parameter a should have the same dimension												
This record specifies additional information to the MISOIEP -record with the same material number												
<i>Note!</i>	The value of the fracture check is strongly dependent on the input parameters. It is the responsibility of the user to give adequate data for the critical CTOD and the flaw size. Confer Sect 3.15 - "Element Fracture" for a discussion of this. The following condition should also be satisfied if the fracture check is to be used											
	$crit\ CTOD < \pi \varepsilon_u \frac{\sigma_u}{\sigma_y} \cdot a$											
	where σ_y = yield stress											

USERFRAC		List_Type	Crit_Type	[Criterion]	ID_List																		
Parameter	Description				Default																		
ListType	Definition of the ID_List specified. Actual List Types: <i>Element</i> : The "ID_List" contains Element ID's <i>Material</i> : The "ID_List" contains Material ID's, and all beam elements referring to the actual material ID's get the actual UserFrac Parameters. <i>Geometry</i> : The "ID_List" contains Geometry ID's, and all beam elements referring to the actual Geometry ID's get the actual UserFrac Parameters.				Cut																		
Crit_Type	Type of criterion to be used: <i>Cut</i> : Element is just removed <i>Time</i> : Element is removed at given <i>time</i> <i>Lcomb</i> : Element is removed at the specified loadcomb/loadlevel <i>Util</i> : Element is removed if exceeding specified utilization <i>Strain</i> : Element is removed if the estimated tensile strain exceeds the specified limit.																						
Criterion	Criterion for element removal: <table><tr><td>Type</td><td>[Criterion]</td><td>Description</td></tr><tr><td>Cut</td><td>-- N.a. --</td><td></td></tr><tr><td>Time</td><td><i>time</i></td><td>Time for element removal</td></tr><tr><td>Lcomb</td><td><i>LComb Level</i></td><td>Loadcomb and Loadlevel</td></tr><tr><td>Util</td><td><i>Util</i></td><td>Member utilization (f ex 1.05)</td></tr><tr><td>Strain</td><td><i>Strain</i></td><td>Strain level (f ex 0.15)</td></tr></table>				Type	[Criterion]	Description	Cut	-- N.a. --		Time	<i>time</i>	Time for element removal	Lcomb	<i>LComb Level</i>	Loadcomb and Loadlevel	Util	<i>Util</i>	Member utilization (f ex 1.05)	Strain	<i>Strain</i>	Strain level (f ex 0.15)	
Type	[Criterion]	Description																					
Cut	-- N.a. --																						
Time	<i>time</i>	Time for element removal																					
Lcomb	<i>LComb Level</i>	Loadcomb and Loadlevel																					
Util	<i>Util</i>	Member utilization (f ex 1.05)																					
Strain	<i>Strain</i>	Strain level (f ex 0.15)																					
ID_List	List of ID's for which the UserFrac should be applied. The Id's are interpreted as defined in <i>ListType</i> (Elem, Mat or Geo).																						

This record may be used to force *one* element to be fractured.

The 'fracture' will become active the step after the step detected the fracture, and the forces in the specified element will be removed. The element will not contribute to the global stiffness in the succedent steps

Example1

	<i>ListTyp</i>	<i>CritTyp</i>	<i>Crit</i>	<i>ID_List</i>
UserFrac	Elem	Strain	0.15	1001 1002 1003

Will apply a strain fracture criterion (15%) on elements 1001 1002 and 1003.


Example2

	<i>ListTyp</i>	<i>CritTyp</i>	<i>Crit</i>	<i>ID_List</i>
UserFrac	Geo	Strain	0.15	51012 51015

Will apply a strain fracture criterion (15%) on all elements referring to Geometry ID's 51012 and 51015.

This command may be repeated.

6.3.11 Fire(Temperature Response) Analysis

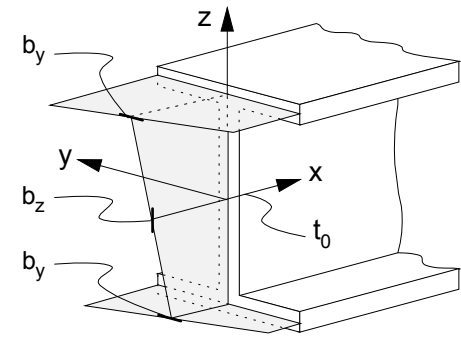BELTEMP llc elnox t ₀ t _{ygrad} t _{zgrad} (pfp _{crack_ang})		
Parameter	Description	Default
llc	Load case number	
elnox	External (user-defined) element number	
t ₀	Element mean temperature	
t _{ygrad}	Temperature gradient in local y-direction of beam section (°C per unit length)	
t _{zgrad}	Temperature gradient in local z-direction of beam section (°C per unit length)	
		
pfp _{crack_ang}	Maximum accepted plastic rotation of the beam element before the passive fire protection is assumed to be cracked/damaged. If the plastic rotation exceeds this limit, the element is removed (fractured).	
This record contains specification of temperature increments with temperature gradients over the beam element cross section, or mean temperature increments for the plate element. Gradients are not given for the plate element		
This record may be repeated		

ELEMTEMP					llc	type	[Data_Set]	iel1	iel2	iel3	
Parameter	Description									Default	
llc	Load case number										
type	Definition of the Data_Set, see below.										
[Data_Set]	Actual temperature Data_Set, see below.										
iel1, iel2 ...	External (user-defined) element number,(s). If no elements are specified, all elements get the specified temperature data.										

This record contains specification of detailed temperature increments generated by FAHTS.

This record may be repeated.

The definition of the **Data_Set** is as follows:

Type = 1 : Data_Set consists of 3 values: t_mean, t_grad_Y and t_grad_Z

Type = 2 : Data_Set consists of an arbitrary number of values:

 n x1 y1 z1 t1 x2 y2 z2 t2 xn yn zn tn, where

 n is number of points with temperature data

 x,y,z are coordinates to the actual point, (local cross-sect coords)

 t is actual temperature increment.

CTFRACT

If **CTFRACT** is specified, all beam elements are checked for fracture due to elevated temperature in the material

If **CTFRACT** is not specified, no temperature fracture checking will be performed

Note! The **TFRACT**-record do not activate fracture checking

This record is given once

TFRACT matno T-fract Sy-fract E-fract

Parameter	Description	Default
matno	Material number	
T-fract	Critical element temperature at reference axis for element fracture	
Sy-fract	Yield stress degradation factor for element fracture. Defined by the ratio: Yield stress at temperature T to the yield stress at 0° C	
E-fract	Elastic modulus degradation factor for element fracture. Defined by the ratio: Elastic modulus at temperature T to the elastic modulus at 0° C	

This record specifies additional information to the **MISOIEP**-record with same material number

Note! For the case when all elements connected to a node fractures, numerical problems will occur in the solution algorithm

STEELTDEP Curve no Mat no 1 Mat no 2		
Parameter	Description	Default
Curve no	Actual Steel Reduction Curve No, see below.	
Mat no	Material numbers, (referring to MISIOEP), to be defined temperature dependent. If no material numbers are specified, all materials (MISIOEP) get this temperature curve.	
With this record, the user specifies the temperature dependent material properties by pre-defined Steel curves.		

ALUMTDEP Curve no Mat no 1 Mat no 2		
Parameter	Description	Default
Curve no	Actual Aluminium Reduction Curve No, see below.	
Mat no 1	Material numbers, (referring to MISOIEP), to be defined temperature dependent. If no material numbers are specified, all materials get this temperature curve.	
With this record, the user specifies the temperature dependent material properties by pre-defined Aluminium curves.		

TDEPFUNC Curve no Type [Data]		
Parameter	Description	Default
Curve no	Curve ID no to be referred to from the records *STEELTDEP*, *ALUMTDEP*, and *USERTDEP.	
Type	Function type: 1: Polynomial expression 2: (Vacant)	
[Data]	Parameters required for the actual function type. For function type = 1 the required data are: The coefficients: $A_0, A_1, A_2, \dots, A_n$ to be used in the expression: $f(T) = A_0 + A_1T + A_2T^2 + \dots + A_nT^n$	
With this record, the user specifies a temperature-reduction curve used to control the material properties at different temperature levels. This record may be repeated.		

USERTDEP					Mat no	Dep E	Dep Yield	Dep Plastic	Dep Exp.
Parameter	Description							Default	
Mat no	Actual Material ID no to be defined temperature dependent, (ref to MISOIEP with same ID no).								
Dep E	E_mod defined in MISOIEP record is scaled according to the defined TEMPDEPY curve number. Omitted or 0 means default curve.							0	
Dep Yield	Initial Yield Stress defined in MISOIEP is scaled according to the defined TEMPDEPY curve number. Omitted or 0 means default curve.							0	
Dep Plast	Effective Yield Stress referring to the same Yield Stress defined in MISOIEP record is scaled according to the defined TEMPDEPY curve. If omitted or 0, the curve for initial yielding is used.							0	
Dep Exp.	Thermal Expansion Coefficient defined in MISOIEP record is scaled according to the defined TEMPDEPY curve number. Omitted or 0 means default, (temperature independent).							0	
With this record, the user specifies the temperature dependent material properties by referring to user defined temperature-reduction curves.									

LCASETIM L-Case Time		
<i>Parameter</i>	<i>Description</i>	<i>Default</i>
L_Case	Actual load case number to be connected to a time.	
Time	Time corresponding to completed loadcase.	
With this record the user may connect a time to each loadcase. This is f. inst. used in connection with fire analyses where the different loadcases, (defined through BELTEMP), correspond to a time, (duration of the fire). This record may be repeated.		

FIRECHK LCase _{CHK} Yield _{RED} E _{RED} Temp _{LIM}		
Parameter	Description	Default
LCase _{CHK}	Actual load case to check	
Yield _{RED}	Lowest accepted Yield reduction factor.	
E _{RED}	Lowest accepted E-Mod reduction factor.	
Temp _{LIM}	Highest accepted Element temperature.	
With this record the user may perform a normal static analysis, but with the temperature at a given temperature load step. The material properties fore every element are adjusted according to the actual temperature. If the Yield, or E-mod or Temp criterion are exceeded for an element, the element is removed (becomes nonstru). A positive LCase number means that the check is performed for the actual load case state. A negative LCase means “all time high” temperature for each element up to the actual load case. This record is given once.		

6.3.12 Ship Impact analysis

BIMPACT ldcx elnox elpos energy extent. xdir ydir zdir ship		
<i>Parameter</i>	<i>Description</i>	<i>Default</i>
ldcx	Load case number	
elnox	External (user-defined) element number	
elpos	Position of impact 1: Impact on member end 1 2: Impact on member end 2	
energy	Impact energy (energy unit) = (yield stress unit) · (length unit) ³ If σ_y in MN/m ² and length in m ==> give energy in MNm	
extent.	Extension of the impact area along the beam length (given in the actual length unit)	
xdir ydir zdir	Direction of the impact, referred to global coordinates	
ship	Reference number for local ship indentation characteristics (record MSHIP) 0: All energy is absorbed by the structure >0: Local indentation and energy absorbtion in the ship is calculated according ship "material" number, ship (MSHIP data)	

This record is used to define ship impact load and may be repeated

The impact energy must be specified in units consistent to external loads and nodal deformations

$$W = F * u$$

When the total impact energy has been dissipated, the impact load will be unloaded in a separate, program-defined load case

Note that both excessive member straining (fracture) and joint failure must be evaluated in connection with the impact simulation. These checks can be included in the USFOS analysis (records **CHJOINT**, **CFRACT**, **MFRACT**), but the results should be subjected to a separate validation by the user. In particular the fracture criterion parameters should be carefully evaluated before application

Local denting under the impact load is only calculated for tubular sections

The impact analysis will be terminated if fracture occurs

The "CUSFOS" line is somewhat different from the 'normal' for the ship impact loadcase

Example follows (see CUSFOS description):

<lcase>	<lfact>	<mxld>	<nstep>	<minstp>
3	1.0	0.0	50	0.01

lcomb: Ship impact load case no

lfact: Load factor for the nodal load suggested by USFOS, *lfact* = 1.0 is recommended

mxld: Max value of the suggested nodal load. The maximum is unknown, and is set equal to 0

nstep: Max number of steps used to reach the defined energy

minstp: Min step, see "CUSFOS"


MSHIP					ship	p1	p2	p3	d1
Parameter	Description							Default	
ship	Ship "material" number								
p1	Collision load at zero indentation								
p2	Collision load at 50% of maximum indentation								
p3	Collision load at maximum indentation								
d1	Maximum indentation								
This record is used to define local ship indentation characteristics This record may be repeated The ship indentation and corresponding forces must be specified in units corresponding to external loads and nodal deformations. As default, the values recommended in /9/ are implemented, defined in (MN) (MegaNewtons) and (m) (meters), respectively If the impact force exceeds the maximum indentation force (<i>p3</i>), no further indentation of ship energy absorption is calculated Default ship-indentation data are used if <i>p1</i>, <i>p2</i>, <i>p3</i> and <i>d1</i> are left out									

MULT_IMP										
Parameter		Description							Default	
This record is used to swith ON multiple impact analysis, which means that several BIMPACT record could be executed in sequence. The option is used in connection with fracture control of impacted members, and makes it possible to let the impact energy be absorbed by several members.										
This record is given once										
<u>Example:</u>										
'										
		LCase	Elem	Pos	Energy	extent	xdir	ydir	zdir	ship
BIMPACT		2	11	2	14E6	0.0	1	0	0	0
BIMPACT		3	121	2	0.0	0.0	1	0	0	0
MULT_IMP										
		Elem	TypCrit	Crit						
USERFRAC		11	Strain	0.15						
CUSFOS 10 15 1.0 1.0										
'										
		LCase	IFact	mxld	nStep	MinStp				
		2	1.0	0.0	200	0.01				
		3	1.0	0.0	200	0.01				
It is specified an impact on element 11, and for strain above 15%, the elment becomes fractured. If element 11 failed before all 14 MJ was absorbed, the remaining energy will be applied as a new impact on element 121. (Load case 2 is terminated when elem 11 fails, and next Cusfos “line” is activated. Load Case 3 is also a BIMPACT load, and the remaining energy from loadcase 2 is added to the energy specified for BIMPACT 3 (which here is 0.0).										

BIMPDATA Type { Data }		
Parameter	Description	Default
Type	Data Type to be specified. <i>PileThick</i> : Specification of Pile-In-Leg data."Data" contains the thickness and a list of Elements to which the pile in leg data should be applied.	
Data	On or more numbers defining the Type. .	
This record is used to specify additional data to be used for Boat impact analysis.		
This record is given once		
<u>Example:</u> <pre> ' Type Tick Legelm1 LegElem2 ,, ... BIMPDATA PileThick 0.035 103 203 303 </pre> Inside leg elements 102, 203 and 303, piles with thickness 0.035m exist. The pile will have impact on the local (wall) dent growth caused by the concentrated boat impact. For boat impact on elements 103 – 303 the effect from the inner pile will be accounted for.		

DYNIMPCT										Idcs	elnox	elpos	V_ship	Mass	xdir	ydir	zdir	NL_ship	Time
Parameter	Description																		Default
Idcs	Load case number																		
elnox	External (user-defined) element number																		
elpos	Position of impact 1: Impact at member end 1 2: Impact at member end 2 3: Impact at member midspan, (element is sub_divided)																		
V_ship	Ship Speed in the actual direction																		
Mass	Ship Mass																		
xdir ydir zdir	Direction of the impact, referred to global coordinates																		
NL_ship	Reference number for local ship indentation characteristics (record MISOPL) 0: Default elastic spring with 'infinite' stiffness. >0: Resulting hit member and ship indentation and energy is calculated according to the nonlinear spring material number, NL_ship (MISOPL data) <0: No spring is inserted between the mass and the structure.																		0
Time	Time for ship mass rebound. If omitted, the ship mass is detached from the structure when the inserted spring force changes from compression to tension. NOTE: Mandatory if NL_ship < 0!																		
This record is used to define ship impact load and is given once. The Ship speed and mass should be specified in SI-units, (kg, m and s). This record is not available together with BIMPACT and MSHIP. The option is available together with Dynamic Analysis only!																			

6.3.13 External pressure Effects

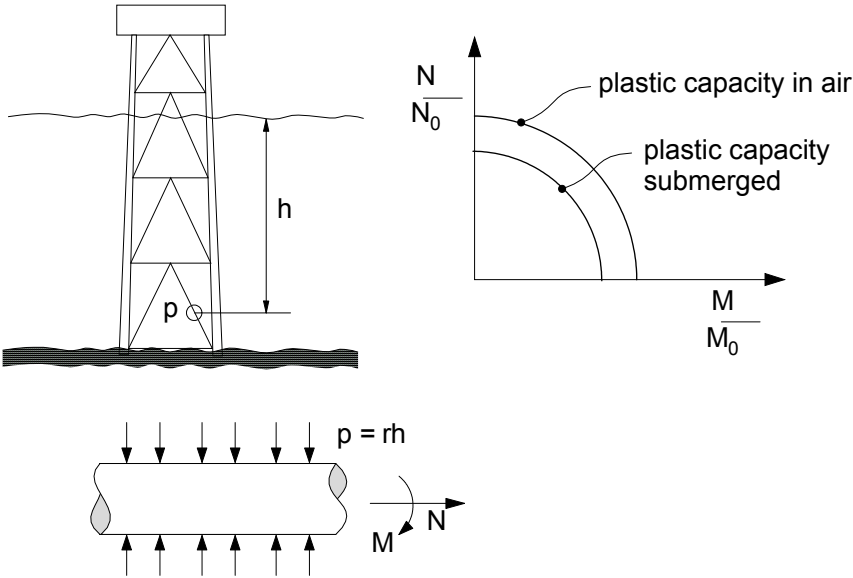
EXTPRES elnox1 elnox2 elnox3 		
Parameter	Description	Default
elnox<i>	External element number i	
This record is used to identify tubular beam elements with external hydrostatic pressure On basis of the element position, the hydrostatic pressure is calculated and imposed on the element at the initiation of the analysis, i.e. prior to imposing loads specified in the CUSFOS, CICYFIS or CDYNAMIC records. The external pressure option affects the plastic axial and moment capacities of the tubular cross section <i>Note!</i> Sea surface level must be specified by use of the SURFLEV record 		

SURFLEV hisurf losurf density gravity		
Parameter	Description	Default
hisurf	Sea surface level defined by the global reference system z-coordinate	
losurf	Sea bottom level defined by the global reference system z-coordinate	
density	Fluid density (use consistent units!)	
gravity	Acceleration of gravity in global z-direction (use consistent units!)	
This record is used to identify the sea surface level and sea bottom position relative to the structure, as well as properties of the surrounding fluid		
NOTE ! This record does not define the data required by the wave load routines ! To be used together with the EXTPRES option only !		

6.3.14 Super-element / Sub-structure Modelling


SUPERELM Elem ID nNodes Nodex_1 Nodex_2 Nodex_n Material		
Parameter	Description	Default
Elem ID	Element ID of the super element	
nNodes	Number of Element Super Nodes , (nodes to be connected to the global frame model).	
Nodex_1	User defined node ID in the global frame model to which super node 1 is connected to	
Nodex_2	User defined node ID in the global frame model to which super node 2 is connected to	
Nodex_n	User defined node ID in the global frame model to which the last super node is connected to	
Material	Material ID number referring to the *MISOIEP* record defining the nonlinear material properties of the superelement. If material ref. is omitted, Material defined on the local superelement file is used.	
With this record, the user defines a superelement to be included in the frame model, (f.inst a shell model of a tubular joint). <i>(Not yet implemented)</i>. For each substructure, following USFOS prompt will appear: Super Element no prefix : The super element file (with extension .fem), contains all necessary FEM-data. The super element data might be defined in any of the available file formats. This record may be repeated.		

SUBSTRU matno		
Parameter	Description	Default
matno	Material number for the super element stiffness matrix which is generated on the basis of the input substructures	
This record may be used to perform a substructure analysis in order to calculate the super element stiffness matrix (by means of static condensation of the internal nodes) for the structure in the geometry file. The super element stiffness matrix which is identified by the material number <i>matno</i> specified by the user, may be input to a subsequent USFOS analysis The super element stiffness matrix is written to the print file according to the "AMATRIX" and "ADMSTIFF" record formats The element super nodes have to be specified on the BNBCD records The super element matrix is output in the global reference system		

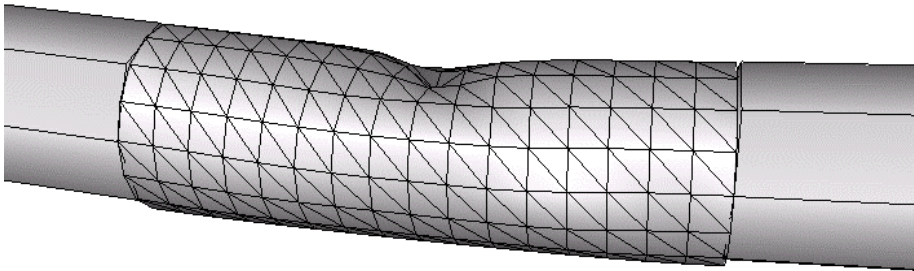
SUBSHELL Elem ID		
Parameter	Description	Default
Elem ID	Element ID of beam element to be replaced by an <i>automatically generated shell element substructure</i> .	
With this record, the user specifies the beam element, which will be replaced by an automatically generated shell element substructure. The beam element properties, (material, wall thickness) are transferred to the shell model.  Results for the shell substructure are presented in Xact together with the rest of the structure. This record may be repeated.		

SSH_LOAD										
	Lcase	Elem ID	Fx	Fy	Fz	Typ	X _c	φ _c	Ext_X	Ext_Arch
Parameter	Description									Default
Lcase	Load Case number									
Elem ID	Element ID of the beam element (subshell must have been defined)									
Fx, Fy, Fz	Total force to be applied referring to Global Corodinate System									
Typ	Cross section type of the beam									
X _c	Center of the load in x-direction referring to local beam coord system									
φ _c	Center of the load in φ-direction referring to local beam coord system									
Ext_X	Extent of load in X-direction									
Ext_Arch	Extent of load in φ-direction									


With this record, the user specifies a local load to be applied on a Shell Beam element.

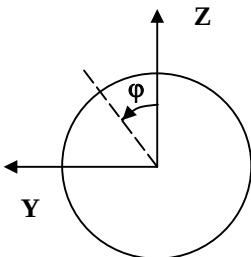

Definition of φ

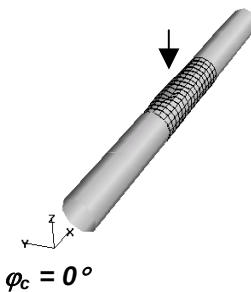

φ_c = 0°


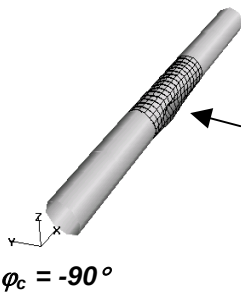


φ_c = -90°

Example :

	LCase	Elem_ID	Fx	Fy	Fz	Typ	Xc [m]	Phic [Deg]	Ext_X[m]	Ext_Arch [Deg]
SSH_Load	2	23	10.0E3	0	0	Pipe	1.5	-90	0.5	30

In the example, a force in **global** X-direction ia applied on beam element no 23. The load is attacking the beam at position x=1.5 m and φ = 90° (referring to **local** beam coordinate system). The total Fx force is distributed over an area 0.5 m in X-direction and 30° in circumferential direction.

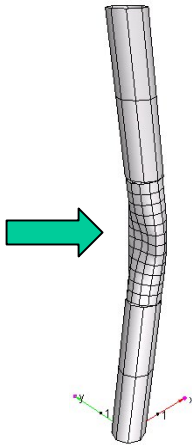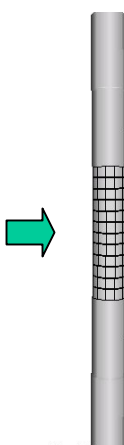


This record may be repeated.

MESHPIPE						
	nLength	nCirc	Elem ID ₁	Elem ID ₂	Elem ID ₃	
Parameter	Description					Default
nLength	Number of shell elements in longitudinal direction					
nCirc	Number of shell elements in circumferential direction					
Elem ID	Element ID of beam element(s) with pipe cross section.					

With this record, the user specifies the mesh density of beam element which will be replaced by an automatically generated shell element substructure

Note that the *nLength/nCirc* parameters define the quadrilateral mesh, and if triangular elements are used, two elements are defined per quad as seen in the figure below.

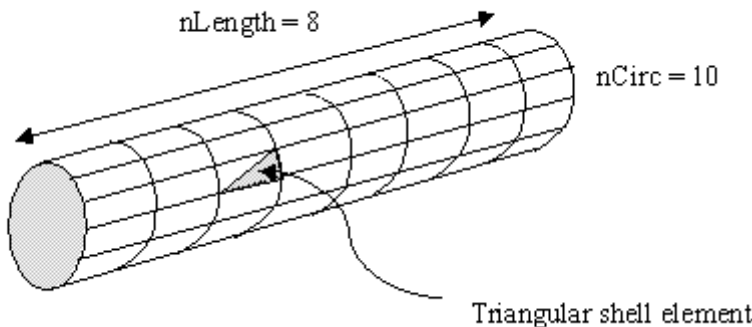


The diagram illustrates a cylindrical pipe discretized into a mesh of shell elements. The longitudinal direction is divided into 8 segments, labeled 'nLength = 8'. The circumferential direction is divided into 10 segments, labeled 'nCirc = 10'. A callout from the mesh points to a specific element, labeled 'Triangular shell element', which is shown as a triangle within the cylindrical structure.

This record may be repeated.

MESHBOX			nLength	nSide	nTop	nBott	Elem ID ₁	Elem ID ₂
Parameter	Description	Default						
nLength	Number of shell elements in longitudinal direction							
nSide	Number of shell elements on the two profile sides							
nTop	Number of shell elements on top "flange"							
nBott	Number of shell elements on bottom "flange"							
Elem ID	Element ID of beam element(s) with box cross section.							

With this record, the user specifies the mesh density of beam element which will be replaced by an automatically generated shell element substructure

Note that the *nLength/nSide/nTop/nBott* parameters define the quadrilateral mesh, and if triangular elements are used, two elements are defined per quad as seen in the figure below.

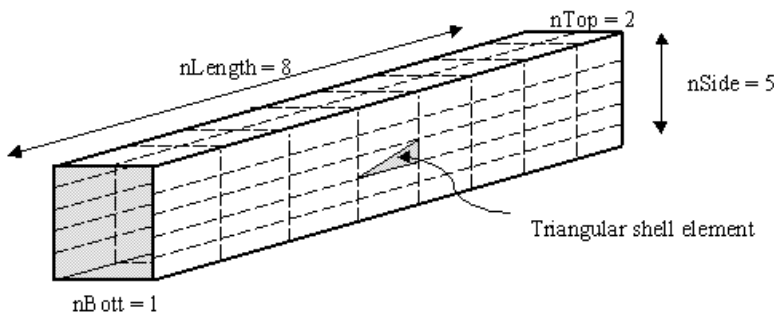


This record may be repeated.

MESHIPRO			nLength	nWeb	nTop	nBott	Elem ID ₁	Elem ID ₂
Parameter	Description							Default
nLength	Number of shell elements in longitudinal direction							
nWeb	Number of shell elements on the profile web							
nTop	Number of shell elements on top “flange”							
nBott	Number of shell elements on bottom “flange”							
Elem ID	Element ID of beam element(s) with I - cross section.							

With this record, the user specifies the mesh density of beam element which will be replaced by an automatically generated shell element substructure

Note that the *nLength/nWeb/nTop/nBott* parameters define the quadrilateral mesh, and if triangular elements are used, two elements are defined per quad as seen in the figure below.

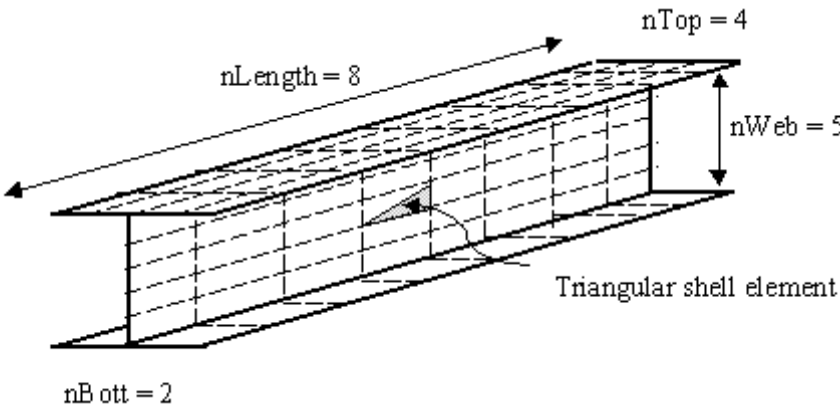

This record may be repeated.

6.3.15 Miscellaneous

ACTIVELM type l-comb elnox1 elnox2		
(time)		
Parameter	Description	Default
type	Activating type = 1	
l-comb (time)	Static analysis : The elements are activated at the specified loadcomb Dynamic analysis : The elements are activated at the specified time	
elnoxi	External (user defined) element numbers of elements to be activated.	
The user may use this record to control the activation of elements (that is, when one or more elements should contribute to the system stiffness) <i>Example 1 , Static analysis:</i> <pre>' Typ LComb Elm_ID... ACTIVELM 1 5 1001 1002</pre> means that elements 1001 and 1002 are activated at loadcombination 5. <i>Example 2 , Dynamic analysis:</i> <pre>' Typ Time Elm_ID... ACTIVELM 1 25 1001 1002</pre> means that elements 1001 and 1002 are activated at time = 25 seconds. This record may be repeated		

TOTL2INC lc-start lc-end		
Parameter	Description	Default
lc-start	First load-case of the total_load	
lc-end	Last load-case of the total_load	
With this record, the user defined total load-vectors are transformed to incremental load vectors. Load-cases with loadcase-number less than <i>lc-start</i> or greater then <i>lc-end</i> are not changed Nodal loads, element-loads and temperature loads are processed Note! The loadcases must be given successively within the defined loadcase interval. This record is given only once.		

COROLOAD I_Case Elem_1 Elem_2		
<i>Parameter</i>	<i>Description</i>	<i>Default</i>
I_Case	Actual load case number	
Elem_1	Element 1 having a co-rotated load applied	
Elem_2	Element 2 having a co-rotated load applied	
With this record the user may specify load cases and elements for which the distributed load should be treated as co-rotated loads defined in the local beam co-ordinate systems. NOTE! The distributed loads are defined in the local element co-ordinate system for the beams/load cases defined. A z-component, will f. ex. be applied in the beam local z-axis. This record may be repeated.		

SI Type nMst nSlv { Mst ₁ mst ₂ ...mst _{nMst} }. { Slv ₁ slv ₂ ...slv _{nSlv} }.		
<i>Parameter</i>	<i>Description</i>	<i>Default</i>
Type	Sliding Interface Type:	
	MatBeam : Beam/Beam contact specified through material ID's	
nMst	Number of master surfaces	
nSlv	Number of slave surfaces	
Mst ₁ -Mst _n	Master Surface material ID's	
Slv ₁ - Slv _n	Slave Surface material ID's	
With this record the user may specify activation of the contact search procedure, which automatically detects contact between structural members. This record may be repeated.		

Invisible Type Id_1 Id_2 		
Parameter	Description	Default
Type	Data type used to specify invisible elements: Material : The specified Id's are material numbers. All non-linear spring elements referred to these materials are not visualized in Xact	
Id_1	Nonlinear spring Material number 1	
Id_2	Nonlinear spring Material number 2 etc...	
With this record the the user may specify nonlinear spring elements to become invisible in XACT. <i>Example 1 :</i> Assuming materials 101 and 102 are of type MREF. The command: Invisible Material 101 102 will make all non-linear spring elements referred to any of the two materials invisible in XACT. This record may be repeated.		

GROUPDEF		ID	ListType	{ List }
Parameter	Description			Default
ID	Group ID			
ListType	Definition Type:			
	<i>Element</i> : Element ID list			
	<i>Material</i> : Material ID list			
	<i>Geometry</i> : Geometry ID list			
	<i>Group</i> : Group ID list			
{ List }	List of actual ID's			

This record is used to define an element group, which could be referred to in connection with specification of f ex NONSTRU input.

Example 1: GroupDef 88 Geom 27304 27305 27306

All elements referring to one of the cross section geometry ID's: 27304. 27305 or 27306 will become a 'member' in "Geometry Group 88".


Example 2: GroupDef 66 Mat 210355 210345

All elements referring to one of material ID's: 210355 or 210345 will become a 'member' in "Material Group 66".


Example 3: GroupDef 1001 Group 66 88

All elements, which are members in one of the groups with ID's: 66 or 88 will become a 'member' in "Group of groups 1001".

Typical Use:

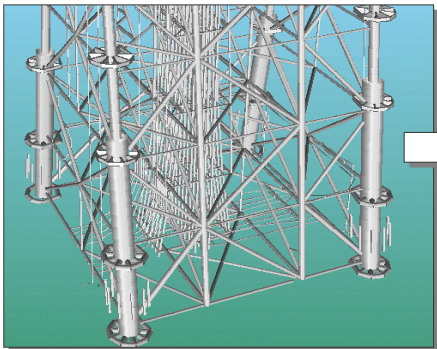

Original Model

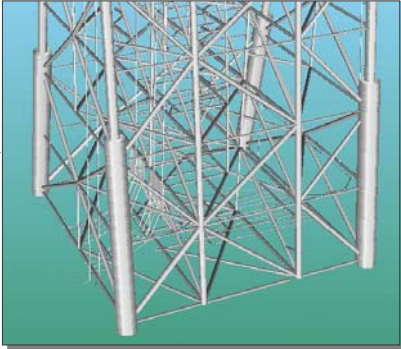

Using a few commands, a large number of elements are defined "Non Structural".

This record may be repeated

GROUPNOD GroupID Node ₁ Node ₂ Node ₃ Node _i		
Parameter	Description	Default
GroupID	Actual Group ID	
Node _i	Nodes to be included in the actual group.	
With this command the user may specify nodes to become members in the actual group. By default, the nodes to which the elements in a given group are attached to become members in the actual group. In connection with the NONSTRU command, loads on non structural members are transferred to nearest node <i>within same group</i> with at least one <i>structural</i> member attached. If the loads should be “guided” towards special nodes, (if, for example, all nodes in a given group are attached to non structural members only) including these nodes in the actual group will ensure correct load transfer.  If wanted, the forces on the <i>non structural</i> conductors could be transferred automatically to the nearest jacket legs. This record may be repeated.		

Chg_Mat Mat_Id Type {Id_List}		
Parameter	Description	Default
Mat_ID	Material ID to be used (to override existing reference)	
Type	Data type used to specify the elements:	
	Element : The specified Id's are element numbers.	
	Geo : The specified Id's are geometry numbers.	
	Group : The specified Id's are group numbers.	
{Id_List}	One or several id's separated by space	
With this record the user may override the material referred to on the structural file. In the analysis the specified material is used for all listed elements. The elements are listed either directly (element list) or in directly (using geometry or group references). <u>Example 1 :</u> Chg_Mat 210420 Elem 101 102 103 The command implies that elements 101 102 103 will used material property 210420 in the analysis independent on what materials the elements are referred to on the structural file. <u>Example 2 :</u> Chg_Mat 210420 Geo 52012 55013 60015 The command implies that all elements referring to one of the geometries 52012 55013 60015 will used material property 210420 in the analysis independent on what materials the elements are referred to on the structural file This record may be repeated.		

Chg_Boun ix iy iz irx iry irz Type {Id_List}		
Parameter	Description	Default
ix, iy,...	Boundary cond code for the 6 dofs. 0: Free, 1: Fixed	
Type	Data type used to specify the node(s): Node : The specified Id's are node numbers. All : All nodes get the actual boundary code	
{Id_List}	One or several id's separated by space	
With this record the user may override the boundary conditions defined on the structural file. In the analysis the specified boundary codes are applied to all listed nodes. The nodes are listed directly (node ID list) or all in once. <u>Example 1 :</u> Chg_Boun 1 1 1 0 0 0 Node 101 102 103 The command implies that nodes 101 102 103 will be <i>translation fixed</i> and <i>rotation free</i> in the analysis, (independent on how the boundary conditions are defined in the structural file). <u>Example 2 :</u> Chg_Boun 0 0 0 0 0 0 All Chg_Boun 1 1 1 1 1 1 Node 1001 1002 1003 1004 The command implies that all nodes get boundary condition <i>free</i> for all degrees of freedom, except for the four nodes 1001 1002 1003 1004, which are fully fixed. This record may be repeated.		

SWITCHES <i>Keyword SubKey Value</i>				
Parameter KeyWord SubKey	Description			Default
	Definition of actual switch / parameter. Available keywords / SubKeys:			
	<i>KeyWord</i>	<i>SubKey</i>	<i>Description</i>	
	WaveData	TimeInc	Time between hydrodyn calculation	
		NoDoppler	Switch OFF Doppler effect	
		NoStore	Do not store data for visualization of wave	
	StatusPrint	MaxElem	Specify max element on the status print	
	Write	FE_Model	Dump FE model incl. generated elements.	
	Iteration	RLF_Calc	Activate "Residual Load Factor" method	
	Nodedata	DoublyDef	Accept doubly def node Ids. (Coordinates have to be identical).	
With this record the user may override the boundary conditions defined on the structural file. In the analysis the specified boundary codes are applied to all listed nodes. The nodes are listed directly (node ID list) or all in once. Examples : SWITCHES WaveData Timeinc 0.1 ! Hydrodyn force calc every 0.1sec SWITCHES NodeData DoublyDef ON ! Accept repeated definition of same node SWITCHES SaturPrint MaxElem 50 ! Extend list in <i>res_status.text</i> This record may be repeated.				

6.3.16 Hydrodynamics

WAVEDATA									
I_case	Type	Height	Period	Direct	Phase	Surflev	Depth	N_ini	
								X ₁	f ₁
								X ₂	f ₂
								...	...
								X _n	f _n
Parameter	Description								Default
I_case	Load case number. The wave is activated by using the LOADHIST command referring to this load case number + a TIMEHIST of type 3								
Type	Wave Type 1 : Airy, Extrapolated 1.1 : Airy, Stretched 2 : Stoke's 5'th (Skjelbreia, Hendrickson, 1961) 3 : User Defined 4 : Stream Function Theory (Dean, Dalrymple) Unit								
Height	Wave height							[m]	
Period	Wave period							[s]	
Direct	Direction of wave relative to global x-axis, counter clockwise[dg]								
Phase	Wave phase							[dg]	
Surflev	Surface Level (Z-coordinate) expressed in global system							[m]	
Depth	Water depth							[m]	
n_ini	Number of initialization points defining wave 'envelope'								0
X ₁	X-coordinate of first grid point (starting with largest negative x-coord.)								
f ₁	Scaling factor of the wave height at first grid point. See Figure 6-1								
With this record, the user may specify a wave to be applied to the structure as hydrodynamic forces. The wave is 'switched' ON according to the LOADHIST/TIMEHIST definition. TIMEHIST type 3 must be used. Wave forces are applied on the structural members which are wet at the time of load calculation, and relative velocity is accounted for if the record REL_VELO is specified in the control file. All wave definitions with same loadcase number will be applied at the same time adding the wave kinematics before the forces are calculated, ('irregular' wave). Current to be combined with the actual wave must have same load case number! The travelling speed of the wave is influenced by the current. Time between calculation of wave forces is controlled by the referred TIMEHIST record, (dTime). The calculated wave forces are written to file if WAVCASE1 is specified in the control file. In XACT the surface elevation is visualized. Applying a mesh on the surface (Verify/Show mesh) the waves become clearer, (Result/deformed model must be activated with displacement scaling factor=1.0). By pointing on the sea surface using the option Clip/Element, the surface will disappear. NOTE! SI units must be used (N, m, kg) with Z-axis pointing upwards! This record may be repeated									

WAVEDATA										
Lcase	Type	Hs	Tp	Direct	Seed	Surflev	Depth	N_ini	X ₁	f ₁
								X _n	f _n	
nFreq	SpecType	TMin	TMax	Grid	(Opt)	{Data}				
Parameter	Description									Default
I_case	Load case number. The wave is activated by using the LOADHIST command referring to this load case number + a TIMEHIST of type 3									
Type	Wave Type = Spect									
Hs	Significant Wave height									[m]
Tp	Peak period of spectre									[s]
Direct	Direction of wave relative to global x-axis, counter clockwise[dg]									
Seed	Wave seed (input to random generator)									[-]
Surflev	Surface Level (Z-coordinate) expressed in global system									[m]
Depth	Water depth									[m]
n_ini	Number of initialization points defining wave 'envelope (see previous page and Figure 6-1).									0
nFreq	Number of frequencies									
SpecType	Specter type. Jonswap : Jonwap Spectre PM : Pierson-Moscovitz User : User Defined Spectre									
TMin	Lowest wave period to be used in the wave representation									
TMax	Highest wave period to be used.									
Grid	Discretization type: 1 : Constant dω in the interval tmin-tmax 2 : Geometrical series from Tp 3 : Constant area for each S(ω) "bar"									2
"Opt"	Optional Data. If Jonswap : Gamma parameter If User Defined : Number of points in the ω – S(ω) curve Else : Dummy									
{Data}	If User Defined : The nPoint ω – S(ω) points defining S(ω) Else : Dummy									
With this record, the user may specify an irregular wave to be applied to the structure as hydrodynamic forces as described on the previous page.										
Example:										
	LCase	Typ	Hs	Tp	Dir	Seed	SurfLev	Depth	nIni	
WaveData	3	Spect	12.8	13.3	45	12	0	176	0	
'	nFreq	SpecTyp	TMin	TMax	(Grid)					
	30	Jonsw	4	20						
See the example collection on www.usfos.com for more examples.										
This record is given once.										

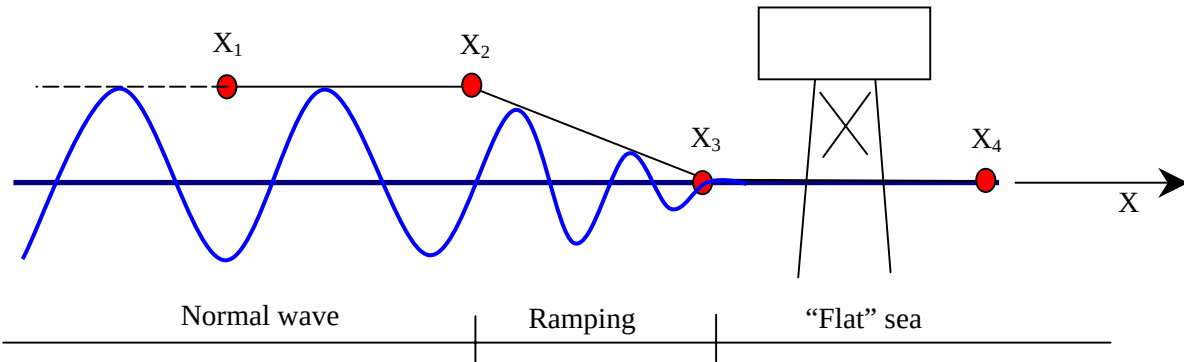


Figure 6-1 Initialisation of wave

CURRENT							
I_case	Speed	Direct	Surflev	Depth	Z ₁	f ₁	
					...	...	
					Z _n	f _n	
Parameter	Description						Default
I_case	Load case number. The current is activated by using the LOADHIST command referring to this load case number + a TIMEHIST of type 3 Unit						
Speed	Current Speed to be multiplied with the factor f giving the speed at actual depth, (if profile is defined)						[m/s]
Direct	Direction of wave relative to global x-axis, counter clockwise						[deg]
Surflev	Surface Level (Z-coordinate) expressed in global system						[m]
Depth	Water depth						[m]
Z ₁	Z-coordinate of first grid point (starting at Sea Surface)						[m]
f ₁	Scaling factor of the defined <i>speed</i> at first gridpoint.						
....	Similar for all points defining the depth profile of the current						
With this record, the user may specify a current to be applied to the structure as hydrodynamical forces. The current is 'switched' ON according to the LOADHIST/TIMEHIST definition. TIMEHIST type 3 must be used. If the current should vary over time, the CURRHIST command is used. Wave forces are applied on the structural members, which are wet at the time of load calculation, and relative velocity is accounted for if the record REL_VELO is specified in the control file. Current to be combined with waves must have same loadcase number! Time between calculations of wave forces is controlled by the referred TIMEHIST record, (dTime). The calculated wave forces are written to file if WAVCASE1 is specified in the control file. In XACT the surface elevation is visualised. Applying a mesh on the surface (Verify/Show mesh) the waves become clearer, (Result/deformed model must be activated with displacement scaling factor=1.0). By pointing on the sea surface using the option Clip/Element, the surface will disappear. NOTE! SI units must be used (N, m, kg) with Z-axis pointing upwards! This record may be repeated							

CURRHIST Time₁ f₁ Time₂ f₂ Time_n f_n		
Parameter	Description	Default
Time ₁	Time of first point	[s]
f ₁	Scaling factor of the defined speed at first time.	
....	Similar for all points defining the time history of the current	
With this record, the user may specify a time history of the current. The current specified under CURRENT will be scaled according to the specified time history. This record is given only once		

REL_VELO	nAvrg
If REL_VELO is specified, the relative velocity between the structure and the wave particles are accounted for in connection with the calculation of drag forces. This is also the way to switch on hydro-dynamical damping. <u>Option 1:</u> If the relative velocity should be calculated on basis of an average structural velocity, the average velocity of the "nAvrg" last analysis steps is used. NAvrg = 0 is default, which means that the current structural velocity is used. This record is given only once	

WavCase1	I-case	iTotal
Parameter	Description	Default
I-case	The generated loads are written to file with I-case as the first loadcase number. Each time new wave forces are calculated the forces are written, and the loadcase number is incremented with one.	1
iTotal	iTotal = 0: Incremental forces are written iTotal = 1: Total forces are written	0
The user may use this record to let USFOS write to file the forces generated in connection with the options WAVEDATA/CURRENT/WINDFIELD. Together with the beamload records, the LCASETIM record is printed connecting the loadcase to a physical time for the actual load. NOTE ! This option should be used only if USFOS is used as a wave load pre-processor due to the extra time consumption and disc space requirements. This record is given only once		

M_GROWTH Z_1 Add_ T_1 Z_2 Add_ T_2 Z_n Add_ T_n		
Parameter	Description	Default
Z_1	Z-coordinate of the first gridpoint defining the marine growth profile $Z=0$ defines the sea surface, and all Z-coordinates are given relative to the sea surface , Z-axis is pointing upwards . $Z>0$ means <i>above</i> the sea surface.	
Add_ T_1	Additional thickness to be applied on members at elevation Z_1	
Z_2	Z-coordinate of the second gridpoint defining the marine growth profile	
Add_ T_2	Additional thickness to be applied on members at elevation Z_2	
With this record the user may define a marine growth depth profile to be applied to the structural members. Between the tabulated values, the additional thickness is interpolated, values outside the table are <i>extrapolated</i>. The hydrodynamical diameter $D_{hyd} = D_{struc} + 2 * Add\_T$. In the .out -file, the hydrodynamical diameter is listed for all <i>potential wet</i> beam elements. Data should be specified above the sea surface according to the measured marine growth. Ensure that extrapolation gives correct Add_ T, (dry elements become wet due to surface wave elevation). NOTE! SI units must be used (N, m, kg) with Z-axis pointing upwards! This record is given only once.		

Hyd_CdCm			Cd	Cm	elnox1	elnox2		elnoxn
Parameter	Description	Default						
Cd	Drag Coefficient to be applied to the listed elements	0.7						
Cm	Mass Coefficient to be applied to the listed elements	2.0						
elnox1	External element number 1 to be defined with the actual Cd / Cm	All						
elnox2	External element number 2							
elnoxn	External element number n to be defined with the actual Cd / Cm							
NOTE ! If no elements are specified, all beam elements will be defined with the actual Cd and Cm.								

This record is used to assign Drag- and Mass Hydrodynamical Coefficients to beam elements.

Example:Hyd_CdCm 0.7 1.8
Hyd_CdCm 1.0 2.0 1010 1020 1030 2010 2020 2030

New default Cd / Cm are applied to all beam elements.
However, elements 1010 1020 1030 2010 2020 and 2030 are defined with different Cd and Cm coefficients (the latest Hyd_CdCm definition overrides previous definitions).


NOTE ! This record overrides Cd and Cm defined under the commands:
Hydro_Cd and Hydro_Cm, (see next pages).

This record may be repeated.

Hydro_Cd		
	Z_1	Cd_1
	Z_2	Cd_2
	...	...
	Z_n	Cd_n
Parameter	Description	Default
Z_1	Z-coordinate of the first gridpoint defining the Cd profile (Z=0 defines the sea surface, and all Z-coordinates are given relative to the surface, Z-axis is pointing upwards. Z>0 means <i>above</i> the sea surface).	
Cd_1		
Z_2 Cd_2	Z-coordinate of the second gridpoint defining the Cd profile Drag Coefficient to be used for elements at elevation Z_2	
This record is used to define a Drag Coefficient depth profile. Between the tabulated values, the Cd is interpolated. Values outside the table are <i>extrapolated</i>. In the .out -file, the drag coefficient is listed for all <i>potential wet</i> beam elements. Data should be specified above the sea surface. Ensure that extrapolation gives correct Cd, (dry elements become wet due to surface wave elevation). The command Hyd_CdCm overrides this command. NOTE! SI units must be used (N, m, kg) with Z-axis pointing upwards! This record is given only once.		

Hydro_Cm Z_1 Cm_1 Z_2 Cm_2 Z_n Cm_n		
Parameter	Description	Default
Z_1	Z-coordinate of the first gridpoint defining the Cm profile (Z=0 defines the sea surface, and all Z-coordinates are given relative to the surface, Z-axis is pointing upwards. Z>0 means <i>above</i> the sea surface). Mass Coefficient to be used for elements at elevation Z_1	
Cm_1		
Z_2 Cm_2	Z-coordinate of the second gridpoint defining the Cm profile Mass Coefficient to be used for elements at elevation Z_2	
This record is used to define a Mass Coefficient depth profile. Between the tabulated values, the Cm is interpolated. Values outside the table are <i>extrapolated</i>. In the .out -file, the mass coefficient is listed for all <i>potential wet</i> beam elements. Data should be specified above the sea surface. Ensure that extrapolation gives correct Cm, (dry elements become wet due to surface wave elevation). The command Hyd_CdCm overrides this command. NOTE! SI units must be used (N, m, kg) with Z-axis pointing upwards! This record is given only once.		

Wave_KRF KRF		
Parameter	Description	Default
KRF	Wave Kinematics reduction Factor: Particle Velocities are multiplied by this factor.	1.0
The user may use this record the user may specify the reduction factor to be used in connection with calculation of wave forces (WAVEDATA). 2-D theory may over-estimate the kinematics of real 3-D ocean waves, and reduction of the particle velocities may give better correspondence with field measurements. The corrected particle velocity is calculated as follows: $Vel_{corr} = Vel_{2-D} * KRF$ This record is given only once		

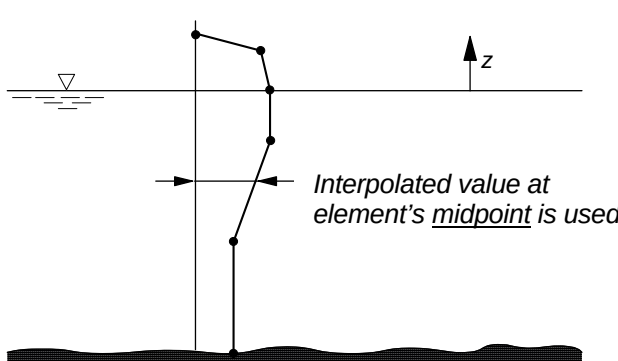
Wave_KRF Profile		
	Z ₁	KRF ₁
	...	...
	Z _n	KRF _n
Parameter	Description	Default
Z ₁	Z-coordinate of the first grid point defining the Integration Point profile (Z=0 defines the sea surface, and all Z-coordinates are given relative to the surface, Z-axis is pointing upwards. Z>0 means <i>above</i> the sea surface).	
KRF ₁	Kinematics Reduction Factor to be used for elements at position Z ₁	
Z ₂	Z-coordinate of the second grid point.	
KRF ₂	Kinematics Reduction Factor to be used for elements at elevation Z ₂	
This record is used to define a Kinematics Reduction Factor depth profile, and is an extended version of the original <i>Wave_KRF</i> command. Between the tabulated values, the KRF is interpolated. Values outside the table are <i>extrapolated</i>. In the .out -file, the interpolated wave kinematics reduction factor used for each beam element is listed. Selected values are also visualized in XACT under Verify/Hydrodynamics. Data should also be specified <i>above</i> the sea surface. Ensure that extrapolation gives correct KRF, (dry elements become wet due to surface wave elevation). The command “HYDROPAR <i>WaveKRF</i> “ overrides this command.  NOTE! SI units must be used (N, m, kg) with Z-axis pointing upwards! This record is given only once.		

BUOYANCY l_case write		
Parameter	Description	Default
L_case	The buoyancy forces are <i>added</i> to the actual load case. If no loadcase is specified, the buoyancy forces are added to the WAVEDATA lcase	WAVEDATA lcase
Write	Write option: <i>Write</i> : buoyancy forces are written to a separate file <i>NoWrite</i> : buoyancy forces are <i>not</i> written to file.	NoWrite
If BUOYANCY is specified, buoyancy effects are accounted for. By default all elements are buoyant, but using the FLOODED command, it is possible to remove buoyancy for selected elements. The buoyancy forces are updated every time wave loads are calculated, and the current position of the sea surface defines whether an element becomes buoyant or not at any time. This record is given once		

FLOODED elnox1 elnox2 elnoxn		
Parameter	Description	Default
elnox1	External element number 1 to be defined flooded	
elnox2	External element number 2	
.	.	
elnoxn	External element number n to be defined non buoyant	
This record is used to define non buoyant elements, and this command has only meaning if BUOYANCY is specified. It is recommended to use the new input (see below). This record may be repeated		

FLOODED ListType {Id_List}		
Parameter	Description	Default
ListType	Data type used to specify the elements: Element : The specified Id's are element numbers. Mat : The specified Id's are material numbers Geo : The specified Id's are geometry numbers. Group : The specified Id's are group numbers. {Id_List} One or several id's separated by space	
This record is an extended version of the original FLOODED command specified above. <u>Example 1 :</u> Flooded Group 1 5 6 All elements in groups (setes) 1, 5 or 6 will become flooded. NOTE: The last definitions will override previous definitions if same element is defined more than once This record may be repeated.		

MaxWave						Criterion	dT	EndT	Write
Parameter	Description								Default
Criterion	Criterion used to identify "worst wave phase" of the actual wave:								
	Baseshear : Base Shear is used OverTurn : Overturning moment is used								
dT, EndT	The wave (defined by the WAVEDATA record) is stepped through with a time increment of dT up to time EndT. The worst phase detected in the specified interval is used.								
Write	Write option: Write : The wave forces are written to file noWrite : No writing								
With this record the the user may us USFOS to identify the worst wave phase to be used in a static 'pushover' analysis. The load_case no of the specified WAVEDATA record may be referred to from the CUSFOS or CICYFOS record. (NOTE: only one WAVEDATA loadcase is possible to spefiy using this option).									
<u>Example 1 :</u> <pre>' Typ dT EndT option MaxWave BaseShear 0.5 16 noWrite ' I_case Typ H Per Dir Phase Surflev Depth WaveData 2 Stoke 25.0 16 45 0 0.0 100 ' CUSFOS 10 10 1.0 1.0 ' lcomb lfact mxld nstep minstep 1 0.5 1.0 10 0.010 ! DeadWeight 2 0.1 5.0 200 0.001 ! Max Wave forces found by USFOS</pre>									
The Stoke wave will be 'stepped' through the platform with a time interval of 0.5 s up to time = 16s. The wave forces at the time (phase) giving the maximum base shear are assigned to loadcase no 2 (override read-in node and element loads with this loadcase no). LoadCase no 2 is referred to as usual in the CUSFOS record.									
Hint: If the automatic member imperfection is activated (CINIDEF) referring to the WAVADATA loadcase, USFOS will use the selected hydrodynamic force pattern when the directions of the individual member imperfections are applied. To the left, the wave direction is 45°, and in the case to the right, the wave direction is 180° opposite (225°), and the member imperfection is adjusted automatically.									
This record is given only once!									

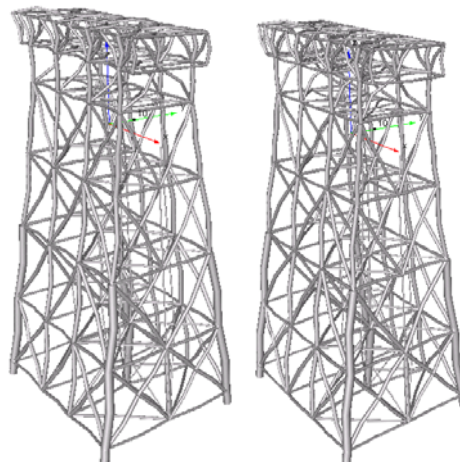

MaxWave KeyWord LoadCase(s)		
Parameter	Description	Default
KeyWord	Keyword defining the actual parameter(s) WaveLCase : Specify Actual Wave Load Case to process. If only one WaveData record is defined, this command could be omitted. AddLCase : Specify additional loads to be added on top of the wave loads. Could be basic read-in loads or wind loads.	
LoadCase	Actual Load Case numbers	
This is an extension of the MaxWave command, where the user may specify additional information relevant for the wave load calculation. <u>Example 1 :</u> <pre> ' Typ lCase MaxWave WaveLCase 5 </pre> The maxwave will be performed using wavedata with load case 5. This means that the input may contain several wavedata definitions <u>Example 2 :</u> <pre> ' Typ lCase MaxWave WaveLCase 5 MaxWave AddLCase 10 </pre> The maxwave will be performed using wavedata with load case 5. However, when the total load vector is computed, the forces from load case 10 will be added on top of the wave forces. For example could load case 10 contain slamming loads (wave in deck) with time history information specified. The time when the sum of all loads gives the max peak, (base shear or overturn), will then be selected. NOTE: In the CUSFOS input, it should be referred to the Wave load case (in this example lc 5) The additional load case could be either ordinary read-in loads (concentrated or distributed) together with time variation information (TimeHist + LoadHist), or it could be Wind Loads computed internally by USFOS. This record may be repeated		

WavMxScl Scale		
Parameter	Description	Default
Scale	Scaling factor used to scale the computed wave_loads from MaxWave option before assigning into the actual loadvector.	1.0
This record is used to scale the wave forces calculated by USFOS under the MaxWave option. The scaled forces are copied into the actual load vector <i>before</i> the analysis starts. This option is required when the force unit used in the analysis is <i>not</i> Newton (f ex kN or MN). <i>Example</i> WavMxScl 1.0E-6 Will multiply the generated wave forces (which are calculated in Newton) with 1.0E-6, and the wave forces are then stored in MN. This record is given only once.		

WET_ELEM All		
Parameter	Description	Default
All	All elements are assumed potential wet	off
This record is used to force USFOS to check <i>all</i> elements for hydrodynamic forces during the dynamic analysis. By default, only elements which can be reached by the highest wave defined are checked for hydrodynamic forces (this saves analysis time as f ex the whole topside structure is left out in cases where the highest wave never hit the topside). In cases where the structure is dropped from a position above the sea surface, this switch should be set ON.		

Wave_Int NIS Elem_1 Elem_2 Elem_3				
<i>Parameter</i>	<i>Description</i>			<i>Default</i>
NIS	Number of Integration sections used for wave force calculations.			2
Elem_1	Element 1D of first beam element using NIS integration sections			
Elem_2	Element ID of second element			
.....	etc...			
	NOTE ! If no elements are specified, all beam elements are using NIS integration sections.			

This record is used to define number of integration sections to be used in connection with wave load calculations.

Example 1

Wave_Int 4 1001 1002 1003

Means that beam elements 1001, 1002 and 1003 use 4 integration points. For the other beam elements 2 points are used (default).

Example 2

Wave_Int 3

Wave_Int 10 101 102

Means that default number of integration sections (points) are changed from 2 to 3. However, for elements 101 and 102, 10 points are used.

This record may be repeated.

Wave_Int Profile		
	Z_1	$nInt_1$
	Z_2	$nInt_2$
	...	...
	Z_n	$nInt_n$
Parameter	Description	Default
Z_1	Z-coordinate of the first grid point defining the Integration Point profile (Z=0 defines the sea surface, and all Z-coordinates are given relative to the surface, Z-axis is pointing upwards. Z>0 means <i>above</i> the sea surface).	
$nInt_1$		
Z_2	Z-coordinate of the second grid point.	
$nInt_2$		

This record is used to define a **Integration Point depth profile**, and is an extended version of the original *Wave_Int* command (described on previous page).

Between the tabulated values, the $nInt$ is interpolated. Values outside the table are *extrapolated*.

In the .out -file, the interpolated number of integration points used for each beam element is listed. Selected values are also visualized in XACT under Verify/Hydrodynamics.

Data should also be specified *above* the sea surface. Ensure that extrapolation gives correct $nInt$, (dry elements become wet due to surface wave elevation).

The command "HYDROPAR *WaveInt* " overrides this command.

NOTE! SI units must be used (N, m, kg) with **Z-axis pointing upwards!**

This record is given only once.

CurrBloc Type [Data]		
Parameter	Description	Default
Type Data	Current Blocakge Type (currently, only "User" is available) Required data for the different options: Type = User : "Data" is just a scaling factor (Fac) Type = API Taylor: Blockage for the different members are computed according to API, Taylors formulas.. Two different options exist: ☐ Common : Averaged factor are used for all elements ☐ Individual : Specific blockage for the different elements.	
The user may use this record to specify the reduction factor to be used in connection with calculation of current forces. $Vel_{corr} = Vel * Fac$ <u>Example 1:</u> CurrBlock User 0.85 : All elements get a blockage factor of 0.85 <u>Example 2:</u> CurrBlock API Taylor Common : All elements get the computed (averaged) factor according to API (Tylor) <u>Example 3:</u> CurrBlock API Taylor Individual : Computed factors will be assigned to the individual elements according to API Tylor. This record is given only once		

CurrBlock		
Profile	Z_1	Block ₁
	Z_2	Block ₂
	...	...
	Z_n	Block _n
Parameter	Description	Default
Z_1	Z-coordinate of the first grid point defining the Integration Point profile (Z=0 defines the sea surface, and all Z-coordinates are given relative to the surface, Z-axis is pointing upwards. Z>0 means <i>above</i> the sea surface).	
Block ₁	Current Blockage to be used for elements at position Z_1	
Z_2	Z-coordinate of the second grid point.	
Block ₂	Current Blockage to be used for elements at elevation Z_2	

This record is used to define a **Current Blockage depth profile**, and is an extended version of the original *CurrBlock* command, (previous page).

Between the tabulated values, the Block value is interpolated. Values outside the table are *extrapolated*.

In the .out -file, the interpolated blockage factor used for each beam element is listed. Selected values are also visualized in XACT under Verify/Hydrodynamics.

Data should also be specified *above* the sea surface. Ensure that extrapolation gives correct Block, (dry elements become wet due to surface wave elevation).

The command "HYDROPAR *CurrBlock* " overrides this command.

NOTE! SI units must be used (N, m, kg) with Z-axis pointing upwards!

This record is given only once.

BUOYHIST Hist_Id ListType {Id_List}		
Parameter	Description	Default
Hist_ID	History ID to be used to scale the current buoyancy forces	
Type	Data type used to specify the elements:	
	Element : The specified Id's are element numbers.	
	Geo : The specified Id's are geometry numbers.	
	Group : The specified Id's are group numbers.	
{Id_List}	One or several id's separated by space	

With this record the user may define time dependent buoyancy on the individual elements. The elements are specified either directly (element list) or in-directly (using material, geometry or group references).

Example 1 :

BuoyHist 10 Mat 1 5 6

All elements referring to materials 1, 5 or 6 will have a time dependent buoyancy according to time history with Id 10

Example 2 :

BuoyHist 10 Mat 1 5 6
BuoyHist 11 Elem 1001 1002 1003


All elements referring to materials 1, 5 or 6 will have a time dependent buoyancy according to time history with Id 10. Elements 1001, 1002 and 1003 will follow history no 11.

NOTE: The last definitions will override previous definitions if same element is defined more than once

This record may be repeated.

BUOYFORM Form ListType {Id_List}		
Parameter	Description	Default
Form	Buoyancy Formulation: Arch : Simple "Archimedes" calculation Panel : Based on Pressure (dyn+static).	
ListType	Data type used to specify the elements: Element : The specified Id's are element numbers. Geo : The specified Id's are geometry numbers. Group : The specified Id's are group numbers.	
{Id_List}	One or several id's separated by space	

With this record the user may define special buoyancy formulation on selected elements. The elements are specified either directly (element list) or in-directly (using material, geometry or group references). The Panel model is rather time consuming, and it is recommended to us this formulation on special, selected elements only, (buoyancy tanks etc).

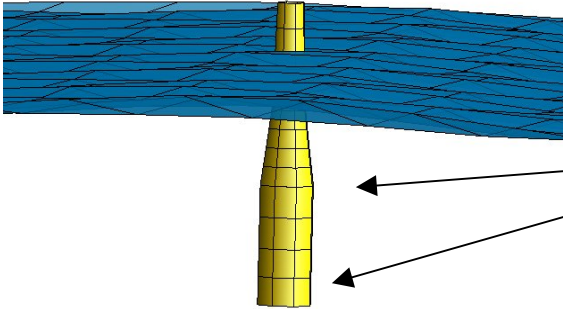

Instantaneous (dynamic+static) pressure on cylindrical and conical sides and on the the bottom are computed and integrated.

Example 1 :

BuoyForm Panel Mat 1 5 6

All elements referring to materials 1, 5 or 6 will have the buoyancy computed according to "panel" formulation. All other elements are using the simple, default arhimedes formula, (buoyancy=weight of submerged water).

NOTE: The last definitions will override previous definitions if same element is defined more than once

This record may be repeated.

INTFLUID Density FillType ListType {Id_List}					
Parameter	Description				Default
Density	Density of the internal fluid [kg/m ³]				
FillType	Filling Type : TimeDep : The internal fluid level (fillratio) is defined by a timehistory Computed: The internal fluid level is computed (Not Implemented).				
ListType	Data type used to specify the elements: Element : The specified Id's are element numbers. Geo : The specified Id's are geometry numbers. Group : The specified Id's are group numbers.				
{Id_List}	One or several id's separated by space				

With this record the user may define the internal fluid of one or more cylindrical elements. The elements are specified either directly (element list) or in-directly (using material, geometry or group references). The fillratio (0-1) is specified using a time history, where the time history function value is directly the instantaneous fill ratio. The free surface calculation (no sloshing effects) detects instabilities and a new equilibrium position is found automatically. The model (which requires that "panel" buoyancy is defined for the element(s)), is rather time consuming, and it is recommended to us this option on special, selected elements only, (buoyancy tanks etc).



Empty Cylinder



Cylinder is partly filled.



Becomes unstable (free surface) and finds a new equilibrium position.

Example 1 :

```

'      Dens  FillTyp  HistID  ListTyp  MatID
IntFluid  900   TimeDep    11      Mat      1

'      ID   Type   T1  T2  Factor
TimeHist  11  S_Curv 20  30   0.2

```


All elements referring to materials 1 will have an internal fluid with density 900 kg/m³. The cylinder is filled to 20% (0.2) between time t=20s to t=30s (See TimeHist 11). As the figures describe, the cylinder will first move vertical without tilting, but becomes unstable and tilts to a new equilibrium position.

NOTE: This option requires the Panel buoyancy formulation on the actual elements.

This record may be repeated.

SpoolWave	<i>Time Order dT StormLen Crit</i>	Unit
<i>Time</i>	The analysis starts " <i>time</i> " seconds before the actual peak	[s]
<i>Order</i>	Select 1 st , 2 nd 3 rd etc <u>highest</u> wave crest by specifying 1, 2, 3 etc A negative number means the 1 st , 2 nd 3 rd etc <u>lowest</u> wave through.	[-]
<i>dT</i>	Time increment during search for the peak waves	[s]
<i>StormLen</i>	Search for highest waves from time=0 to time=StormLen	[s]
<i>Critl</i>	Criterion to use for selection of peak wave: Elev : Peak Wave Elevation is used	[-]

With this record, the user defines how to search for the highest waves in an irregular wave field. The analysis time=0 will be moved forward to the specified "Time before Peak" as shown in the figure.

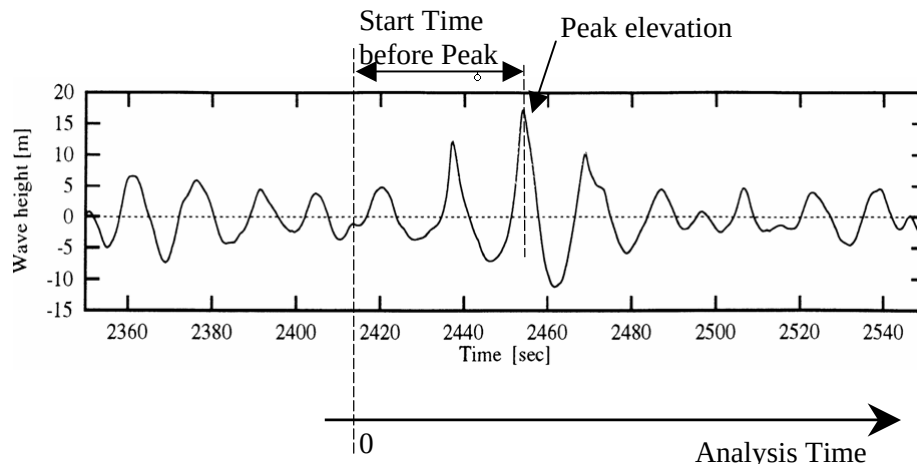

Example 1:

```

/
SpoolWave      Time      Order      dT      StormLen      Crit
                30         1          0.5      3600      elevation
  
```

Search for the highest wave elevation within a 1 hour storm (the wavedata command is specified separately). A delta T of 0.5 seconds is used during this check.

Example 2:

```

/
SpoolWave      Time      Order      dT      StormLen      Crit
                30         3          0.5      3600      elevation
  
```

Search for the 3rd highest wave elevation within a 1 hour storm. (To ensure that the 2nd, 3rd etc peaks are not a part of any of the higher peaks, a minimum time between peaks are required. In the automatic search procedure, this minimum time between peaks is set equal to T_p .)

NOTE! This option must be used only in connection with time domain simulations of irregular waves (WaveData Spect ...)

This record is given once.

NONHYDRO ListType {Id_List}		
Parameter	Description	Default
ListType	Data type used to specify the element(s): Element : The specified Id's are element numbers.	
{Id_List}	One or several id's separated by space. No ID's means all elements	
With this record the user may define non hydro element, (elements which are bypassed in all hydrodynamic calculations). The elements are specified (element list). <u>Example 1 :</u> NonHydro Elem 1 5 6 Elements 1, 5 and 6 are bypassed during the hydrodynamic calculations This record may be repeated.		

HYDROPAR					KeyWord	Value	List Type	{Id_List}
Parameter	Description							Default
KeyWord	Keyword defining actual parameter to define:							
	KeyWord	Actual Definitions of "Value"						
	HyDiam	:	Hydrodynamic Diameter				(override default)	
	Cd	:	Drag Coefficient					
	Cm	:	Mass Coefficient					
	Cl	:	Lift Coefficient (not imp)					
	BuDiam	:	Buoyancy Diameter				(override default)	
	IntDiam	:	Internal Diameter				(override default)	
	WaveInt	:	Number of integration points				(override default)	
	CurrBlock	:	Current Blockage factor					
	FluidDens	:	Density of internal fluid					
	MgrThick	:	Marine Growth Thickness					
	MgrDens	:	Marine Growth Density					
	FloodSW	:	Switch for flooded/no flooded				(override default)	
	DirDepSW	:	Switch for use of direction dependent Cd					
	FillRatio	:	Fill ratio, (0-1) of member with internal fluid					
	WaveKRF	:	Wave Kinematics Reduction Coeff					
	BuoyLevel	:	Definition of complexity level of buoyancy calculations.					
Value	Actual Parameter value.							
ListTyp	Data type used to specify the element(s):							
	Element	:	The specified Id's are element numbers.					
	Mat	:	The specified Id's are material numbers					
	Geo	:	The specified Id's are geometry numbers.					
	Group	:	The specified Id's are group numbers.					
Id_List	One or several id's separated by space							
With this record, the user defines various hydrodynamic parameters for elements. Some of the parameters could be defined using alternative commands (F ex Hyd_CdCm etc), but parameters defined under HYDROPAR will <u>override all previous definitions</u> .								
This record could be repeated								

Below, the "HYDROPAR" keywords are described in detail:

HYDROPAR Keyword		
Keyword	Description	Default
<i>HyDiam</i>	The hydrodynamic diameter is used in connection with drag- and mass forces according to Morrison's equation.	Struct Do
<i>Cd / Cm</i>	Drag- and Mass coefficients used in Morrison's equation.	0.7 / 2.0
<i>Cl</i>	Lift coefficients (normal to fluid flow). NOTE: Not implemented hydro.	0
<i>BuDiam</i>	Buoyancy calculations are based on this diameter.	Struct D
<i>IntDiam</i>	Internal diameter of the pipe. Relevant in connection with (completely) flooded members and members with special internal fluid.	Do-2T
<i>WaveInt</i>	Number of integration points per element	2
<i>CurrBlock</i>	Current blockage factor. Current is multiplied with this factor.	1.0
<i>FluiDens</i>	Density of <i>internal</i> fluid. Relevant for flooded members.	1024
<i>MgrThick</i>	Thickness of marine growth specified in meter.	0.0
<i>MgrDens</i>	Density of marine growth. Specified in [kg/m ³]	1024
<i>FloodSW</i>	Switch (0/1) for flooded / non flooded members. (internal use)	0
<i>DirDepSW</i>	Switch (0/1) for use of direction dependent drag coefficients. If switch is set to 1, special ElmCoeff data have to be defined for the element.	0
<i>FillRatio</i>	Fill ratio of flooded member. By default is a flooded member 100% filled throughout the simulation. Fill ratio could be time dependent.	1
<i>WaveKRF</i>	Wave kinematics reduction coefficient. Particle velocity used for actual elements is multiplied with this factor.	1.0
<i>BuoyLevel</i>	Specification of buoyancy calculation method. By default, the buoyancy of the (thin) steel wall is ignored for flooded members. If Level=1 is specified, a far more complex (and time consuming) calculation procedure is used. Flooded members on a floating structure going in and out of water should use Level=1 calculation.	0

6.3.17 Aerodynamics

***** The OLD input syntax *****

WINDFIELD										
I_case	T_ini	Z_bott	U ₁₀	Power	Rho	WO_x alpha	WO_y beta1	WO_z gamma	n_ini	
Parameter	Description									Default
I_case	Load case number. The wind is activated by using the LOADHIST command referring to this load case number + a TIMEHIST of type 3									
T_ini	Time for applying the pre generated, fluctuating windfield									
Z_bott	Lower level of mean wind profile									[m]
U ₁₀	Mean wind 10 meter above Z_bott									[m/s]
Power	power law coeff. defining the mean wind profile $U_z=U_{10} (z/10)^{\text{power}}$									
Rho	Air Density									[kg/m ³]
WO_x	Wind Origo: x-coordinate in global system									[m]
WO_y	Wind Origo: y-coordinate in global system									[m]
WO_z	Wind Origo: z-coordinate in global system									[m]
alpha	Rotation of wind axes about global x-axis									[deg]
beta	Rotation of wind axes about global y-axis									[deg]
gamma	Rotation of wind axes about global z-axis									[deg]
n_ini	Number of points in the initialization curve for the fluctuating wind									0
With this record, the user may specify a windfield to be applied to the structure as aerodynamical forces. The wind is 'switched' ON according to the LOADHIST/TIMEHIST definition. TIMEHIST type 3 must be used. Time between calculation of wave forces is controlled by the referred TIMEHIST record, (dTime). The calculated wave forces are written to file if WAVCASE1 is specified in the control file. NOTE! SI units must be used (N, m, kg) with Z-axis pointing upwards! This record is given only once										

NEW input syntax

WindField	L_Case	GWF_Type	Ux	Uy	Uz	Z ₀	Z _{BOTT}	Rho	Power	Unit
LCase	Load Case ID for this wind definition									[m/s]
GWF_Type	Global Wind Field Type: ☐ Uniform : Uniform wind in the entire space ☐ Z_Profile : The Wind speed increases for increasing Z ☐ 3D_Tab1 : The Global Wind is specified in Tables. Type 1. ☐ 3D_Tab2 : The Global Wind is specified in Tables. Type 2.									
Ux – Uz	X- Y- and Z component of the Global wind. Referred to Global Coords. The wind vector definition depend on Wind Field Type: ☐ Uniform : The uniform wind Vector ☐ Z_Profile : Wind Vector at elevation Z=10m above surface ☐ 3D_Tab1 : --- Dummy --. ☐ 3D_Tab2 : --- Dummy --.									
Z ₀ Z _{BOTT}	Z-coordinate of the Wind Coord System.Origo Specified in Glob Coord Skip wind calculation for elements below Z _{BOTT} . Specified in Local Wind Coordinates. Default is 0.0.									[m]
Rho	Density of Air (If Omitted, ρ = 1.293 is used)									[kg/m ³]
Power	Power Law for Z-varying wind. $U(z) = U_{10} \left(\frac{z}{10}\right)^{POWER}$ Where U ₁₀ is the Ux, Uy, and Uz specified at 10 m above ground.									

With this record, the user defines the Global wind Field to be used in the simulations..

Examples:

	LCase	Type	Ux	Uy	Uz	Z0	Zbott	Rho	Power	
WindField	11	Uniform	10	10	0					! Min input
WindField	12	Z_Profile	10	10	0	0	0	1.293	0.2	! Max input
WindField	13	3D_Tab1	0	0	0	150	150	1.293		! Max input

This record could be repeated.

WindHist DOF Hist_ID		Unit
DOF	Actual Wind Vector Degree of Freedom: X (or 1) : X-Component of wind vector Y (or 2) : Y-Component of wind vector Z (or 3): Z-Component of wind vector	
Hist_ID	The Actual Wind Vector is Scaled according to the time history (command TimeHist) with the actual ID.	
With this record, the user defines the Global wind Filed to be used in the simulations.. <u>Example:</u> <pre> ' LCase Type Ux Uy Uz Z0 Zbott Rho Power WindField 11 Uniform 10 10 0 ! Min input ' DoF HistID WindHist X 101 WindHist Y 102 \ HistID Type T1 T2 fac TimeHist 101 S_Curve 0 10 1.0 TimeHist 102 S_Curve 20 30 1.0 </pre> Means that the X-component of the wind will be initialized gradually from 0-10 m/s between time= 0 and 10 sec. Up to time=20s, the Y component is zero. From time=20, the Y-component gradually increases, and from time=30s, both X- and Y-components are 10m/s. (which gives a speed of 14.1m/s with 45° direction). This record could be repeated..		

WINDPAR Geo_ID Type Height Width Np_T Np_D Np_L Np_M {Deg Coeff} ₁ {Deg Coeff} ₂ {Deg Coeff} _N																												
Parameter	Description									Default																		
Geo_ID	Cross section geometry ID																											
Type	Input Type = 0																											
Height	Profile Height																											
Width	Profile Width																											
Np_T	Number of points (deg/coeff) defining the Tangential Curve (=0, not imp)																											
Np_D											Number of points (deg/coeff) defining the Drag coefficient curve																	
Np_L																				Number of points (deg/coeff) defining the Lift coefficient curve								
Np_M																												
Deg	Cross section position (angle)																											
Coeff	Corresponding coefficient																											
NOTE: The four curves are given in sequence starting with the Tangential curve (Np_T grid points), then Np_D Drag coefficient points etc.																												
Total number of coefficient points are then NpT+NpD+NpL+NpM.																												
This record is used to define the aerodynamic coefficients for one cross section ID. This record may be repeated.																												
Example 1, Pipe Cross section with diameter 0.55m:																												
	GeoID	Type	H	W	npt	npd	npl	npm	Deg	Coeff																		
WINDPAR	1001	0	0.55	0.55	0	1	0	0	0.0	0.7																		
Example 2, I Cross section:																												
	GeoID	Type	H	W	npt	npd	npl	npm	Deg	Coeff																		
WINDPAR	2001	0	0.8	0.6	0	5	3	1	-180	1.0																		
									-90	2.0																		
									0	1.0																		
									90	2.0																		
									180	1.0																		
									-180	0.0																		
									0	0.0																		
									180	0.0																		
									0	0.0																		

W_Coeffs	ID Type {Data}	Unit
ID	Wind Coefficient ID, (a number) to be referred to.	
Type	Coefficient Type to define: ☐ Drag : Drag Coefficient Cd ☐ Lift : Lift Coefficient Cl ☐ Moment: Torsion Moment Cm ☐ Tang : Tangential (longitud) Ct	
Data	Actual pairs α - coefficient values.	
With this record, the user defines the Basic Aerodynamic Coefficients . This record could be repeated..		

W_Coeffs	ID Combine ID _{DRAG} ID _{LIFT} ID _{MOM}	Unit
ID	Wind Coefficient ID, (a number) to be referred to.	
Combine	Keyword indicating that the command is used to combine basic drag- lift- and moment coefficient tables info one coefficient group to be assigned to the actual finite elements.	
ID _{DRAG}	ID of the Drag Coefficient table	
ID _{LIFT}	ID of the Lift Coefficient table, etc.	
With this record, the user defines the Combined Set of Aerodynamic coefficients, which should be referred to by the Finite elements. Example: <pre> \ W_Coeffs ID keyword ID_Drag ID_lift ID_mom W_Coeffs 100 combine 101 102 103 ! Wing Profile W_Coeffs 10 combine 11 ! Pipe Profile </pre> Will create a coefficient set with ID=100 which combines the individual drag, lift and moment coefficient definitions. The next set uses only drag coefficient (for pipes). This record could be repeated.		

ElmCoeff	ID List Type ID's	Unit
ID	Wind Coefficient ID, either a combined W_Coeffs or a complete coefficient package, (see above).	
ListType	Actual Cross section to assign the wind coefficients to: ☐ Pipe : Assign Coeffs to all elements with pipe cross section ☐ Elem : Assign Coeffs to all listed elements. ☐ Mat : Assign Coeffs to all listed materials ☐ Geo : Assign Coeffs to all listed geometries ☐ Group : Assign Coeffs to all listed groups.	
ID _s	ID of the actual cross section, elements, materials etc..	
With this record, the user assigns a complete set of Aerodynamic coefficients to a series of element, which are specified through their geometry (type and/or ID). <u>Example</u> <pre> \ Coeff_ID ListType (IDs ...) ElmCoeff 10 Pipe ! Assign to all pipes ElmCoeff 1000 Wing ! Assign to all Wing sections ElmCoeff 1200 Group 10 20 30 ! Assign to group 10 20 1nd 30 </pre> This record could be repeated..		

MaxWind					Criterion	dT	EndT	Write
Parameter	Description							Default
Criterion	Criterion used to identify "worst wind state" of the actual wind field:							
	Baseshear : Base Shear is used							
	OverTurn : Overturning moment is used							
dT, EndT	The wind (defined by the WindField record) is stepped through with a time increment of dT up to time EndT. The worst time detected in the specified interval is used.							
Write	Write option: Write : The wind forces are written to file noWrite : No writing							
With this record the the user may use USFOS to identify the worst wind state to be used in a static 'pushover' analysis. The load_case no of the specified WINDFIELD record may be referred to from the CUSFOS record. <u>Example 1 :</u> <pre>' Typ dT EndT option MaxWind BaseShear 0.5 16 noWrite ' Typ lCase MaxWind WindLCase 3 ! Use Wind Field load case 3 ' l_case Type ux uy uz Z_0 z_bott Rho Power WindField 2 Z_Prof 20 0 0 100 0.0 1.225 0.2 WindField 3 Z_Prof 0 20 0 100 0.0 1.225 0.2 ' CUSFOS 10 10 1.0 1.0 Lc lfact mxld nstep minstep 1 0.5 1.0 10 0.010 ! DeadWeight 3 0.1 5.0 200 0.001 ! Max Wind forces found by USFOS</pre> The wind will be 'stepped' through the structure with a time interval of 0.5 s up to time = 16s. The wind forces at the time giving the maximum base shear are assigned to loadcase no 3, (override read-in node and element loads with this loadcase no). LoadCase no 3 is referred to as usual in the CUSFOS record. This record is given only once!								

6.3.18 Earthquake

NODEDISP I_case Node_ID dof_code [Values]						
Parameter	Description					Default
I_case	Load Case number for the prescribed displacement which is referred to on the LOADHIST record.					
Node_ID	External node number					
dof_code	Integer number defining the prescribed degrees of freedom. The dof's are specified from 1 through 6, in global coordinates: 1 : Displacement in global X-direction 2 : Displacement in global Y-direction 3 : Displacement in global Z-direction 4 : Rotation about global X-axis 5 : Rotation about global Y-axis 6 : Rotation about global Z-axis					
Values	Reference values for the prescribed displacements. 0.0 (zero) defined fixed dof. NOTE! Values should only be specified for the dof's defined in the dof_code !					

This record defines prescribed displacements. The **dof_code** is formed by the dof numbers for all prescribed degrees of freedom at the node, **written consecutively, without blanks**.

Example 1:

```
NODEDISP  3  170 12  1.0    0.0
NODEDISP  3  180 12  1.0    0.0
```

Example 2:

```
NODEDISP  4  170 12  0.707  0.707
NODEDISP  4  180 12  0.707  0.707
```

Example 3:

```
NODEDISP  5  170  3   0.5
NODEDISP  5  180  3   0.5
```

In example 1 the nodes 170 and 180 are both given a prescribed displacement of 1.0 in global X-direction, global Y displacements are fixed.

In example 2 the same two nodes are both given a displacement value of 0.707 for both X- and Y-axis, (45 deg).

In example 3 the same two nodes are both given a prescribed displacement in global Z-axis with magnitude 0.5

Note that the values are **reference values** - if input is given in *time history format*, the total displacement will be a multiple of this value and the instantaneous value of the time history assigned through the LOADHIST record. If the displacement history defined in the referred TIMEHIST is the absolute displacements, the reference values should be set = 1.0.

For movement in directions different from the global axes, the reference values are used to define the actual directions, (see example 2).

If input is given in the conventional CUSFOS format, this value will be incremented in the same manner as external loads.


Note that the NODEDISP data are given *priority above the conventional boundary conditions*, (both free and fixed dofs may become prescribed)

NODEVELO I_case Node_ID dof_code [Values]			
Parameter	Description	Default	
I_case	Load Case number for the prescribed velocity which is referred to on the LOADHIST record.		
Node_ID	External node number		
dof_code	Integer number defining the prescribed degrees of freedom. The dof's are specified from 1 through 6, in global coordinates: 1 : velocity component in global X-direction etc, see under NODEDISP		
Values	Reference values for the prescribed velocity components. 0.0 (zero) defined fixed dof. NOTE! Values should only be specified for the dof's defined in the dof_code !		

This record defines prescribed velocity. The **dof_code** is formed by the dof numbers for all prescribed degrees of freedom at the node, **written consecutively, without blanks**.


See NODEDISP for example of use.

Internally in USFOS the prescribed velocity history, (NODEVELO+TIMEHIST defines the history), is integrated to prescribed displacement history and applied as prescribed displacement. The generated history is identified on the .out file with ID = -Original_ID.

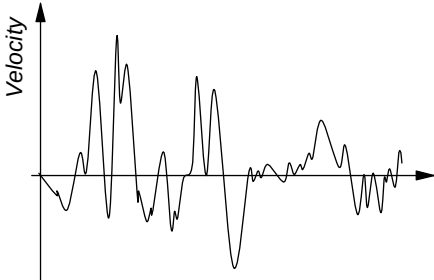

Velocity history

→

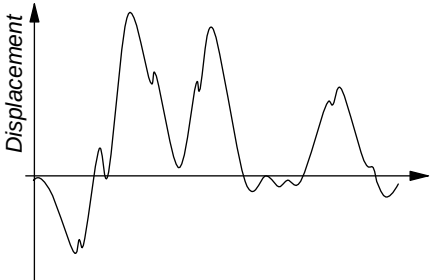

Displacement history

Note that the values are **reference values** , the total velocity will be a multiple of this value and the instantaneous value of the time history assigned through the LOADHIST record. If the velocity history defined in the referred TIMEHIST is the absolute velocity, the reference values should be set = 1.0.

For movement in directions different from the global axes, the reference values are used to define the actual directions, (see example 2, NODEDISP).


Note that the NODEVELO data are given *priority above the conventional boundary conditions*, (both free and fixed dofs may become prescribed)

NODEACC				I_case	Node_ID	dof_code	[Values]
Parameter	Description						Default
I_case	Load Case number for the prescribed accelerations which is referred to on the LOADHIST record.						
Node_ID	External node number						
dof_code	Integer number defining the prescribed degrees of freedom. The dof's are specified from 1 through 6, in global coordinates: 1 : acceleration component in global X-direction etc, see under NODEDISP						
Values	Reference values for the prescribed acceleration components. 0.0 (zero) defined fixed dof. NOTE! Values should only be specified for the dof's defined in the dof_code !						


This record defines prescribed acceleration. The **dof_code** is formed by the dof numbers for all prescribed degrees of freedom at the node, **written consecutively, without blanks**.

See NODEDISP for example of use.

Internally in USFOS the prescribed acceleration history (NODEACC+TIMEHIST defines the history) is integrated to prescribed displacement history and applied as prescribed displacement.
The generated history is identified on the .out file with ID = -Original_ID.

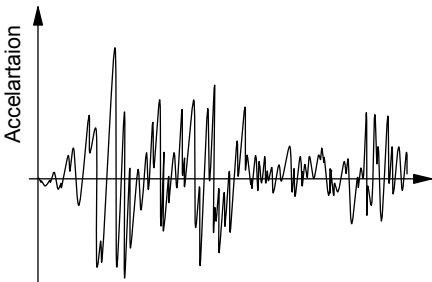

Accelartaion history

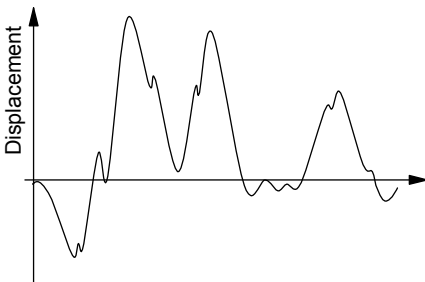

Displacement history

Note that the values are **reference values** , the total acceleration will be a multiple of this value and the instantaneous value of the time history assigned through the LOADHIST record. If the velocity history defined in the referred TIMEHIST is the absolute acceleration, the reference values should be set = 1.0.

For movement in directions different from the global axes, the reference values are used to define the actual directions, (see example 2, NODEDISP).

Note that the NODEACC data are given *priority above the conventional boundary conditions*, (both free and fixed dofs may become prescribed)

This record could be repeated.

SOILACC							
	I_case	Type	[data]	dof_code	[Values]		
Parameter	Description						Default
I_case	Load Case number for the prescribed displacement, which is referred to on the LOADHIST record.						
Type	Definition type: Type = 1 : The soil is identified by Z_top Z_bott Type = 2 : The Soil is identified by the Pile ID						
data	Depends on Type=1 or Type=2. For Type = 1: Data : Z_Top Z_Bott. (Soil Coordinate System) For Type = 2: Data : Pile ID						
dof_code	Integer number defining the prescribed degrees of freedom. The dof's are specified from 1 through 6, in global coordinates: 1 : Displacement in global X-direction 2 : Displacement in global Y-direction 3 : Displacement in global Z-direction						
Values	Reference values for the prescribed displacements. 0.0 (zero) defined fixed dof. NOTE! Values should only be specified for the dof's defined in the dof_code !						

This record defines prescribed accelerations in the soil. The **dof_code** is formed by the dof numbers for all prescribed degrees of freedom at the soil nodes, **written consecutively, without blanks**.

Example 1:

	LC	Type	z_Top	z_Bott	DOF	Val1	Val2	
SOILACC	3	1	0.0	-20.0	12	1.0	0.5	! Layer 1
SOILACC	3	1	-20.0	-50.0	12	1.5	0.5	! Layer 2
SOILACC	3	1	-50.0	-100.0	12	2.5	1.0	! Layer 3

See also examples on www.USFOS.com and release notes for USFOS version 8-5.

Note that the values are **reference values** - if input is given in *time history format*, the total acceleration will be a multiple of this value and the instantaneous value of the time history assigned through the LOADHIST record. If the displacement history defined in the referred TIMEHIST is the absolute displacements, the reference values should be set = 1.0.
For movement in directions different from the global axes, the reference values are used to define the actual directions, (see example 2).

This record could be repeated.

SOILDISP							
I_case	Type	[data]	dof_code	[Values]			
Parameter	Description						Default
I_case	Load Case number for the prescribed displacement, which is referred to on the LOADHIST record.						
Type	Definition type: Type = 1 : The soil is identified by Z_top Z_bott Type = 2 : The Soil is identified by the Pile ID						
data	Depends on Type=1 or Type=2. For Type = 1: Data : Z_Top Z_Bott. (Soil Coordinate System) For Type = 2: Data : Pile ID						
dof_code	Integer number defining the prescribed degrees of freedom. The dof's are specified from 1 through 6, in global coordinates: 1 : Displacement in global X-direction 2 : Displacement in global Y-direction 3 : Displacement in global Z-direction						
Values	Reference values for the prescribed displacements. 0.0 (zero) defined fixed dof. NOTE! Values should only be specified for the dof's defined in the dof_code !						

This record defines prescribed displacements in the soil. The **dof_code** is formed by the dof numbers for all prescribed degrees of freedom at the soil node(s), **written consecutively, without blanks**.

Example 1:

	<i>LC</i>	<i>Type</i>	<i>z_Top</i>	<i>z_Bott</i>	<i>DOF</i>	<i>Val1</i>	<i>Val2</i>
SOILDISP	3	1	0.0	-20.0	12	1.0	0.5 ! Layer 1
SOILDISP	3	1	-20.0	-50.0	12	1.5	0.5 ! Layer 2
SOILDISP	3	1	-50.0	-100.0	12	2.5	1.0 ! Layer 3

Example 2:

	<i>LC</i>	<i>Type</i>	<i>Pile_ID</i>	<i>DOF</i>	<i>Val1</i>	<i>Val2</i>
SOILDISP	3	2	1001	12	1.0	0.5 ! Subsidence of pile

See also examples on www.USFOS.com and release notes for USFOS version 8-5.

Note that the values are **reference values** - if input is given in *time history format*, the total displacement will be a multiple of this value and the instantaneous value of the time history assigned through the LOADHIST record. If the displacement history defined in the referred TIMEHIST is the absolute displacements, the reference values should be set = 1.0.
For movement in directions different from the global axes, the reference values are used to define the actual directions, (see example 2).
If input is given in the conventional CUSFOS format, this value will be incremented in the same manner as external loads.

This record could be repeated.

6.4 SESAM STRUCTURAL FILE FORMAT

This section describes the input records of the FEM structural model and loads. These records may be generated by the SESAM modules PREFRAME, WAJAC and WALOCO.

Geometry Data	GNODE GCOORD	<i>Page</i> 6.4-3
Connectivity Data	GELMNT1	6.4-4
Cross Sectional Data	GBEAMG GIORH GBOX GPIPE GELTH	6.4-6
Element Data	GECCEN GUNIVEC	6.4-11
Material Data	MGSPRNG MISOPL	6.4-12
Boundary Conditions	BNBCD BNTRCOS BELFIX	6.4-14
Load and Temperature Increments	BNLOAD BELOAD1 BGRAV BNWALO BEWALO1 BEISTE BEUSLO	6.4-17
Hydrodynamic Added Mass	BEMASS1	6.4-23
Nodes with point masses	BNMASS	6.4-24
Nodes with initial conditions	BNINCO	6.4-25
Super-element definition	AMATRIX ADMLOAD AMDSTIFF	6.4-26

RECORD IDENTIFICATOR				parameter no. 1	parameter no. 2	parameter no. 3
Parameter	Description					Default
parameter no. 1	Description of contents and default					
parameter no. 2	Description of contents and default					
parameter no. 3	Description of contents and default					
Optional box for comments, notes, exceptions etc						

The data items listed as *dummy* are set by the SESAM interface file format. They are skipped by USFOS. However, they must be present in the input data stream, or succeeding items of that record will be misinterpreted.

When input is given manually, there is no need to split input records over more lines. USFOS uses free format reading. One data record starts with the record identifier, and terminates when the next record identifier is encountered. Whether this is at the next line, or after several lines of data items is irrelevant to USFOS as long as the correct number of data items are given, and the specified order of the data items is satisfied.

6.4.1 Geometry Data

GNODE nodex nodeno		
<i>Parameter</i>	<i>Description</i>	<i>Default</i>
nodex	External node number specified by the user	
nodeno	Internal nodenumber	
This record contains the correspondence between external, user defined, node numbering and internal node numbering in USFOS This record consists of one line, and has to be repeated once for every nodal point in the structure		

GCOORD nodeno xcoord ycoord zcoord		
<i>Parameter</i>	<i>Description</i>	<i>Default</i>
nodeno	Internal node number specified by the user	
xcoord	Cartesian x-, y-, and	
ycoord	z-coordinates of node <i>nodeno</i>	
zcoord		
This record contains coordinates of each node This record consists of one line, and has to be repeated once for every nodal point in the structure		

6.4.2 Connectivity Data

The **GELMNT1** record is compulsory, and contains the internal node numbers at the element ends. This record also contains the correspondence between external, user defined, element numbers and internal element numbers.

The **GELREF1** record is compulsory and contains reference to element data.

GELMNT1		
elnox nodin1	elno (nodin2)(nodin3)(nodin4)	dummy
Parameter	Description	Default
elnox	External element number specified by the user	
elno	Internal element number	
eltyp	Element type number 15 = Beam element (2 nodes) 18 = Spring to ground (1 node) 9 = Membrane element (4 nodes)	
nodin1	Internal node number of local node 1	
nodin2	Internal node number of local node 2	
.		
.		
.		
This record defines the element topology, and contains the correspondence between external, user defined, element numbers and internal element numbering in USFOS		
This record consists of two lines, and has to be repeated once for every element in the structure		

GELREF1 elno matno dummy dummy dummy dummy dummy dummy geono dummy eccno transno eccno(1) eccno(2) eccno(3) eccno(4)		
Parameter	Description	Default
elno	Internal element number	
matno	Material number	
geono	Cross sectional geometry number. Refers to record GBEAMG, GIORH, GBOX, GPIPE or GELTH	
eccno	Eccentricity vector reference number. Refers to GECCEN > 0: eccentricity reference number = 0: no eccentricity specified = -1: eccentricity reference numbers for all nodes are specified in line 4 of this record	
transno	Reference number of local element coordinate system (record GUNIVVEC) or of local nodal coordinate system (BNTRCOS) in case of spring to ground or super element (ref AMATRIX)	
eccno(1)	Eccentricity vector reference number of node 1. Refers to record GECCEN	
eccno(2)	Eccentricity vector reference number of node 2. Refers to record GECCEN	
.		
.		
.		
This record contains references to element data This record consists of three or four lines, depending on definition of nodal eccentricities If the eccentricities at all element nodes are equal ($ECCNO \geq 0$), then line 4 of this record is omitted for those elements		

6.4.3 Cross Sectional Data

GBEAMG geono dummy area xix xiy xiz xiyx wpix wpiy wpiz shary sharz scheny schenz		
Parameter	Description	Default
geono	Geometry number referred to in GELREF1	
area	Cross sectional area	
xix	Torsional moment of inertia about the shear center	
xiy	Moment of inertia about y-axis	
xiz	Moment of inertia about z-axis	
xiyz	Product of inertia	
wpix	Plastic torsional section modulus about shear center	
wpiy	Plastic sectional modulus about y-axis	
wpiz	Plastic sectional modulus about z-axis	
shary	Shear area in direction of y-axis	
sharz	Shear area in direction of z-axis	
scheny	Location of shear center relative to y-axis	
schenz	Location of shear center relative to z-axis	
This record contains the cross sectional parameters for a general cross section. GBEAMG input is skipped if GIORH, GBOX or GPIPE is given for the same cross section This records consists of four lines		

GIORH				
	geono	hzi	ty	bt
	tt	bb	tb	sfy
	sfz	hzj	bfy	bfz


Parameter	Description	Default
geono	Geometry number referred to in GELREF1	
hzi	Height of beam	
ty	Thickness of beam web	
bt	Width of top flange	
tt	Thickness of top flange	
bb	Width of bottom flange	
tb	Thickness of bottom flange	
sfy	Shear area factor for y-axis direction. Shear area = sfy * shear area calculated by USFOS	1.0
sfz	Shear area factor for z-axis direction. Shear area = sfz * shear area calculated by USFOS	1.0
hzj	Height of beam at local node 2, NOT relevant for USFOS	
bfy	Shear buckling factor for y-axis direction	0.0
bfz	Shear buckling factor for z-axis direction	0.0

This record contains sectional geometry for an I or H type cross section
This record consists of three lines

Shear area calculated by USFOS for the local y- and z- directions:

$A_s = I \cdot t / S$, where:

I = moment of inertia, y (z) axis
t = thickness
S = static moment y (z) axis

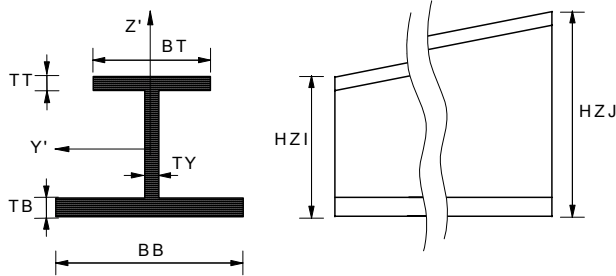

(Shear buckling effects are discussed in the USFOS Theory Manual)

GBOX geono hzi ty tb tt by sfy sfz hzj		
Parameter	Description	Default
geono	Geometry number, referred to in GELREF1	
hzi	Height of beam at local node 1	
ty	Thickness of vertical walls (webs) of box section	
tb	Thickness of bottom flange	
tt	Thickness of top flange	
by	Width of beam	
sfy	Shear area factor of y-axis. Shear area = sfy * shear area calculated by USFOS	
sfz	Shear area factor of z-axis. Shear area = sfz * shear area calculated by USFOS	
hzj	Height of beam at local node 2, not relevant to USFOS	


This record contains the cross sectional geometry of a box-type cross section

This record consists of three lines


Shear area calculated by USFOS for the local y- and z-directions:

$A_s = I * t / S$, where:

I = moment of inertia, y (z) axis
t = thickness
S = static moment, y (z) axis

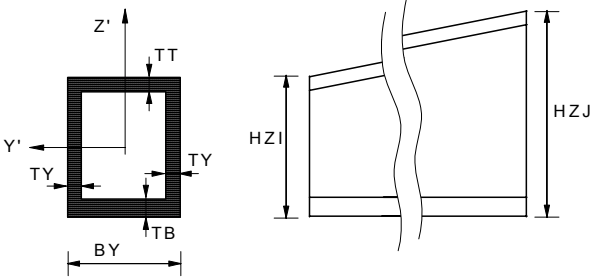

The diagram consists of two parts. The left part is a top-down view of a rectangular box section. It shows a central rectangular hole with a thick border. The vertical walls have a thickness labeled 'TY'. The top and bottom flanges have a thickness labeled 'TB'. The overall width of the box is labeled 'BY'. A coordinate system is shown with a vertical 'Z'' axis pointing upwards and a horizontal 'Y'' axis pointing to the left. Arrows indicate the thicknesses: 'TY' for the vertical walls and 'TB' for the horizontal flanges. The right part is a side view of the box section, showing its height. The height at the left end is labeled 'HZI' and the height at the right end is labeled 'HZJ'. A wavy line indicates a break in the middle of the height dimension.

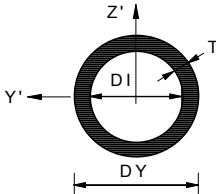GPIPE						
	geono	di	dy	t		
	sfy	sfz				
Parameter	Description					Default
geono	Geometry number, referred to in GELREF1					
di	Inner diameter of pipe					
dy	Outer diameter of pipe					
t	Thickness of pipe					
sfy	Shear area factor of y-axis. Shear area = sfy · shear area calculated by USFOS					
sfz	Shear area factor of z-axis. Shear area = sfz · shear area calculated by USFOS					
This record contains the cross sectional geometry of a pipe cross section						
This record consists of two lines						
Shear area calculated by USFOS for the local y- and z-directions:						
As = I · t/S, where:						
I = moment of inertia, y (z) axis						
t = thickness						
S = static moment, y (z) axis						
						

GELTH geono th dummy dummy		
<i>Parameter</i>	<i>Description</i>	<i>Default</i>
geono	Geometry number, referred to in GELREF1	
th	Thickness of the element	
This record contains of the plate thickness of the deck plate element		
This record consists of one line		

6.4.4 Element Data

GECCEN				eccno	ex	ey	ez
Parameter	Description						Default
eccno	Eccentricity number referred to in record GELREF1						
ex	Eccentricity vector in global coordinates. The vector points from the global node towards the local element node.						
ey							
ez							
This record contains the eccentricity vector of each nodal eccentricity. The eccentricity vector is given in global coordinates and points from the global node towards the local element node (cfr Figure 3.3) This record consists of one line							

GUNIVEC transno unix uniy uniz		
Parameter	Description	Default
transno	Unit vector number referred to in record GELREF1	
unix uniy uniz	Unit in global coordinates. The vector specifies the direction along local element z-axis	
This record consists of one line		

6.4.5 Material Data

MGSPRNG					
matno	ndof	k ₁₁	k ₂₁		
k ₃₁	k ₄₁	k ₅₁	k ₆₁		
k ₂₂	k ₃₂	k ₄₂	k ₅₂		
k ₆₂	k ₃₃	k ₄₃	k ₅₃		
k ₆₃	k ₄₄	k ₅₄	k ₆₄		
k ₅₅	k ₆₅	k ₆₆			

Parameter	Description	Default	
matno	Material number		
ndof	Number of nodal degrees of freedom (<i>ndof</i> = 6)		
k ₁₁	Elements of the spring stiffness matrix		
k ₂₁	$k = \begin{bmatrix} k_{11} & & & & & \\ & k_{21} & & & & \\ & & k_{31} & & & \\ & & & k_{33} & & \\ & & & & k_{43} & \\ & & & & & k_{45} \\ & & & & & & k_{53} & & k_{54} & & k_{55} \\ & & & & & & & k_{63} & & k_{64} & & k_{65} & & k_{66} \end{bmatrix}$		
:			
:			
k _{ij}			
.			
.			
k ₆₆			

This record defines the stiffness characteristics of linear springs to ground

Only the elements below the main diagonal are given, i.e. a symmetric stiffness matrix is assumed

The elements are referred to the global coordinate system, or to a local nodal coordinate system, if one is defined by record BNTRCOS and referenced by record GELREF1

MISOPL matno matyp dummy dummy dummy dummy dummy dummy np sig1 eps1 sig2 eps2 sign(np) eps(np)		
Parameter	Description	Default
matno	Material number	
matyp	Material type: matyp = 4: Elastoplastic with kinematic hardening matyp = 2: Nonlinear hyperelastic matyp = 0: Nonlinear hyperelastic	
dummy	Parameters generated by SESAM preprocessor with no relevance for the present material model	
np	Number of points to represent the uniaxial stress-strain (force-displacement) curve for increased loading. Note NP < 25	
sig1	Stress/force at the first point representing the stress-strain curve (force-displacement curve)	
eps1	Corresponding strain/displacement at the first point representing the stress-strain curve (force-displacement curve)	
sig2	Stress at the second point representing the curve	
eps2	Corresponding strain at the second point representing the curve	
.		
sig(np)	Stress/force at the last point representing the curve	
eps(np)	Corresponding strain/displacement at the last point representing the curve (see figure)	
With this record, the force-displacement (moment-rotation) curves for nonlinear spring element are defined		

6.4.6 Boundary Conditions

BNBCD					
	nodeno	ndof	fix1	fix2	
	fix3	fix4	fix5	fix6	
Parameter	Description				Default
nodeno	Internal node number				
ndof	Number of degrees of freedom. <i>ndof</i> = 6				
fix1	Boundary condition of relevant degrees of freedom in global degrees of freedom fix i = 0: free = 1: fixed = 4: retained degree of freedom fix1: translation in x-direction fix2: translation in y-direction fix3: translation in z-direction fix4: rotation about x-axis fix5: rotation about y-axis fix6: rotation about z-axis				
fix2					
fix3					
fix4					
fix5					
fix6					
This record specified the boundary condition of each relevant degree of freedom					
Nodes with fix = 4 are called super nodes and may only be specified in a substructure analysis, refer input record SUBSTRU					
This record consists of two lines					

BNTRCOS										
transno		t ₁₁	t ₂₁	t ₃₁						
		t ₁₂	t ₂₂	t ₃₂	t ₁₃					
		t ₂₃	t ₃₃							
Parameter	Description					Default				
transno	Transformation number referred to in GELREF1									
t ₁₁	Nine direction cosines of the rotation transformation matrix									
t ₂₁										
:										
:										
t ₃₂										
t ₃₃										
The transformation matrix T describes the transformation defined by										
$\mathbf{r}_{\text{Loc}} = \mathbf{T} \mathbf{r}_{\text{Glob}}$										
where $\mathbf{r}_{\text{Loc}}$ refers to the local coordinate system and $\mathbf{r}_{\text{Glob}}$ refers to the global coordinate system										
$\mathbf{T} = \begin{bmatrix} \cos (x_{\text{L}}, X_{\text{G}}) & \cos (x_{\text{L}}, Y_{\text{G}}) & \cos (x_{\text{L}}, Z_{\text{G}}) \\ \cos (y_{\text{L}}, X_{\text{G}}) & \cos (y_{\text{L}}, Y_{\text{G}}) & \cos (y_{\text{L}}, Z_{\text{G}}) \\ \cos (z_{\text{L}}, X_{\text{G}}) & \cos (z_{\text{L}}, Y_{\text{G}}) & \cos (z_{\text{L}}, Z_{\text{G}}) \end{bmatrix}$										
This record consists of three lines										

BELFIX				
	fixno	opt	trano	dummy
	fix1	fix2	fix3	fix4
	fix5	fix6		
<i>Parameter</i>	<i>Description</i>			<i>Default</i>
fixno	Fixation number, FIXNO is referred to from GELREF1			
opt	opt = 1 is mandatory, (either fully fixed or fully released).			
trano	trano = 0 is mandatory, (The fixation is then defined in local element coordinate system).			
fix1	Fixation Code of local X-direction. 0 : Fully Released. 1: Fully Fixed.			
fix2	Fixation Code of local Y-direction. 0 : Fully Released. 1: Fully Fixed.			
.	.			
.	.			
.	.			
This record specified internal hinge definition to be referred to from the GELREF1 record.				
This record consists of three lines.				

6.4.7 Load and Temperature Increments

The BNLOAD record defines nodal loads. The BELOAD1 record defines element line loads. The BRAV record defines gravitational loads.

BNLOAD		
llc	dummy dummy dummy	
nodeno	ndof	rload1 rload2
rload3	rload4	rload5 rload6
Parameter	Description	Default
llc	Load case number	
nodeno	Internal node number	
ndof	Number of degrees of freedom. <i>ndof</i> = 6	
rload1	Load in direction of the relevant degree of freedom in the global coordinate system	
rload2		
rload3	rload1: load in x-direction	
rload4	rload2: load in y-direction	
rload5	rload3: load in z-direction	
rload6	rload4: moment about x-axis	
	rload5: moment about y-axis	
	rload6: moment about z-axis	
This record defines nodal loads		
This record consists of three lines		
<i>Note!</i> The load is handled as conservative loading by USFOS		

BELOAD1				
llc	dummy	dummy	OPT	
elno	l1	l2	edof	
dummy	rint1(1)	rint2(1)	rint3(1)	
rint1(2)	rint2(2)	rint2(3)		


Parameter	Description	Default
llc	Load case number	
OPT	Option for reference l1/l2. OPT=0 : L1/L2 refers to dist from the ends of the flex part of the element OPT=1 : L1/L2 refers to distance from the nodes (disregarding eccs.).	
elno	Internal element number	
l1	Distance along the element from node 1 to the position where the line load starts acting	
l2	Distance along the element from node 2 to the position where the line load ends	
edof	Number of specified intensities (<i>edof</i> = 6)	
rint1(1)	Load intensities at local node 1 in global x-, y- and z-directions	
rint2(1)		
rint3(1)		
rint1(2)	Load intensities at local node 2 in global x-, y- and z-directions	
rint2(2)		
rint2(3)		

This record defines element line loads

The record may be repeated for each element, with different values for *l1* and *l2*

This record consists of four lines

Note! The load is handled as conservative loading by USFOS

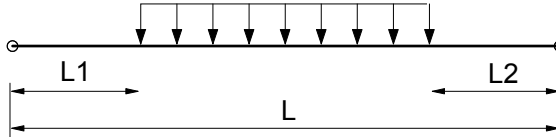

BGRAV llc dummy dummy dummy gx gy gz		
Parameter	Description	Default
llc	Load case number	
gx gy gz	Component of gravity vector global x-, y- and z-directions	
This record defines gravitational loads This record consists of two lines <i>Note!</i> The load is handled as conservative loading by USFOS		


BNWALO llc nodeno dummy ndof rload1 rload2 rload3 rload4 rload5 rload6		
Parameter	Description	Default
llc	Load case number	
nodeno	Internal node number	
ndof	Number of degrees of freedom. <i>ndof</i> = 6	
rload1 rload2 rload3 rload4 rload5 rload6	Load in direction of the relevant degree of freedom in the global coordinate system rload1: load in x-direction rload2: load in y-direction rload3: load in z-direction rload4: moment about x-axis rload5: moment about y-axis rload6: moment about z-axis	
This record defines nodal loads from wave load program This record consists of three lines <i>Note!</i> The load is handled as conservative loading by USFOS		

BEWALO1				
llc	elno	dummy n		
n	l(1)	l(2)	...	
l(n)	rint1(1)	rint2(1)	rint3(1)	
rint1(2)	rint2(2)	rint3(2)	...	
...	...	rint1(n)	rint2(n)	
rint3(n)				


Parameter	Description	Default
llc	Load case number	
elno	Internal element number	
n	Number of load points along the element	
l	Total element length	
l(1)	Distance from local node 1 to load point no. 1	
l(2)	Distance from local node 1 to load point no. 2	
:	:	
l(n)	Distance from local node 1 to load point no. n	
rint1(1)	Load intensities at load point 1 in global x-, y- and z-directions	
rint2(1)		
rint3(1)		
rint1(2)	Load intensities at load point 2 in global x-, y- and z-directions	
rint2(2)		
rint3(2)		
:		
rint1(n)	Load intensities at load point n in global x-, y- and z-directions	
rint2(n)		
rint3(n)		

This record defines line loads from wave load program

Note! The load is handled as conservative loading by USFOS

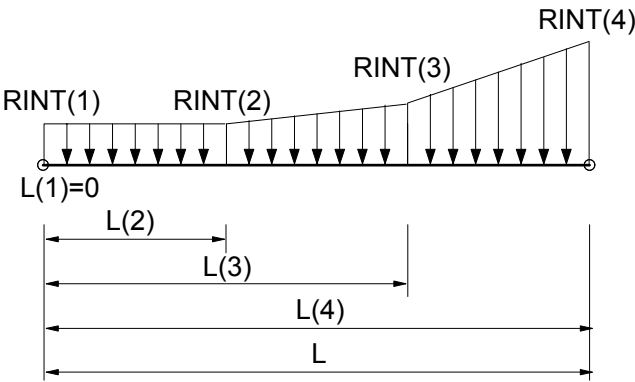

BEISTE llc dummy dummy top elno nnod dummy t1 t2 dummy dummy dummy		
Parameter	Description	Default
llc	Load case number	
top	Temperature specification option = 1: Mean element temperature specified = 2: Different temperature specified at each node	
elno	Internal element number	
nnod	Number of element nodes (<i>nnod</i> = 2)	
t1	Mean element temperature (<i>top</i> = 1) or temperature at local node 1 (<i>top</i> = 2)	
t2	Temperature at local node 2 (<i>top</i> = 2)	
This record contains specification of temperature increments without gradients over the element cross section This record consists of two or three lines		

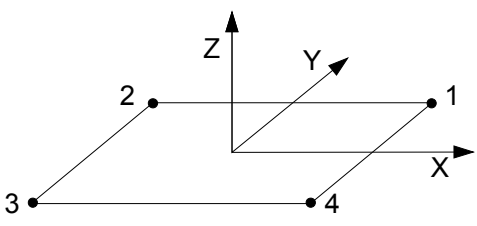BEUSLO													
		llc	lotyp		dummy dummy		dummy dummy		load3		load4		
		elno	nnod										
		load1	load2										
Parameter		Description										Default	
llc		Load case number											
lotyp		Load type (only load type -1, normal pressure, non conservative load is available)											
elno		Internal element number											
nnod		Number of nodes of the element											
load1		Intensity of pressure at local node 1. Positive pressure is directed along local element z-axis											
load2		Intensity of pressure at local node 2. Positive pressure is directed along local element z-axis											
.													
.													
.													
This record defines element surface loads													
The record may be repeated for each element													
This record consists of 3 lines													
													

6.4.8 Hydrodynamic Added Mass

BEMASS1 dummy elno dummy np c(1) c(2) c(np) am(1,1) am(2,1) am(3,1) am(1,2) am(3,np)				
Parameter	Description			Default
elno	Internal element number			
np	Number of points along beam length for which data are given			
c(i)	Distance along the element from node 1 to the position no <i>tot			
am(j,i)	Added mass intensity for the j'th DOF in the beam element local coordinate system at point no. i			
This record defines added mass data for the beam element, generated by the wave load module WAJAC This record consists of four lines NOTE! This record has been changed in connection with the 7-7 release of USFOS in order to match the new, official SESAM format.				

6.4.9 Nodes with point masses

BNMASS nodeno ndof mass1 mass2 mass3 mass4 mass5 mass6		
Parameter	Description	Default
nodeno	Internal node number	
ndof	Number of degrees of freedom. <i>ndof</i> = 6	
mass1	Mass with respect to first degree of freedom	
mass2	Mass with respect to second degree of freedom	
mass3	:	
mass4	:	
mass5	:	
mass6	:	
This record specifies the nodal point masses for each relevant degree of freedom		
This record consists of two lines		

6.4.10 Nodes with initial conditions

BNINCO					
	dummy	dtype	dummy	dummy	
	nodeno	ndof	velo1	velo2	
	velo3	velo4	velo5	velo6	
<i>Parameter</i>	<i>Description</i>				<i>Default</i>
dtype	Type of condition. Only legal value: 2 = velocity				
nodeno	Internal node number				
ndof	Number of degrees of freedom. <i>ndof</i> = 6				
velo1	Initial velocity in first degree of freedom				
velo2	Initial velocity in second degree of freedom				
velo3	:				
velo4	:				
velo5	:				
velo6	:				
This record specifies the node initial velocities for use in dynamic analysis					
This record consists of three lines					

6.4.11 Super-element definition

AMATRIX nfield matno dummy nnod nsub dummy dummy dummy matrtyp matrref matrform dummy matrtyp matrref matrform dummy		
Parameter	Description	Default
nfield	Number of data fields on this record (including this and embedded bland fields)	
matno	Material number (reference number) for this AMATRIX record, specified on the GELREF1 record	
nnod	Number of nodes on this element (must correspond to specification on GELMNT1 record)	
nsub	Number of data fields in each sub-record (= 4)	
matrtyp	Matrix/vector type indicator: 1 = stiffness matrix 4 = load vector	
matrref	Matrix reference no. pointing to the reference <i>matrref</i> on the corresponding ADMSTIFF or AMDLOAD records	
matrform	= 0 Element vectors are stored (load) = 1 Element matrix is symmetric and only upper triangle is stored. For sub-matrices on the diagonal, all terms are stored and the diagonal sub-matrices must be symmetric	
This record specifies the stiffness properties and loads for a "premade" reduced super-element. The element may have "any" number of nodes, but the stiffness matrix must be symmetric This record consists of minimum three lines		

AMDLOAD						
nfields		matrref		snodi		llc
ndof		rload1		rload2		rload3
rload4		rload5		rload6		
<i>Parameter</i>	<i>Description</i>					<i>Default</i>
nfields	Number of data fields on this record (including this)					
matrref	Reference number for this load vector record					
snodi	Supernode sequence number of super-element or internal node number of basic element					
llc	Load case number					
ndof	Number of degrees of freedom, <i>ndof</i> = 6					
rload1	Load in direction of the relevant degree of freedom					
rload2	rload1: load in x-direction					
rload3	rload2: load in y-direction					
rload4	rload3: load in z-direction					
rload5	rload4: moment about x-axis					
rload6	rload5: moment about y-axis					
	rload6: moment about z-axis					
This record defines nodal loads for a basic element or reduced super-element. Each record consist of three lines and contains the load terms of one node for one load case The loads are refereed to the global coordinate system, or to a local system if one is defined by record BNTRCOS and referred to in the GELREF1 record <i>Note!</i> The load is handled as conservative loading by USFOS						

AMDSTIFF				
nfields	matrref	snodi	snodj	
coddof	k ₁₁	k ₂₁	k ₃₁	
k ₄₁	k ₅₁	k ₆₁	k ₁₂	
k ₂₂	...	...	k ₆₆	

Parameter	Description	Default
nfields	Number of data fields on this record (including this)	
matrref	Reference number for this stiffness matrix record	
snodi/ snodj	Supernode sequence number of super-element or internal node number of basic element	
coddof	Coded form of submatrix dimension (1000*idof + jdof = 6006)	
k ₁₁ : : : k ₆₆	Submatrix stiffness terms	

This record contains stiffness terms for a nodal submatrix of an element stiffness matrix. It may be reduced super-element or basic element stiffness matrix. Each record contains the stiffness terms connecting one node *snodi* to another *snodj* or itself. The matrices are stored as sparse block data, which means that submatrices with all terms equal to zero are not stored

The stiffnesses are referred to the global coordinate system, or to a local system if one is defined by record BNTRCOS and refereed to in the GELREF1 record

6.5 UFO STRUCTURAL FILE FORMAT

UFO is special designed for being an efficient **User** friendly structural file **F**ormat in connection with modelling of framed structures.

The user may give all input on one file, or distribute the data on several files. All control parameters are specified in the Analysis Control File. Structure data can also be read from this file, but is usually given on one separate file. The specific content of these files is not important, as long as all data are present.

UFO do not use any **internal** numbers, all data are referred to **user defined external** numbers.

These files may be written with a text editor, or generated by preprocessors

	Page
Analysis identification	6.5-4
HEAD	
Nodal Data	6.5-4
Definitions:	
Node definition	NODE
Options:	
Node Loads	NODELOAD
Node Mass	NODEMASS
Local Coord at Nodes	NODTRANS
Time dependent masses	WEIGHT
Element Data	6.5-9
Definitions:	
2 Node Beam	BEAM
1 Node Spring to Ground	SPRNG2GR
4 Node Membrane Element	MEMBRANE
4 Node Shell Element	QUADSHEL
3 Node Shell Element	TRISHELL
8 Node Solid Element	SOLID8
Options:	
Distributed Load	BEAMLOAD
Normal Pressure	PRESSURE
Distributed Shell Load	SHELLLOAD
Sub Dividing Beam elements	REFINE
Unit Vector	UNITVEC
Eccentricity	ECCENT
Added Mass of Beam elements	ADDMBEAM
Initial out of straightness	BANANA

Cross Section Data

6.5-22

Pipe	PIPE
Box (RHS)	BOX
I/H Profile	IHPROFIL
Plate Thickness	PLTHICK
L-Section	LSECTION
General Beam	GENBEAM
Channel Section	CHANNEL
Rectangular Bar (Massive)	RECTBAR
Un-symmetrical I-profile	USYMMI

Material Data

6.5-26

Diagonal Linear Spring (6x6)	SPRIDIAG
Full Linear Spring (6x6)	SPRIFULL
Hyper elastic P- δ curve	HYPELAST
Elasto-Plastic P- δ curve	ELPLCURV
Elastic Isotropic	ELASTIC

Misc Data

6.5-32

Gravity Load	GRAVITY
Rotating Acceleration field	ACCFIELD

The input records is presented in a standard frame with the following format:

RECORD IDENTIFICATOR						Parameter No. 1	Parameter No. 2	Parameter No. 3	Parameter ...
Parameter		Description							
1		Description of contents and default values							
2		Description of contents and default values							
3		Description of contents and default values							
Optional box for comments, notes, exceptions etc.									

NOTE ! Parameters written in **bold** set are mandatory.
Parameters in regular set are optional, and default values will be used if omitted.

6.5.1 Analysis identification

HEAD	<		>
	<	Three lines of text identifying the analysis	>
	<		>

Character 9 to 80 from each line are stored as text strings.

This record is given only once.

6.5.2 Nodal Data

NODE	Node ID	x	y	z	ix iy iz irx iry irz
Parameter	Description				
Node ID	User defined (external) node number				
x,y,z	X, Y and Z coordinate of the node				
ix	Boundary condition code for X-direction of the actual coordinate system used at the node: 0: Free, 1: Fixed				
iy, iz, irx, iry, irz	Similar boundary condition codes for the remaining 2 translation degrees of freedom and 3 rotation degrees of freedom. NOTE ! Zeros at the end of the record may be omitted. This implies that by omitting the 6 boundary codes, the node is free in all 6 degrees of freedom.				
With this record, the user defines a nodal point to be used in the finite element analysis.					
Example 1:					
NODE 10200 1.0 0.0 4.0 0 0 0 0 0					
NODE 10200 1.0 0.0 4.0					
define both a node with ID = 10200, Coordinates (1.0, 0.0, 4.0) with all degrees of freedom free.					
Example 2:					
NODE 10300 1.30 0.0 133.0 1 1 0 0 0					
NODE 10300 1.30 0.0 133.0 1 1					
define both a node with ID = 10300, Coordinates (1.3, 0.0, 133.0) with x- and y- degrees of freedom fixed, the rest are free.					
This record may be repeated.					

NODELOAD		Load Case	Node ID	fx	fy	fz	mx	my	mz
<i>Parameter</i>	<i>Description</i>								
Load Case	Load Case Number								
Node ID	User defined (external) node number								
fx,fy,fz	Concentrated force in X-, Y- and Z-direction.								
mx,my,mz	Concentrated bending moment about X-, Y- and Z-axis.								
	NOTE ! Zeros at the end of the record may be omitted and will be treated as zero load.								

With this record, the user defines a concentrated load.

Example 1:

```
NODELOAD 3 10200 1000.0
NODELOAD 3 10200 1000.0 0.0 0.0 0.0 0.0 0.0
```

define both a force in X-direction acting at node 10200 with load case number 3.

Example 2:

```
NODELOAD 4 10500 0.0 0.0 1000.0
NODELOAD 4 10500 0.0 0.0 1000.0 0.0 0.0 0.0
```

define both a force in Z-direction acting at node 10500 with load case number 4.

This record may be repeated.

NODEMASS Node ID M_x M_y M_z M_Rx M_Ry M_Rz	
<i>Parameter</i>	<i>Description</i>
Node ID	User defined (external) node number
fx,fy,fz	Concentrated Mass in X-, Y- and Z-direction.
mx,my,mz	Concentrated Rotation Mass about X-, Y- and Z-axis.
	NOTE ! Zeros at the end of the record may be omitted and will be treated as zero mass with following exception : If only M_x is specified, M_y and M_z are assigned the same value.
With this record, the user defines a concentrated mass. Example 1: NODEMASS 10200 1000.0 defines a mass in X-, Y and Z-direction at node 10200. Example 2: NODEMASS 10500 0.0 0.0 1000.0 NODEMASS 10500 0.0 0.0 1000.0 0.0 0.0 0.0 define both a mass in Z-direction at node 10500. This record may be repeated.	

NODTRANS		Trans ID	T ₁₁	T ₁₂	T ₁₃
			T ₂₁	T ₂₂	T ₂₃
			T ₃₁	T ₃₂	T ₃₃
Parameter	Description				
Trans ID	User defined (external) node transformation number				
T ₁₁ - T ₃₃	The 9 terms in the 3x3 Transformation matrix T .				
With this record, the user defines a rotation transformation matrix to be used to define skew boundary conditions at nodes or defining local coordinate system for the 1 node spring to ground.					
This record may be repeated.					

LocNMass	RefType	NodeID	ElemID	Unit
RefType	Reference Type = "Node"			
NodeID	Actual node (with a concentrated mass).			
ElemID	The Concentrated mass' properties are referred to the Element's local coordinate system			

With this record, the user defines that the concentrated (nodal) masses are referred to a given element's local coordinate system.


Example:

```
\
LocNMass      Type      NodeID      ElemID
              Node      101         22

\
NodeID        X      Y      Z      rX      rY      rZ
NodeMass      101      0      0      0      1E4      0      0
```

The rotation mass with value 10.000 kgm² will refer to element 22's local system, i.e, the mass becomes a local torsion mass of element 22.

This option is typically used in connection with modelling of rotating structures, where the properties should follow the structure's large displacements and rotations.

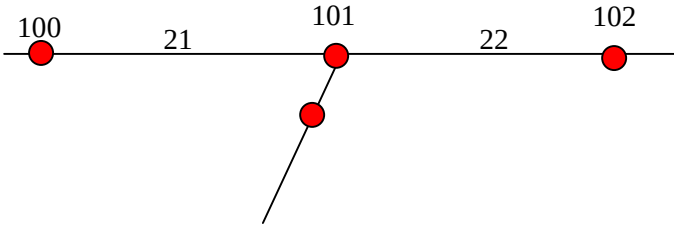

This record could be repeated.

WEIGHT	KeyWord	Value	ListType	(ID_List)
Parameter	Description			
KeyWord	Actual keywords: Concentrated : Specification of concentrated mass. History : Specification of time history to control mass			
Value	If "Concentrated" : Value is actual mass [kg] If "History" : Value is actual time history ID controlling mass			
ListType	How to define actual nodes. At present only "Node" is available.			
ID_List	Node ID(s) to be given actual mass / history			

With this record, the user defines a concentrated mass, assigned to one or more nodes, which could vary as a function of time.

Example:

'	KeyWord	Value	ListTyp	IDs
Weight	Concentrated	5000	Node	1 3
'				
'	KeyWord	HistID	ListTyp	IDs
Weight	History	2	Node	1
Weight	History	3	Node	3

..defines a concentrated mass of 5000 kg in nodes 1 and 3. The masses are controlled in time by individual time histories: Node 1 mass follows history no 2, while node 3 mass is changed according to time history 3.

See examples on www.usfos.com and release notes for USFOS 8-5.

This record may be repeated.

S

6.5.3 Element Data

BEAM	Elem ID	Node1	Node2	Material	Geom	L_Coor	Ecc1	Ecc2
Parameter	Description							
Elem ID	User defined (external) element number							
Node1	Node 1 of the beam is connected to the user defined (external) node number.							
Node2	Node 2 of the beam is connected to the user defined (external) node number.							
Material	User defined material number defining the material properties of the element							
Geom	User defined geometry number defining the geometry of the element							
L_Coor	User defined unit vector number defining the local coord. system of the element. If omitted, a default local coordinate system will be used, (local zx-plane is parallel with global zx-plane except for vertical members which have the local zx-plane parallel with the global xy-plane).							
Ecc1	Node 1 of the beam has an eccentricity defined by user defined Ecc1.							
Ecc2	Node 2 of the beam has an eccentricity defined by user defined Ecc2.							
NOTE ! Zeros at the end of the record may be omitted.								

With this record, the user defines a beam element to be used in the finite element analysis.

Example 1:

BEAM 100200 100 200 1 17 4

defines a beam element with ID = 100200, connected to the two nodes with ID = 100 and 200. Material with ID = 1 defines the material properties and geometry with ID = 17 defines the cross section. The local coordinate system is defined by the unit vector with ID=4. No eccentricities.

Example 2:

BEAM 100200 100 200 1 17 4 33 34

defines the beam in Example 1 with following difference:

End 1 of the beam has an eccentricity defined by an eccentricity vector with ID = 33.

End 2 of the beam has an eccentricity defined by an eccentricity vector with ID = 34.

This record may be repeated.

SPRNG2GR		Elem ID	Node	Material	L_Coor	Ecc
Parameter	Description					
Elem ID	User defined (external) element number of the spring to ground.					
Node	The spring is connected to the user defined (external) node number.					
Material	User defined material number defining the spring characteristic.					
L_Coor	User defined transformation matrix number defining the local coordinate system of the spring. If omitted, local coordinate system and global system are equal.					
Ecc	The spring to ground has an eccentricity defined by user defined Ecc.					
NOTE ! Zeros at the end of the record may be omitted.						

With this record, the user defines a 1 node spring to ground element to be used in the finite element analysis.

Example 1:

SPRNG2GR 1020 85 1020

defines a spring to ground element with ID = 1020, connected to the node with ID = 85. The spring characteristic is defined by a material with ID = 1020. The local coordinate system is parallel to the global system, and no eccentricity is defined.

Example 2:

SPRNG2GR 1020 85 1020 200 33

defines the spring in Example 1 with following difference:

The local coordinate system of the spring is defined by the *NODTRANS* record with ID = 200. The spring has an eccentricity defined by an eccentricity vector with ID = 33.

This record may be repeated.

MEMBRANE													Elem ID	nod1	nod2	nod3	nod4	mat	geom	e1	e2	e3	e4
Parameter		Description																					
Elem ID		User defined (external) element number																					
nod1		Node 1 of the membrane is connected to the user defined (external) nod1.																					
nod2		Node 2 of the membrane is connected to the user defined (external) nod2.																					
nod3		Node 3 of the membrane is connected to the user defined (external) nod3.																					
nod4		Node 4 of the membrane is connected to the user defined (external) nod4.																					
mat		User defined material number defining the material properties of the element																					
geom		User defined geometry number defining the thickness of the element																					
e1		Node 1 of the membrane has an eccentricity defined by user defined e1.																					
e2		Node 2 of the membrane has an eccentricity defined by user defined e2.																					
e3		Node 3 of the membrane has an eccentricity defined by user defined e3.																					
e4		Node 4 of the membrane has an eccentricity defined by user defined e4.																					
		NOTE ! Zeros at the end of the record may be omitted.																					
With this record, the user defines a membrane element to be used in the finite element analysis.																							
Example 1:																							
MEMBRANE 1234 1 2 3 4 100 88																							
defines a 4 node membrane element with ID = 1234, connected to the four nodes with ID = 1, 2, 3 and 4. Material with ID = 100 defines the material properties and geometry with ID = 88 defines the thickness.																							
No eccentricities.																							
This record may be repeated.																							

QUADSHEL														Elem ID	nod1	nod2	nod3	nod4	mat	geom	e1	e2	e3	e4
Parameter		Description																						
Elem ID		User defined (external) element number																						
nod1		Node 1 of the shell is connected to the user defined (external) nod1.																						
nod2		Node 2 of the shell is connected to the user defined (external) nod2.																						
nod3		Node 3 of the shell is connected to the user defined (external) nod3.																						
nod4		Node 4 of the shell is connected to the user defined (external) nod4.																						
mat		User defined material number defining the material properties of the element																						
geom		User defined geometry number defining the thickness of the element																						
e1		Node 1 of the shell has an eccentricity defined by user defined e1.																						
e2		Node 2 of the shell has an eccentricity defined by user defined e2.																						
e3		Node 3 of the shell has an eccentricity defined by user defined e3.																						
e4		Node 4 of the shell has an eccentricity defined by user defined e4.																						
		NOTE ! Zeros at the end of the record may be omitted.																						
With this record, the user defines a 4 node quadrilateral shell element to be used in the finite element analysis.																								
Example 1:																								
QUADSHEL 1234 1 2 3 4 100 88 100																								
defines a 4 node shell element with ID = 1234, connected to the four nodes with ID = 1, 2, 3 and 4. Material with ID = 100 defines the material properties and geometry with ID = 88 defines the thickness.																								
Node 1 of the shell has an eccentricity defined by Ecc. vector with ID = 100. The other 3 nodes have no eccentricity.																								
This record may be repeated.																								

TRISHELL											Elem ID	nod1	nod2	nod3	mat	geom	e1	e2	e3
Parameter		Description																	
Elem ID		User defined (external) element number																	
nod1		Node 1 of the shell is connected to the user defined (external) nod1.																	
nod2		Node 2 of the shell is connected to the user defined (external) nod2.																	
nod3		Node 3 of the shell is connected to the user defined (external) nod3.																	
mat		User defined material number defining the material properties of the element																	
geom		User defined geometry number defining the thickness of the element																	
e1		Node 1 of the shell has an eccentricity defined by user defined e1.																	
e2		Node 2 of the shell has an eccentricity defined by user defined e2.																	
e3		Node 3 of the shell has an eccentricity defined by user defined e3.																	
		NOTE ! Zeros at the end of the record may be omitted.																	
With this record, the user defines a 3 node triangular shell element to be used in the finite element analysis.																			
Example 1:																			
TRISHELL 123 10 20 30 100 88																			
defines a 3 node shell element with ID = 123, connected to the three nodes with ID = 10, 20 and 30.																			
Material with ID = 100 defines the material properties and geometry with ID = 88 defines the thickness.																			
No eccentricities.																			
This record may be repeated.																			

SOLID8 Elem ID n1 n2 n3 n4 n5 n6 n7 n8 mat											
<i>Parameter</i>		<i>Description</i>									
Elem ID		User defined (external) element number									
n1-n8		Node 1-8 of the solid-element is connected to the user defined (external) nodes.									
mat		User defined material number defining the material properties of the element									
With this record, the user defines a 8 node hexahedron solid element to be used in the finite element analysis.											
NOTE: Not implemented in USFOS											
This record may be repeated.											

BEAMLOAD Load Case		Elem ID	qx1	qy1	qz1	qx2	qy2	qz2
Parameter	Description							
Load Case	Load Case Number							
Elem ID	User defined (external) element number, (beam element)							
qx,qy,qz ₁	Intensity in X-, Y- and Z-direction at end 1 of the beam, (Global direction).							
qx,qy,qz ₂	Intensity in X-, Y- and Z-direction at end 2 of the beam, (Global direction). If end 2 intensities are omitted, end 1 intensities are used, i.e. uniform distributed load.							
	NOTE ! Zeros at the end of the record may be omitted and will be treated as zero load.							
With this record, the user defines a distributed beam element load.								
Example 1:								
BEAMLOAD 5 1020 1000.0								
BEAMLOAD 5 1020 1000.0 0.0 0.0								
BEAMLOAD 5 1020 1000.0 0.0 0.0 1000.0 0.0 0.0								
define all a uniform distributed load with intensity 1000 in global X-direction acting at element 1020 with load case number 5.								
Example 2:								
BEAMLOAD 5 1021 0.0 1000.0 0.0 0.0 2000.0								
BEAMLOAD 5 1021 0.0 1000.0 0.0 0.0 2000.0 0.0								
define both a distributed load with intensity 1000 in global Y-direction at end 1 of element 1021 and intensity 2000 at end 2 of the element. The load case number is 5.								
This record may be repeated.								

PRESSURE		Load Case	Elem ID	p1	p2	p3	p4
Parameter	Description						
Load Case	Load Case Number						
Elem ID	User defined (external) element number, (2-D element)						
p1-p4	Normal pressure intensity at node 1-4 of the element. NOTE ! If only p1 is specified, p2-p4 are given the same intensity, i.e constant pressure over the entire element surface.						
With this record, the user defines a normal (<i>non conservative</i>) pressure load.							
Example 1: PRESSURE 2 1234 100 PRESSURE 2 1234 100 100 100 100 define both a constant normal pressure with intensity 100 acting at element 1234 with load case number 2.							
Example 2: PRESSURE 4 1234 100 200 300 400 defines a normal pressure with intensity 100 at node 1, 200 at node 2, etc. of element 1234. The load case number is 4.							
This record may be repeated.							

SHELLOAD Load Case qx qy qz <List Type> [Data]	
Parameter	Description
Load Case	Load Case Number
qx,qy,qz	Intensity in X-, Y- and Z-direction, (Global direction).
<List Type>	Definition of the ID list (next parameter(s)), two different list types are available: <i>Element</i> : The actual shell load is assigned to the elements given under [Data] <i>Material</i> : The actual shell load is assigned to shell elements with material ID's given in [Data]
[Data]	List of Element ID's (if type=element) or Material ID's (if type=material) NOTE! : No ID's specified has same meaning as specifying <i>all</i> actual ID's
With this record, the user defines a distributed (<i>conservative</i>) shell element load referred to Global coordinate system. Example 1: SHELLOAD 5 0.0 0.0 -1000.0 <i>Element</i> 1020 2020 3030 Defines a uniform distributed load (load case number 5) with intensity -1000 [N/m²] in global Z-direction for elements 1020, 2020 and 3020. Example 2: SHELLOAD 3 0.0 0.0 -2200.0 <i>Material</i> 245 355 Defines a uniform distributed load (load case number 3) with intensity -2200 [N/m²] in global Z-direction for all shell elements referred to material ID's 245 or 355. Example 3: SHELLOAD 4 0.0 0.0 -2000.0 <i>Element</i> SHELLOAD 4 0.0 0.0 -1000.0 <i>Element</i> 1020 2020 3030 Defines a uniform distributed load (load case number 4) with intensity -2000 [N/m²] in global Z-direction for all shell elements in the model, except for the elements 1020, 2020 and 3020, which get an intensity of -1000. This record may be repeated.	

SHELPRES	Load Case	LoTyp	Pressure	<List Type> [Data]
<i>Parameter</i>	<i>Description</i>			
Load Case	Load Case Number			
LoType	LoadType (=Def).			
Pressure	Actual Pressure (Positive value acts in the direction of local Z-axis of the elam)			
<List Type>	Definition of the ID list (next parameter(s)), two different list types are available: <i>Element</i> : The actual shell load is assigned to the elements given under [Data] <i>Material</i> : The actual shell load is assigned to shell elements with material ID's given in [Data]			
[Data]	List of Element ID's (if type=element) or Material ID's (if type=material) NOTE! : No ID's specified has same meaning as specifying <i>all</i> actual ID's			

With this record, the user defines a distributed (*conservative*) shell element load referred to *Local* coordinate system.

Example 1:
SHELPRES 5 Def -1000.0 *Element* 1020 2020 3030
Defines a pressure of -1000 [N/m²] in local Z-direction for elements 1020, 2020 and 3020.

Example 2:
SHELPRES 3 Def -2200.0 *Material* 245 355
Defines a pressure (load case number 3) of -2200 [N/m²] in local Z-direction for all shell elements referred to material ID's 245 or 355.

Example 3:
SHELPRES 4 Def -2000.0 *Element*
SHELPRES 4 Def -1000.0 *Element* 1020 2020 3030
Defines a pressure (load case number 4) with intensity -2000 [N/m²] in local Z-direction for all shell elements in the model, except for the elements 1020, 2020 and 3020, which get an intensity of -1000.

This record may be repeated.

REFINE		N_divide	Elem 1	Elem 2	Elem 3	
Parameter	Description					
N_divide	Each of the specified beam elements should be divided into 'N_divide' elements.					
Elem 1,...	User defined (external) element numbers of the elements to be refined.					
NOTE ! 1: If no elements are specified, all beam elements are refined as specified.						
2: If an element is defined with initial deformations , (GIMPER, GELIMP), the generated nodes between the original beam ends will follow the actual imperfection curve.						
With this record, the user specifies elements to be sub-divided.						
Example 1:						
REFINE 4 1020 1030 1040						
REFINE 10 1050						
defines that elements 1020, 1030 and 1040 should be divided into 4 elements and element 1050 into 10.						
Example 2:						
REFINE 3						
REFINE 8 1050						
defines that all beam elements in the model should be divided into 3 elements except element 1050 which should be divided into 8.						
This record may be repeated.						

UNITVEC		Trans ID	unix	uniy	uniz
<i>Parameter</i>	<i>Description</i>				
Trans ID	Unit vector number (external) referred to in f.inst record *BEAM*.				
unix uniy uniz	Unit in global coordinates. The vector specifies the direction along local element z-axis.				
With this record, the user specifies a unit vector to be used in connection with f.inst. defining local coordinate system of beam elements.					
This record may be repeated.					

ECCENT		Ecc ID	ex	ey	ez
Parameter	Description				
Ecc ID	Eccentricity number (external) referred to in f.inst record *BEAM*.				
ex ey ez	Eccentricity vector in global coordinates. The vector points from the global node towards the local element node.				
With this record, the user specifies an eccentricity vector.					
This record may be repeated.					

ADDMBEAM mx my mz Elem_1 ID Elem_2 ID	
Parameter	Description
mx	Added mass intensity of the local X-direction of the beam element.
my	Added mass intensity of the local Y-direction of the beam element.
mz	Added mass intensity of the local Z-direction of the beam element.
Elem_1 ID	User defined (external) element number 1, (beam element)
Elem_2 ID	User defined (external) element number 2
.	.
.	.
	NOTE ! If no elements are specified, all beam elements are specified with the actual added mass.
With this record, the user defines added mass data for beam elements. Example 1: ADDMBEAM 0 1000 1000 defines added mass in X-direction = 0.0, Y-and Z direction : 1000 applied on all beam elements. This record may be repeated.	

BANANA Offset Angle	
Parameter	Description
Offset	Maximum offset divided by element length. (default = 0.0015)
Angle	Orientation of offset. Specified in degrees counter-clockwise from the local element z-axis, (default = 0°)
	NOTE ! If no parameters are defined, all beam elements will get an initial out of straightness of 0.15%.
With this record, the user defines the out of straightness of the beam elements. NOTE ! For physical members divided into more than one beam element, the coordinates of the nodes along the physical member are moved according to the specified offset and orientation. The updated coordinates are printed on the .out file. This record is given once!	

6.5.4 Cross Section Data

PIPE	Geom ID	D _o	T	Shear_Y	Shear_Z	D ₂
Parameter	Description					
Geom ID	User defined (external) geometry number					
D _o	Outer Diameter of the pipe.					
T	Wall thickness of the pipe.					
Shear_Y	Shear area factor of Y-axis. Shear area = Shear_Y * Calculated shear area. Shear area factor of Z-axis. Shear area = Shear_Z * Calculated shear area If Shear_Y and Shear_Z are omitted or equal to zero, Shear_Y and Shear_Z are both set equal to 1.0.					
Shear_Z						
D ₂	Outer Diameter at end 2 of element. If Omitted, end 2 gets same diameter as end 1.					

With this record, the user defines a pipe cross section to be used in the finite element analysis.

Example 1:

PIPE 45025 0.450 0.025

defines a pipe identified by the ID: 45025 with outer diameter = 0.45 and wall thickness = 0.025. The shear area is not scaled, (calculated shear area is used directly).

Example 2:

	ID	Do	T	ShY	ShZ	D2
PIPE	45025	0.450	0.025	1	1	0.250

defines a pipe identified by the ID: 45025 with outer diameter = 0.45 and wall thickness = 0.025. The shear area is not scaled, (calculated shear area is used directly). End 2 of all elements referring to this cross section get diameter =0.250.

This record may be repeated.

BOX	Geom ID	H	T_side	T_bott	T_top	Width	Shear_Y	Shear_Z
Parameter	Description							
Geom ID	User defined (external) geometry number							
H	Height of the profile.							
T_side	Thickness of the side walls of the RHS-profile.							
T_bott	Thickness of the bottom "flange" of the profile.							
T_top	Thickness of the top "flange" of the profile.							
Width	Width of the box profile.							
Shear_Y	Shear area factor of Y-axis. Shear area = Shear_Y * Calculated shear area. Shear area factor of Z-axis. Shear area = Shear_Z * Calculated shear area If Shear_Y and Shear_Z are omitted or equal to zero, Shear_Y and Shear_Z are both set equal to 1.0.							
Shear_Z								
With this record, the user defines a rectangular hollow cross section to be used in the finite element analysis.								
This record may be repeated.								

IHPROFIL											Geom ID	H	T_web	W_top	T_top	W_bott	T_bott	Shear_Y	Shear_Z
Parameter		Description																	
Geom ID		User defined (external) geometry number																	
H		Height of the profile.																	
T_web		Thickness of the web.																	
W_top		Width of the top flange																	
T_top		Thickness of the top flange																	
W_bott		Width of the bottom flange																	
T_bott		Thickness of the bottom flange																	
Shear_Y		Shear area factor of Y-axis. Shear area = Shear_Y * Calculated shear area. Shear area factor of Z-axis. Shear area = Shear_Z * Calculated shear area If Shear_Y and Shear_Z are omitted or equal to zero, Shear_Y and Shear_Z are both set equal to 1.0.																	
Shear_Z																			
With this record, the user defines a I/H profile to be used in the finite element analysis.																			
This record may be repeated.																			

LSECTION	Geom ID	H	T_side	Width	T_bott	I_symm
<i>Parameter</i>	<i>Description</i>					
Geom ID	User defined (external) geometry number					
H	Height of the profile.					
T_side	Thickness of the vertical part.					
Width	Width of the profile					
T_bott	Thickness of the horizontal part of the profile					
I_symm	Symmetry switch: 0 or omitted : "opposite L" 1 : L					
NOTE ! If thickness of horizontal part is omitted, thickness for the vertical part is used. If both width and thickness of the horizontal part are omitted, the width is set equal to the height and the thickness for the vertical part is used.						

With this record, the user defines an open angle section to be used in the finite element analysis.

Example 1 :

```
LSECTION 15015 0.150 0.015
```

defines a regular angle with thickness 0.015 and width = height = 0.150

This record may be repeated.

GENBEAM	Geom ID	Area	It	Iy	Iz	Wpx	Wpy	Wpz	Shy	Shz
Parameter	Description									
Geom ID	User defined (external) geometry number									
Area	Cross sectional area									
It	Torsion moment of inertia									
Iy	Moment of inertia about y-axis									
Iz	Moment of inertia about z-axis									
Wpx	Plastic torsional section modulus									
Wpy	Plastic sectional modulus about y-axis									
Wpz	Plastic sectional modulus about z-axis									
Shy	Shear area in direction of y-axis									
Shz	Shear area in direction of z-axis									
With this record, the user defines a general cross section to be used in the finite element analysis.										
This record may be repeated.										

6.5.5 Material Data

SPRIDIAG	Mat ID	S ₁₁	S ₂₂	S ₃₃	S ₄₄	S ₅₅	S ₆₆
Parameter	Description						
Mat ID	User defined (external) material number						
S ₁₁ - S ₆₆	Diagonal terms of the linear 6x6 spring to ground stiffness matrix						
	NOTE ! Zeros at the end of the record may be omitted.						
With this record, the user defines a diagonal spring to ground stiffness matrix to be used in the finite element analysis.							
Example 1:							
SPRIDIAG 33 1.0E4							
Defines a spring to ground stiffness identified by the ID: 33 with stiffness 1.0E4 in global X-direction. The 5 omitted diagonal terms are all set equal to zero							
This record may be repeated.							

SPRIFULL		Mat ID	S ₁₁	S ₁₂	S ₁₃	S ₁₄	S ₁₅	S ₁₆
			S ₂₁	S ₂₂	S ₂₃	S ₂₄	S ₂₅	S ₂₆
								
			S ₆₁	S ₆₂	S ₆₃	S ₆₄	S ₆₅	S ₆₆
Parameter	Description							
Mat ID	User defined (external) material number							
S ₁₁ - S ₆₆	36 terms of the linear 6x6 spring to ground stiffness matrix							
	NOTE ! All 36 stiffness terms must be given.							
With this record, the user defines a full spring to ground stiffness matrix to be used in the finite element analysis.								
This record may be repeated.								

HYPELAST		Mat ID	$P_1 \delta_1$	$P_2 \delta_2 \dots$	$P_n \delta_n$
Parameter	Description				
Mat ID	User defined (external) material number				
$P_1 \delta_1$	Definition of the first point of the force/displacement curve				
$P_2 \delta_2$	Definition of the second point of the force/displacement curve				
$P_n \delta_n$	Definition of the last point of the force/displacement curve				
NOTE ! Only points in 1. and 3. quadrant are legal, and the first point defines the 'bottom left' end of the curve. Max 25 points available.					
With this record, the user defines a hyperelastic P - δ curve to be used in connection with definition of a nonlinear spring matrix.					
Example 1:					
HYPELAST 444 -1200 -1.00 -1000 -0.01 1000 0.01 1200 1.00					
defines a hyperelastic P - δ curve by 4 discrete points identified by the material number 444.					
This record may be repeated.					

ELPLCURV Mat ID P ₁ δ ₁ P ₂ δ ₂ ... P _n δ _n	
Parameter	Description
Mat ID	User defined (external) material number
P ₁ δ ₁	Definition of the first point of the force/displacement curve
P ₂ δ ₂	Definition of the second point of the force/displacement curve
P _n δ _n	Definition of the last point of the force/displacement curve
	NOTE ! Only points in 1. and 3. quadrant are legal, and the first point defines the 'bottom left' end of the curve. Max 25 points available.
With this record, the user defines an elastoplastic P-δ curve to be used in connection with definition of a nonlinear spring matrix. Example 1: <pre> ELPLCURV 555 -1200 -1.00 -1000 -0.01 1000 0.01 1200 1.00 </pre> defines an elastoplastic P-δ curve by 4 discrete points identified by the material number 555. This record may be repeated.	



	Otherwise grout density may be used. Grout is an <i>attribute</i> to elements; i.e. the elements are “filled with grout”. (no change in the normal input) Commenting out the Grouted command gives the normal, steel beam with no grout.	
For tubular members with internal grout the material is referred to using the command: <pre>Grouted <MatID> Elem Elem1 Elem2 ... Grouted <MatID> Mat Mat1 Mat2 ... Grouted <MatID> Geo Geo1 Geo2 ...</pre> Note: It is recommended to model grouted members with two beam elements (use for example the REFINE command). Modeling with <u>one beam element</u> may give a discontinuous force-bending moment interaction history at member mid span when a plastic hinge is introduced. <i>This record may be repeated</i>		

6.5.6 Misc Data

GRAVITY		Load Case	Ax	Ay	Az
<i>Parameter</i>	<i>Description</i>				
Load Case	Load Case Number				
Ax	Acceleration field in global X-direction				
Ay	Acceleration field in global Y-direction				
Az	Acceleration field in global Z-direction				
		NOTE ! Zeros at the end of the record may be omitted and will be treated as zero acceleration.			
With this record, the user defines a Translation Acceleration Field.					
Example 1:					
GRAVITY 1 0.0 0.0 -9.81					
defines an acceleration field of 9.81 in negative Z-direction. The load case number is 1.					
This record may be repeated.					

2010-01-01

6.5.7 UFO Examples

Zayas Frame

The plane frame described in the figures below consists of 13 nodes and 23 beam elements.

A concentrated force is acting at node 10 in positive X-direction in addition to the gravity load.

All nodes are free except the two bottom nodes, 120 and 130.

The frame consists of pipes and one I/H profile.

The structure is described in UFO-format at the next page.

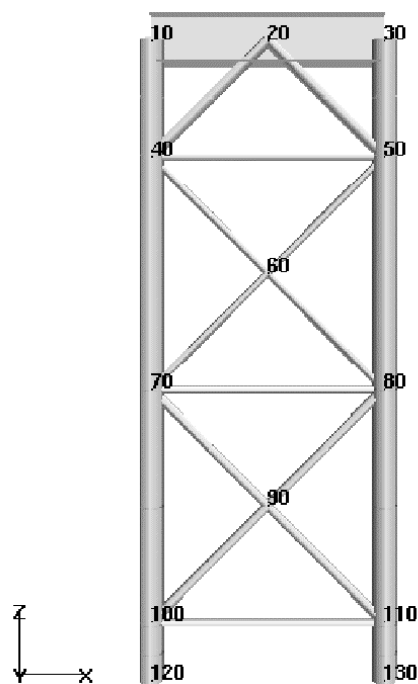


Figure 6.2 Node Numbers

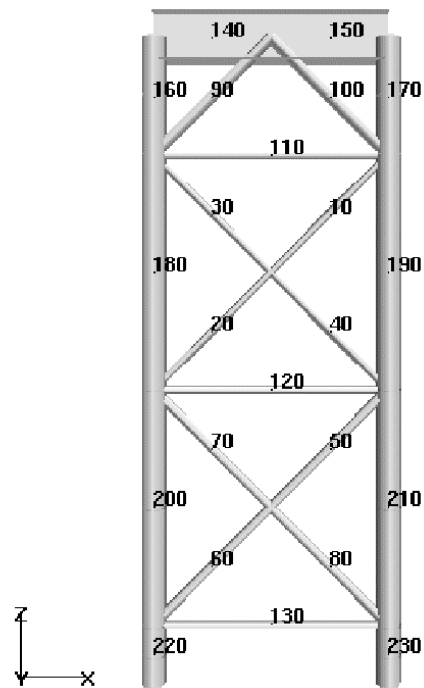


Figure 6.3 Element Numbers

UFO input file describing the Zaya's Frame:

```

HEAD          Z A Y A S   F R A M E
              described in
              U F O - Format

```

```

N O D E

```

	Node ID	X	Y	Z	Boundary code
NODE	10	.000	.000	8.382	
NODE	20	1.524	.000	8.382	
NODE	30	3.048	.000	8.382	
NODE	40	.000	.000	6.858	
NODE	50	3.048	.000	6.858	
NODE	60	1.524	.000	5.334	
NODE	70	.000	.000	3.810	
NODE	80	3.048	.000	3.810	
NODE	90	1.524	.000	2.286	
NODE	100	.000	.000	.762	
NODE	110	3.048	.000	.762	
NODE	120	.000	.000	.000	1 1 1 1 0 1
NODE	130	3.048	.000	.000	1 1 1 1 0 1

```

E L E M E N T

```

	Elem ID	np1	np2	material	geom	lcoor	ecc1	ecc2
BEAM	10	60	50	1	4	1		
BEAM	20	70	60	1	4	1		
BEAM	30	40	60	1	4	2		
BEAM	40	60	80	1	4	2		
BEAM	50	90	80	1	3	1		
BEAM	60	100	90	1	3	1		
BEAM	70	70	90	1	3	2		
BEAM	80	90	110	1	3	2		
BEAM	90	40	20	1	2	1		
BEAM	100	20	50	1	2	2		
BEAM	110	40	50	1	4	3		
BEAM	120	70	80	1	4	3		
BEAM	130	100	110	1	4	3		
BEAM	140	10	20	3	5	3		
BEAM	150	20	30	3	5	3		
BEAM	160	10	40	2	1	4		
BEAM	170	30	50	2	1	4		
BEAM	180	40	70	2	1	4		
BEAM	190	50	80	2	1	4		
BEAM	200	70	100	2	1	4		
BEAM	210	80	110	2	1	4		
BEAM	220	100	120	2	1	4		
BEAM	230	110	130	2	1	4		

```

G E O M E T R Y

```

	Geom ID	Do	Thick
PIPE	1	0.32385	0.007137
PIPE	2	0.15240	0.003175
PIPE	3	0.12700	0.003048
PIPE	4	0.10160	0.002108

	Geom ID	H	T-web	W-top	T-top	W-bot	T-bot	Sh_y	Sh_z
IHPROFIL	5	1.40	0.027	1.22	0.050	1.22	0.050		

	Loc-Coo	dx	dy	dz
UNITVEC	1	-.707	.000	.707
UNITVEC	2	.707	.000	.707
UNITVEC	3	.000	.000	1.000
UNITVEC	4	.000	1.000	.000

```

L O A D

```

	Load Case	Node ID	Fx	Fy	Fz
NODELOAD	1	10	4.00E+04	0	0

	Load Case	Acc_X	Acc_Y	Acc_Z
GRAVITY	5	0	0	-9.81

